

## ECONOLITE ASC/3 OVERLAP PROGRAMMING DETAIL

CONTROLLER SUBMENU		OVERLAP A Select Vehicle Overlap Type (PPLT FYA)
IMING PLANS EHICLE OVERLAPS EH/PED OVERLAPS JAR MIN TIME	5. START/FLASH 6. OPTION DATA 7. PRE-TIMED 8. PHASE RECALL	TMG VEH OVLP [A] TYPE: PPLT FYA   PROTECTED PHASE (LEFT TURN)
PRESS KEYS 1.	.8 TO SELECT	
		Toggle TWICE Then ENTER

