


EDI MODEL 2018ECLIP-NC CONFLICT MONITOR

PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

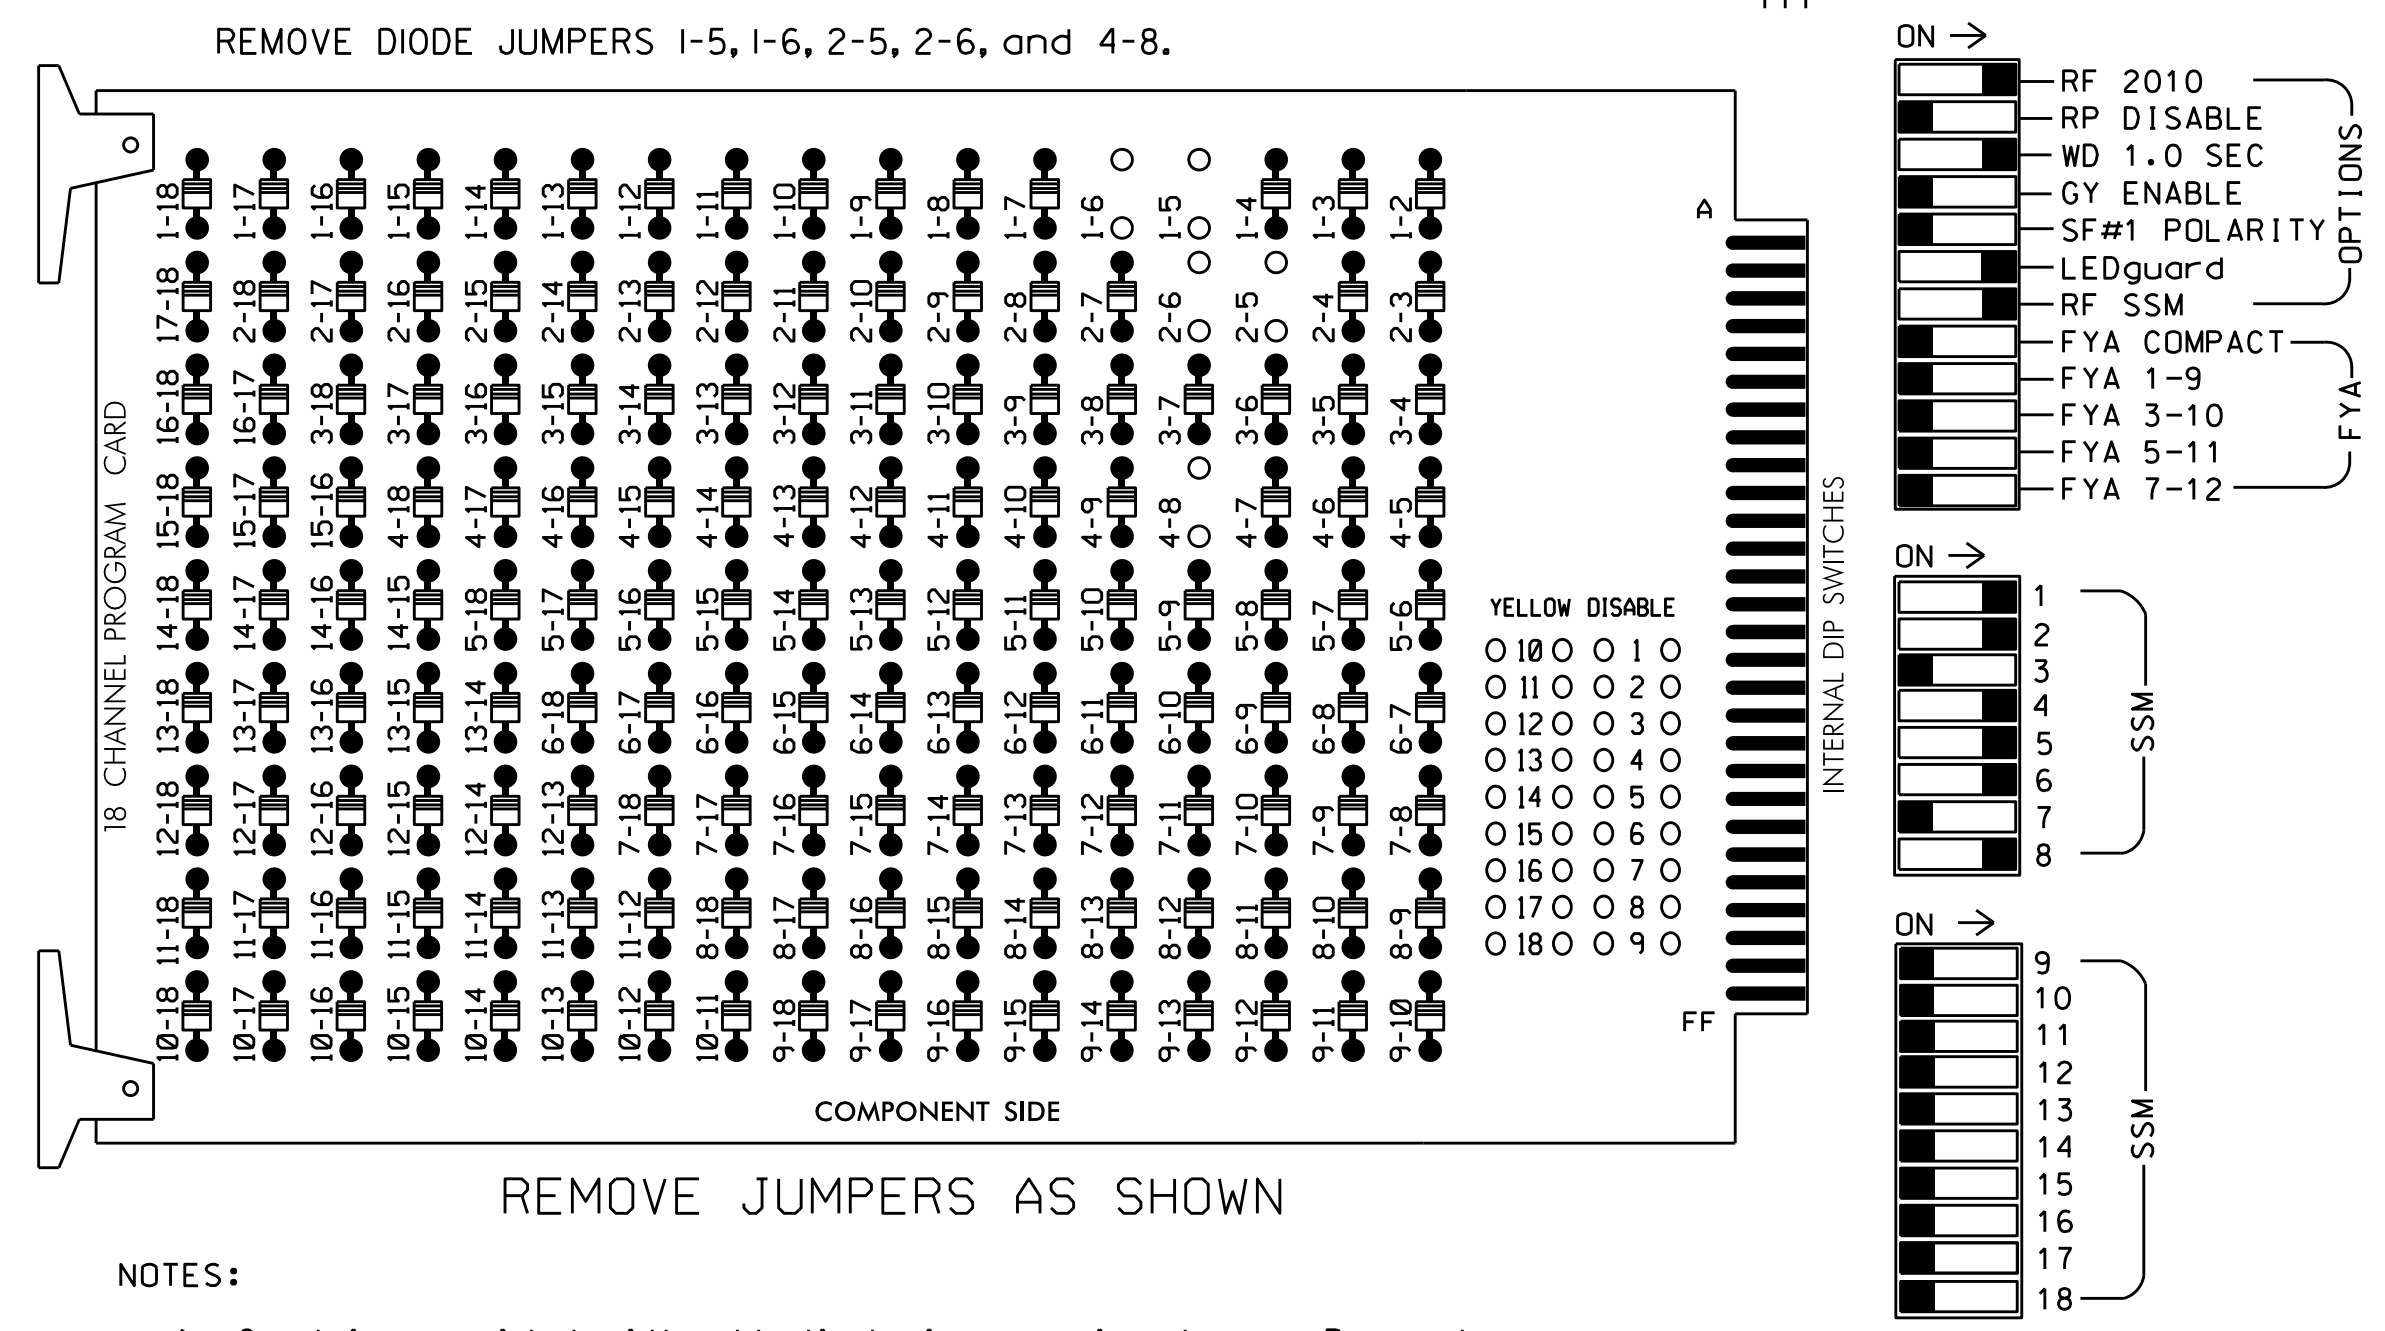

NOTES:

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
3. Ensure that Red Enable is active at all times during normal operation.
4. Integrate monitor with Ethernet network in cabinet.

NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Program phases 4 and 8 for Dual Entry.
3. Enable Simultaneous Gap-Out for all phases.
4. Program phases 2 and 6 for Start Up In Green.
5. Program phases 2 and 6 for Yellow Flash.
6. The cabinet and controller are part of the High Point Signal System.

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	21,22	NU	NU	41,42 43	NU	43	51	61,62	NU	NU	81,82 83	NU	NU	NU	NU	NU	NU
RED		128			101				134			107						
YELLOW		129			102				135			108						
GREEN		130			103				136			109						
RED ARROW	125							131										
YELLOW ARROW	126							132	132									
GREEN ARROW	127							133	133									


NU = Not Used

EQUIPMENT INFORMATION

CONTROLLER.....2070
 CABINET.....332 W/ AUX
 SOFTWARE.....ECONOLITE OASIS
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...18 WITH AUX OUTPUT FILE
 LOAD SWITCHES USED.....S1,S2,S5,S7,S8,S11
 PHASES USED.....1,2,4,5,6,8
 OVERLAPS.....NONE

INPUT FILE POSITION LAYOUT

(front view)

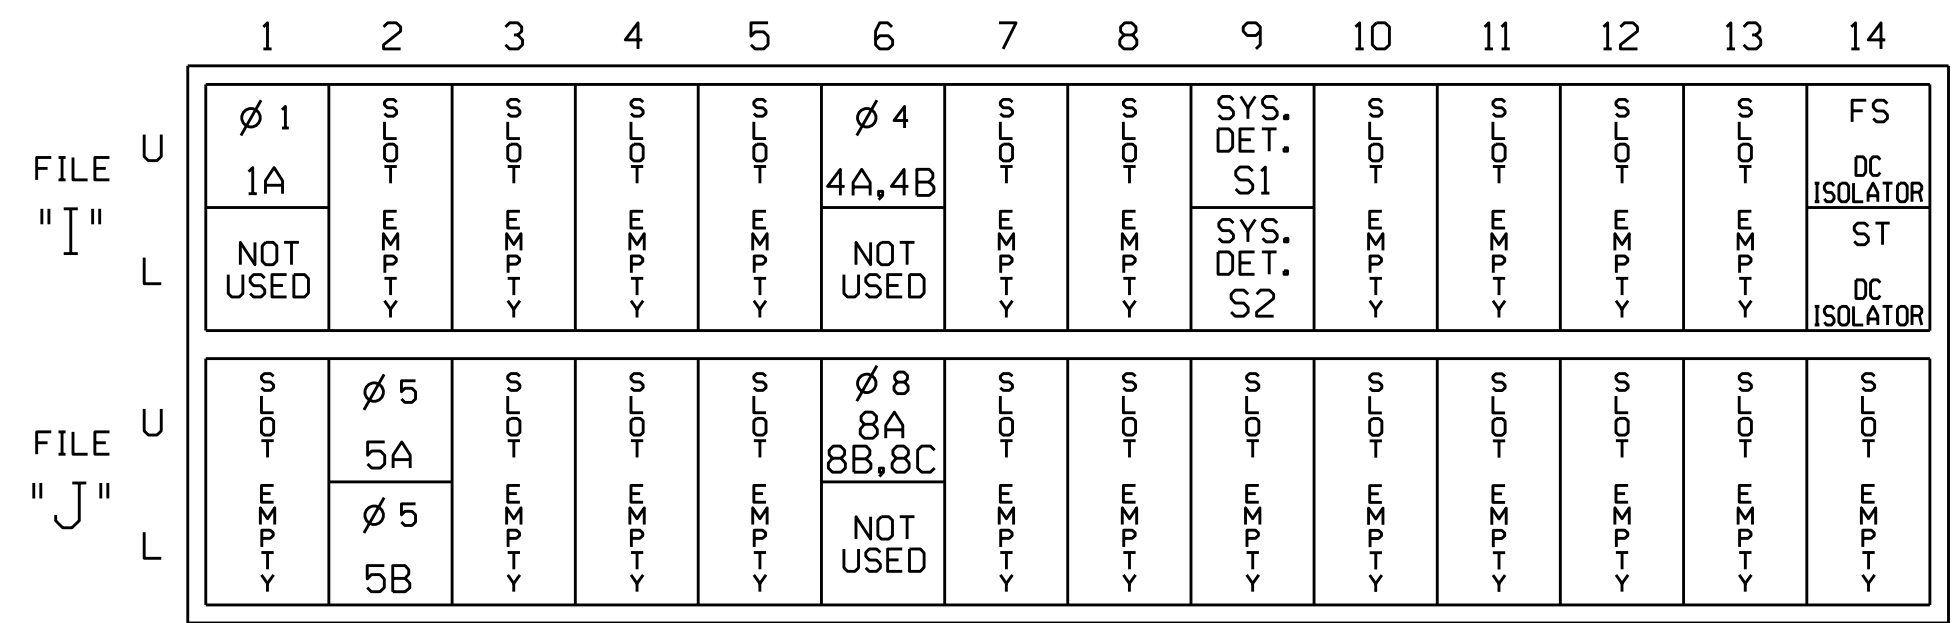

EX. : 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE
 ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A	TB2-1,2	I1U	56	18	1	1	Y	Y			
4A,4B	TB4-9,10	I6U	41	3	4	4	Y	Y			
5A	TB3-5,6	J2U	40	2	6	5	Y	Y			
5B	TB3-7,8	J2L	44	6	16	5	Y	Y			15
8A,8B,8C	TB5-9,10	J6U	42	4	8	8	Y	Y			
* S1	TB6-9,10	I9U	60	22	11	SYS					
* S2	TB6-11,12	I9L	62	24	13	SYS					

* System detector only. Remove the vehicle phase assigned to this detector in the default programming.

INPUT FILE POSITION LEGEND: J2L

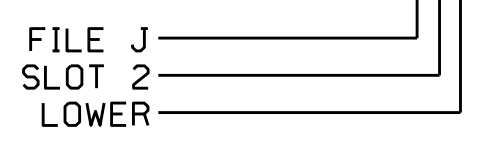

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 07-0797
 DESIGNED: September 2014
 SEALED: 4/22/2015
 REVISED: N/A

Electrical Detail

ELECTRICAL AND PROGRAMMING DETAILS FOR: SR 1009 (South Main Street) at Ward Avenue

Prepared In the Offices of:

Division 7 Guilford County High Point

PLAN DATE: November 2014 REVIEWED BY: *JS*

PREPARED BY: S. Armstrong REVIEWED BY: *JS*

REVISIONS: _____ INIT. DATE

DocuSigned by: *John T. Rowe, Jr.* 4/23/2015

SIG. INVENTORY NO. 07-0797

23-Apr-2015 07:36 S:\IT\SAS\15_Signal\work\hgr\cds\g_MonArmsTrng070797_sm.elec.xxx.dgn somstrng