


**EDI MODEL 2018ECLIP-NC CONFLICT MONITOR**  
**PROGRAMMING DETAIL**

(remove jumpers and set switches as shown)

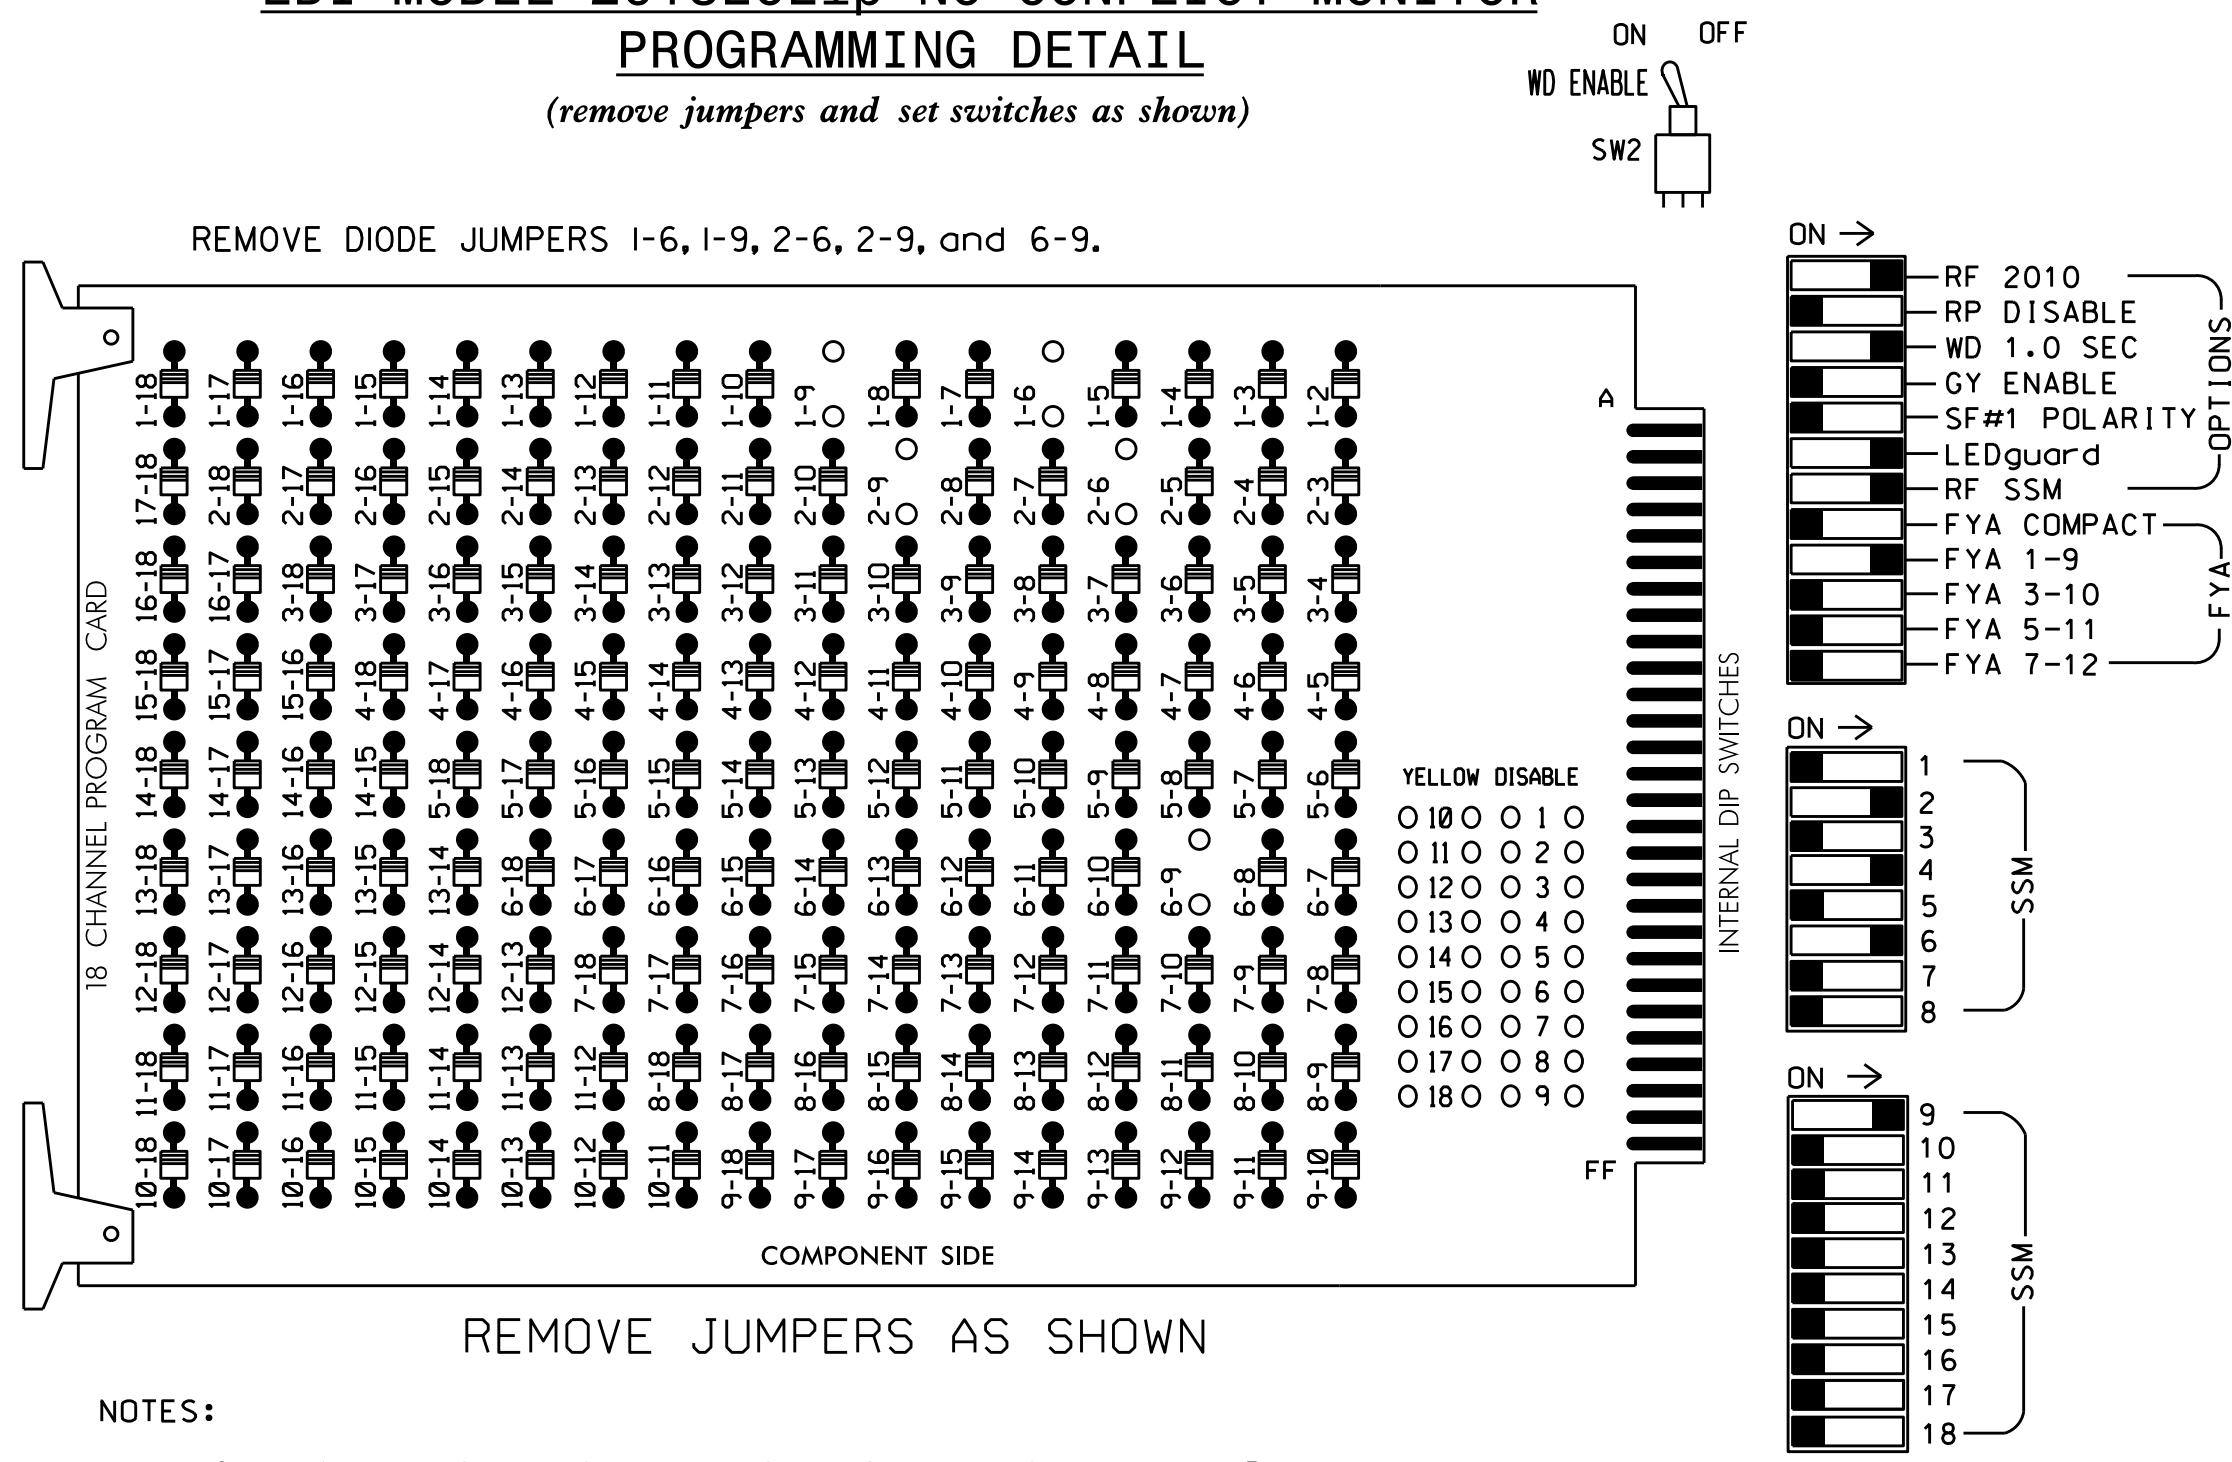

**NOTES:**

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Integrate monitor with Ethernet network in cabinet.

■ = DENOTES POSITION OF SWITCH

**NOTES**

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all phases.
- Program phases 2 and 6 for Start Up In Green.
- Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlaps.
- The cabinet and controller are part of the High Point Signal System.

**EQUIPMENT INFORMATION**

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S1,S2,S5,S8,AUX S1  
 PHASES USED.....1,2,4,6  
 OVERLAP "A".....1+2  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....NOT USED  
 OVERLAP "D".....NOT USED

**SIGNAL HEAD HOOK-UP CHART**

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	21,22	NU	NU	41,42,43	NU	NU	62,63	NU	NU	NU	NU	11	NU	NU	NU	NU	NU
RED		128			101			134										
YELLOW	*	129			102			135										
GREEN		130			103			136										
RED ARROW													A121					
YELLOW ARROW														A122				
FLASHING YELLOW ARROW														A123				
GREEN ARROW	127																	


NU = Not Used

\* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail below.

**FYA SIGNAL WIRING DETAIL**

(wire signal head as shown)

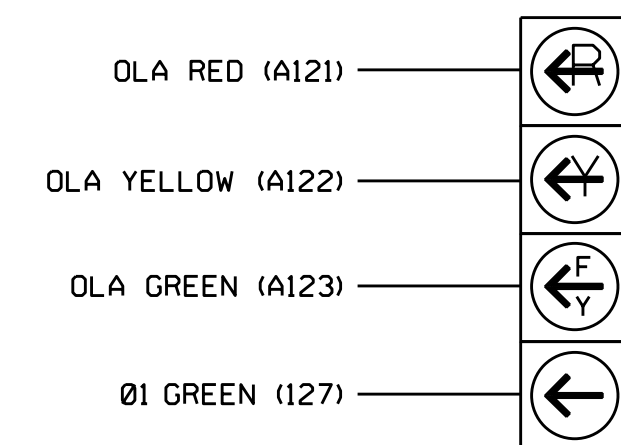


**NOTE**

The sequence display for signal head 11 requires special logic programming. See sheet 2 for programming instructions.

**INPUT FILE POSITION LAYOUT**

(front view)

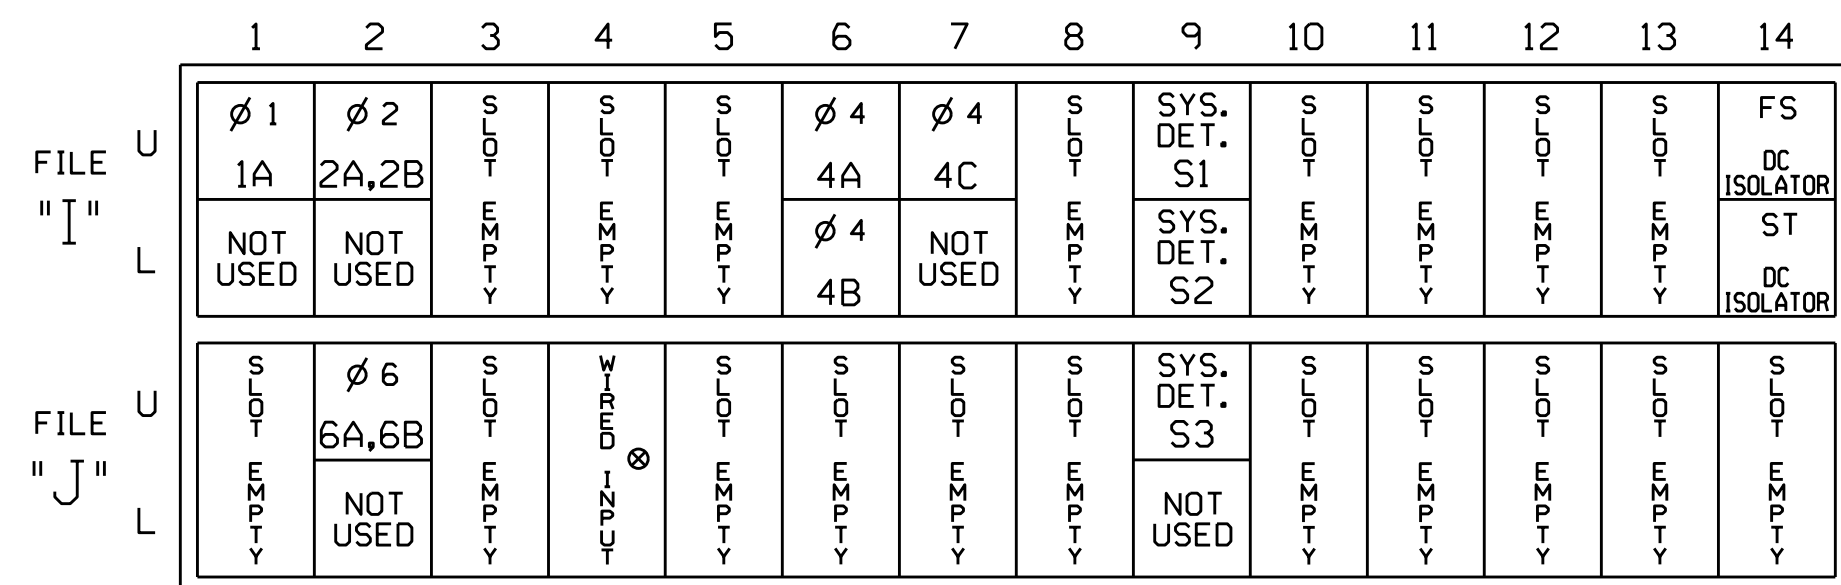

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE  
 ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card


**INPUT FILE CONNECTION & PROGRAMMING CHART**

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A <sup>1</sup>	TB2-1,2	I1U	56	18	1	1	Y	Y			15
2A,2B	TB2-5,6	I2U	39	10	26	6	Y	Y			
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			
4B	TB4-11,12	I6L	45	7	14	4	Y	Y			
4C	TB6-1,2	I7U	65	27	34	4	Y	Y			10
6A,6B	TB3-5,6	J2U	40	2	6	6	Y	Y			
* S1	TB6-9,10	I9U	60	22	11	SYS					
* S2	TB6-11,12	I9L	62	24	13	SYS					
* S3	TB7-9,10	J9U	59	21	15	SYS					

<sup>1</sup>Add jumper from I1-W to J4-W, on rear of input file.

\* System detector only. Remove the vehicle phase assigned to this detector in the default programming.


**INPUT FILE POSITION LEGEND: J2L**

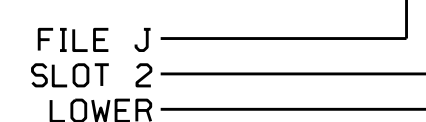

**LOAD RESISTOR INSTALLATION DETAIL**

(install resistor as shown below)

ACCEPTABLE VALUES	
VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

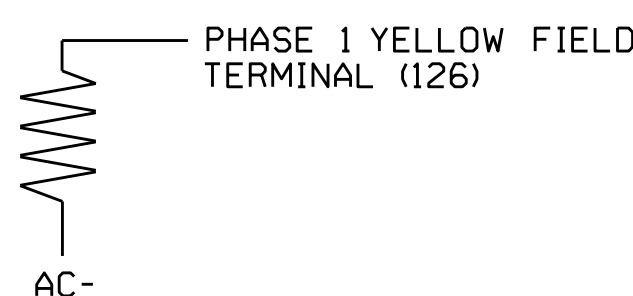

Electrical Detail - Sheet 1 of 2

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared in the Offices of:  750 N. Greenfield Pkwy, Garner, NC 27529	SR 1009 (S. Main St.) at SR 1962 (S. College Dr.)	SEAL 
	Division 7 Guilford County High Point PLAN DATE: September 2014 REVIEWED BY: JTR PREPARED BY: S. Armstrong REVIEWED BY:	REVISIONS INIT. DATE