
HLINE

Ž


FOR ALL JUNCTION BOXES WHERE THE FIBER OPTIC CABLE WILL BE REMOVED, REMOVE THE JUNCTION BOX AND BACKFILL WITH SUITABLE MATERIAL.

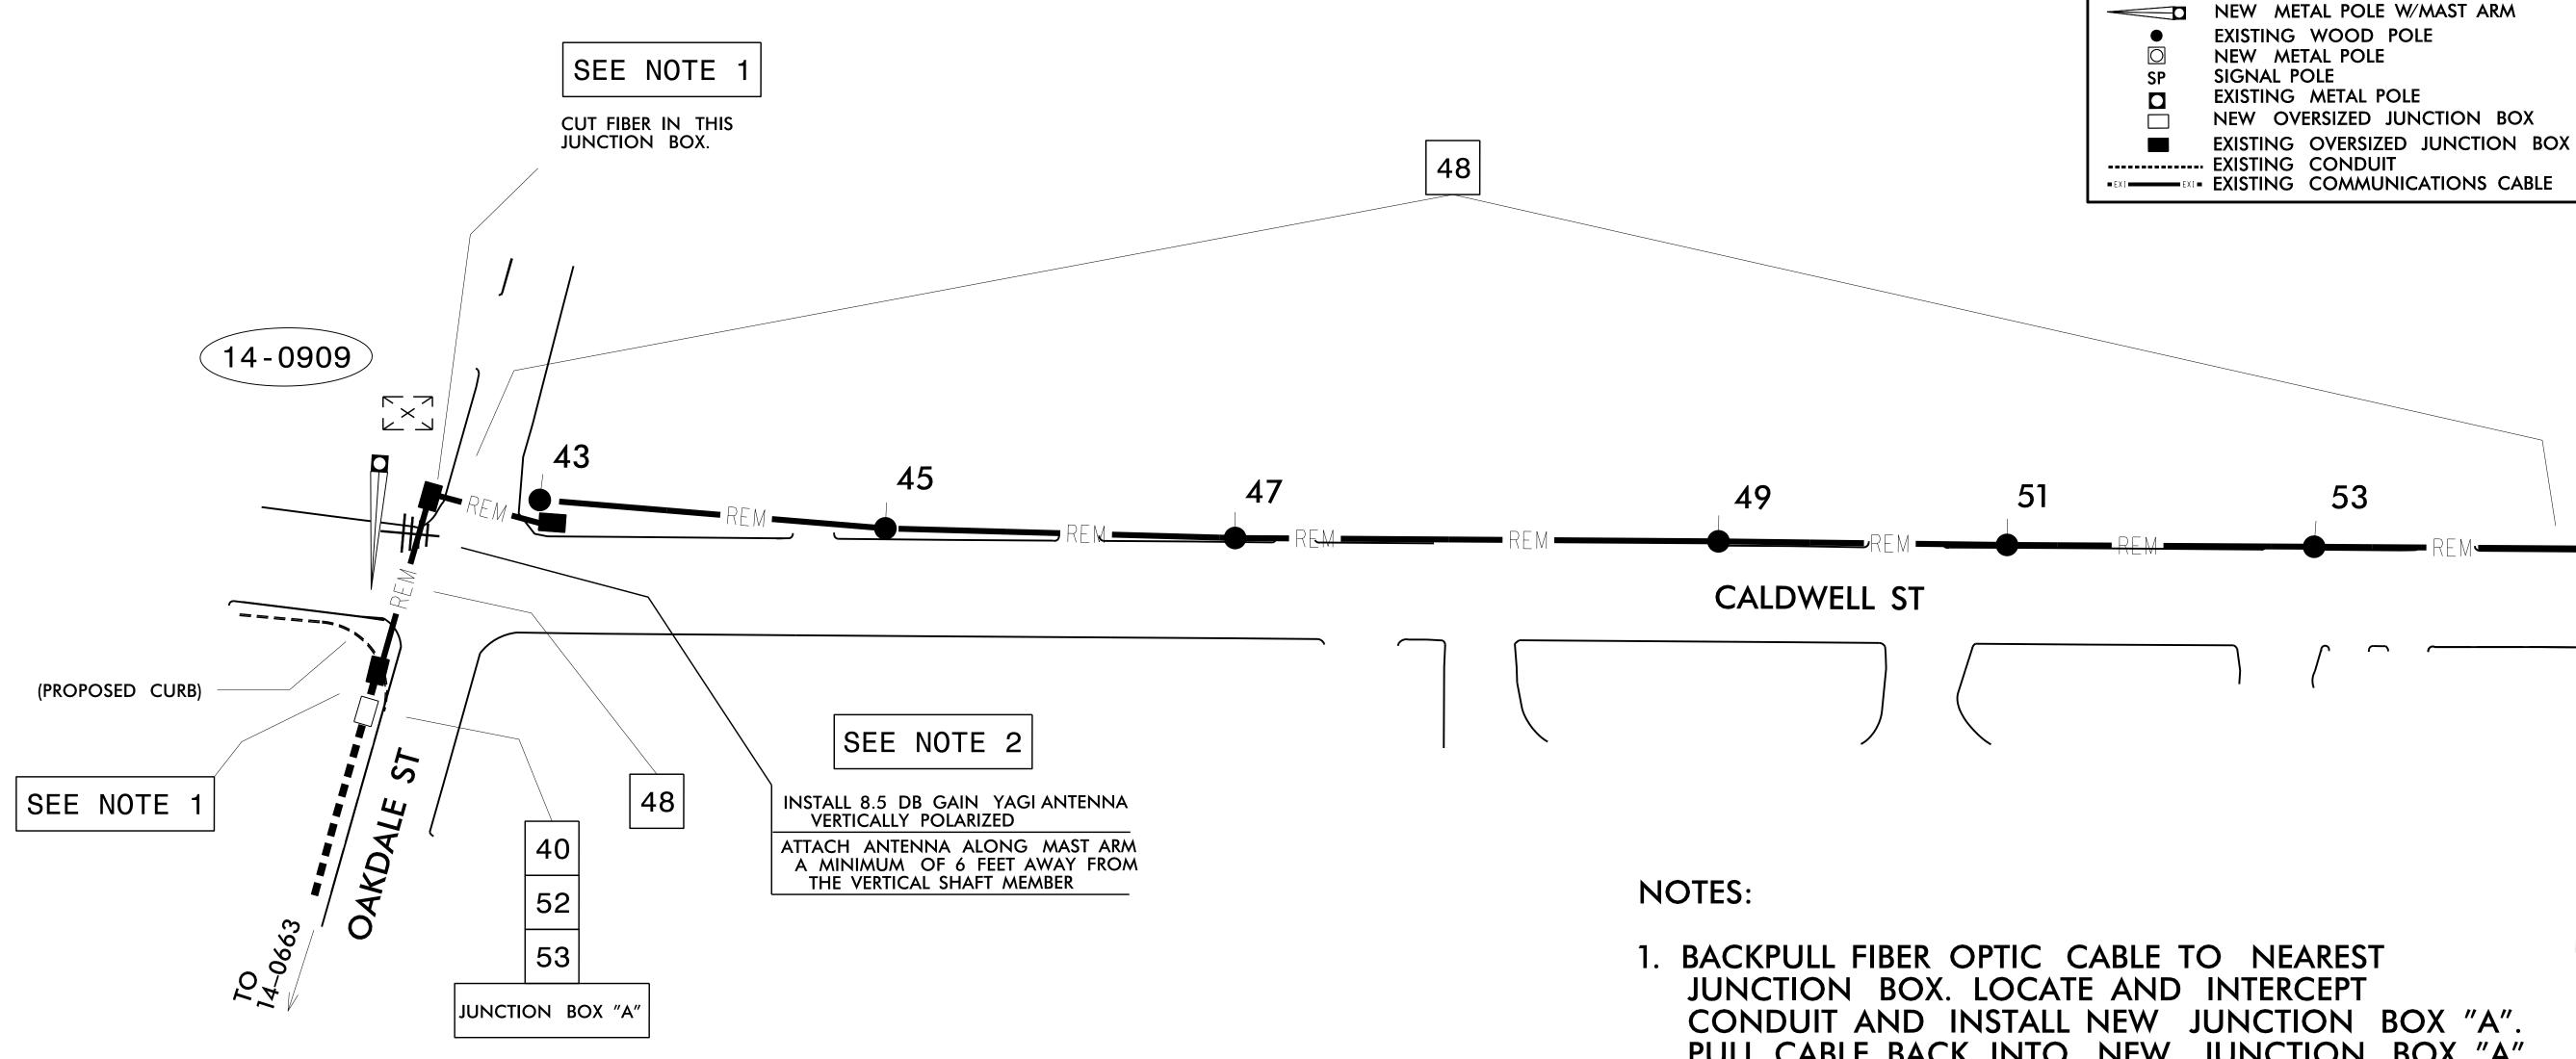

## NOTES FOR WIRELESS COMMUNICATIONS:

- 1. INSTALL COAXIAL CABLE:
- A. ON WOOD POLES, REQUIRING A NEW RIGID GALVANIZED STEEL RISER, INSTALL A 2" RISER WITH WEATHERHEAD AND ROUTE THE COAXIAL CABLE TO THE ANTENNA.
- B. ON METAL POLES WITH MAST ARMS, RUN COAXIAL CABLE UP THROUGH THE POLE AND OUT THE MAST ARM; FIELD DRILL A 1/2" HOLE UP THROUGH THE BOTTOM OF MAST ARM FOR INSTALLATION OF THE COAXIAL CABLE TO THE ANTENNA.
- C. ON METAL STRAIN POLES, RUN COAXIAL CABLE UP THROUGH THE POLE AND OUT THE WEATHERHEAD AND ROUTE THE COAXIAL CABLE TO THE ANTENNA.
- D. BETWEEN THE POINT OF EXITING THE RISER, METAL POLE OR MAST ARM AND THE ANTENNA, SECURE THE COAXIAL CABLE TO THE STRUCTURE USING 3/4" STAINLESS STEEL STRAPS EVERY 12".
- 2. IF AN EXISTING 2" SPARE RIGID GALVANIZED STEEL RISER IS AVAILABLE, INSTALL THE COAXIAL CABLE IN THE SPARE RISER.
- 3. INSTALL WIRELESS ANTENNA ON POLE WITH RF WARNING SIGN.
- (NOTE: RF WARNING SIGN NOT REQUIRED WHEN ANTENNA IS INSTALLED ON AN NCDOT-OWNED POLE.)
- 4. MAINTAIN PROPER CLEARANCE FROM ALL UTILITIES PER THE NATIONAL ELECTRICAL SAFETY CODE.
- 5. INSTALL WIRELESS SERIAL RADIO MODEM WITH EXTERIOR DISCONNECT SWITCH LOCATED ON CABINET. (NOTE: RF ANTENNA DISCONNECT SWITCH AND DECAL ARE NOT REQUIRED WHEN THE ANTENNA IS INSTALLED ON AN NCDOT-OWNED POLE.)
- 6. REFERENCE "WIRELESS RADIO ANTENNA TYPICAL DETAILS."

- PULL CABLE BACK INTO NEW JUNCTION BOX "A" AND STORE. CAP AND SEAL END OF FIBER WITH HEAT SHRINK TUBING WHILE STORED.
- 2. MOVE ANTENNA TO NEW MAST ARM WHEN NEW SIGNAL CABINET IS OPERATIONAL.

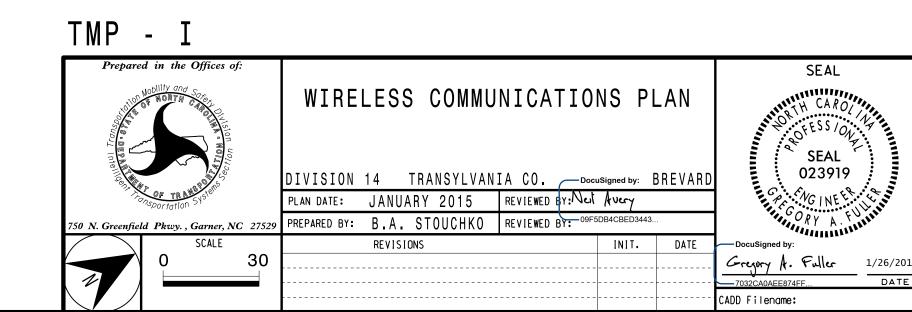

**LEGEND** 

OMNI ANTENNA

YAGI ANTENNA (SINGLE)

YAGI ANTENNA (DOUBLE) FOR REPEATER OPERATION

SIGNAL INVENTORY NUMBER

EXISTING CONTROLLER AND CABINET

EXISTING MASTER CONTROLLER AND CABINET