



### EDI MODEL 2018EClip-NC CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

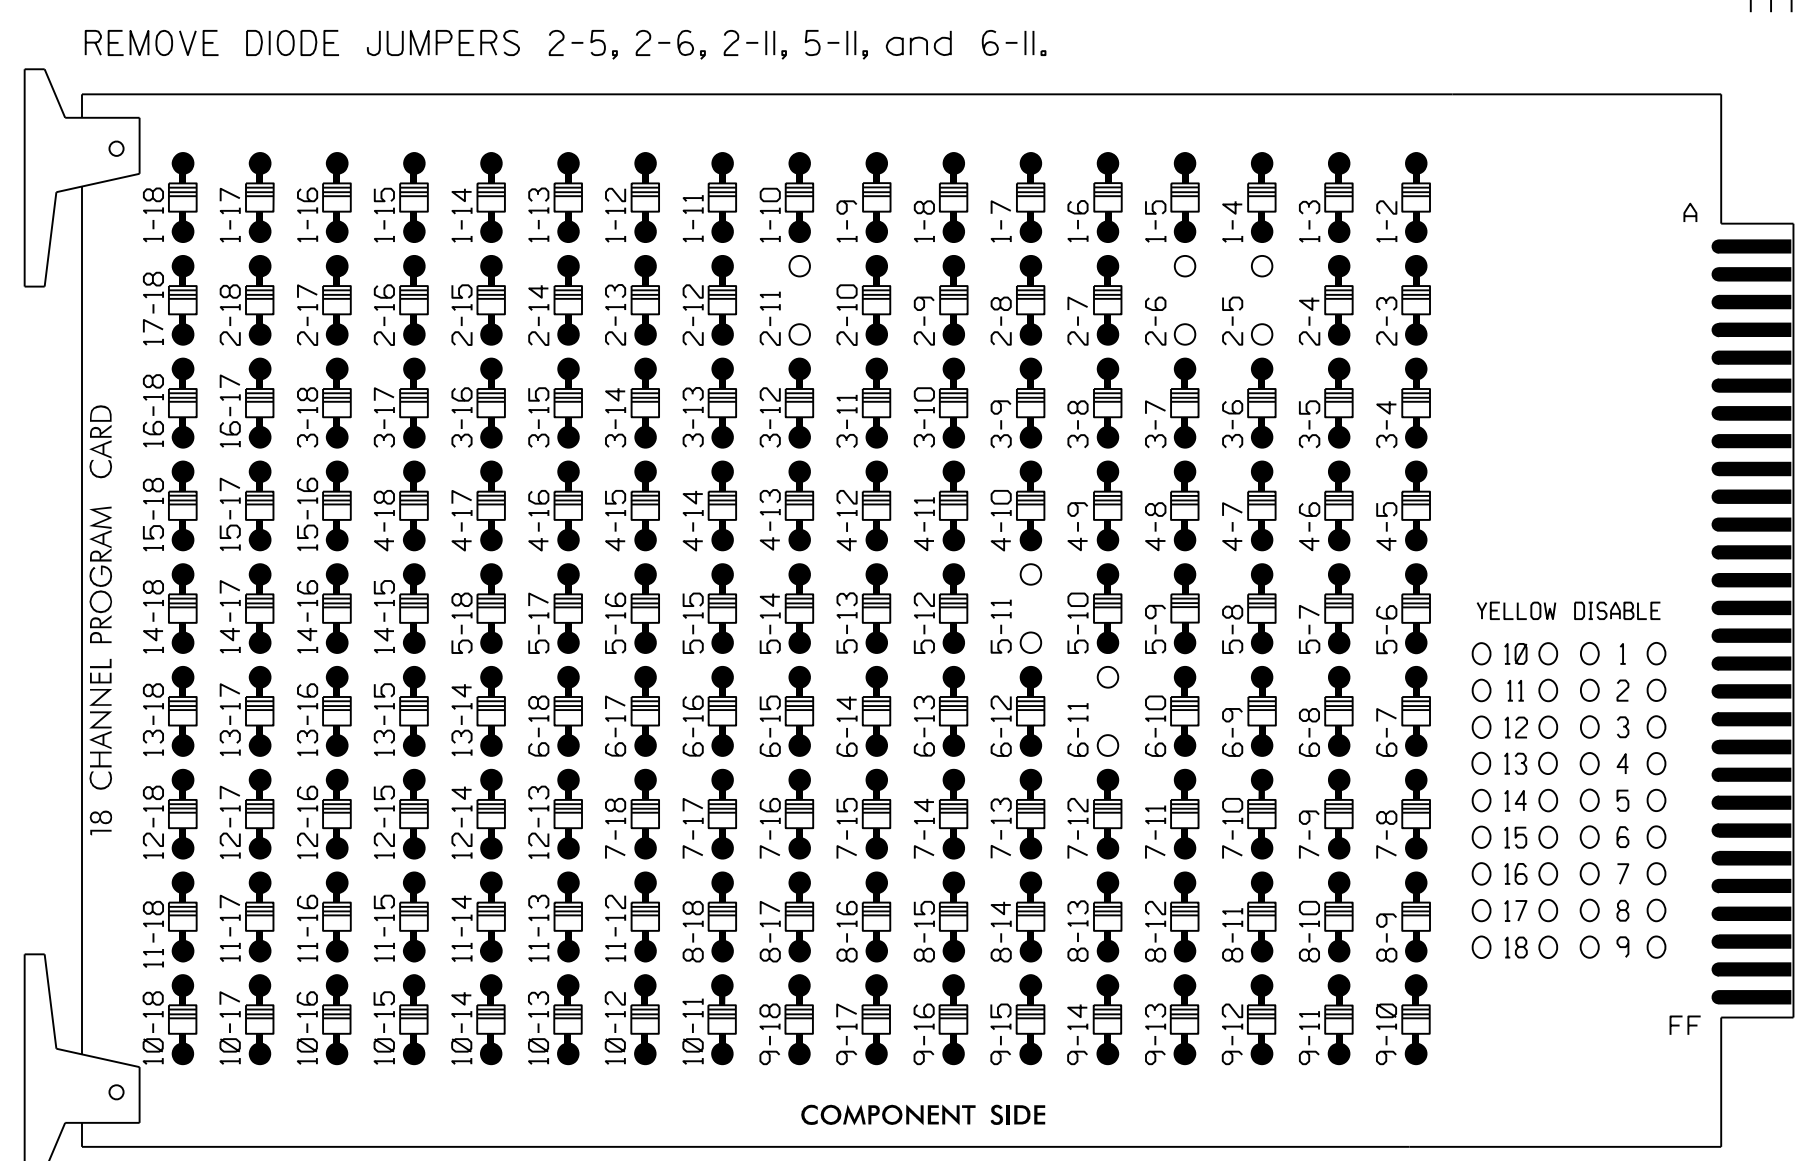

**NOTES:**

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Integrate monitor with Ethernet network in cabinet.

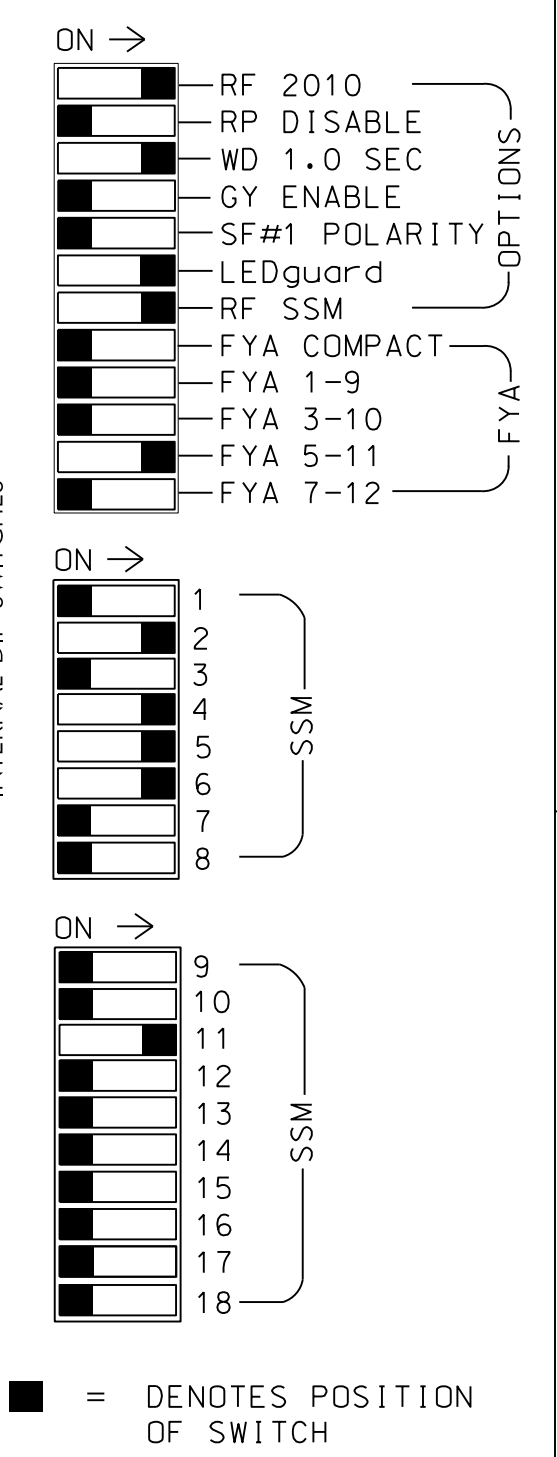

**NOTES**

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program controller to start up in phase 2 Green and 6 Green.
- The cabinet and controller are part of the Fayetteville Signal System.

**EQUIPMENT INFORMATION**

CONTROLLER.....2070  
 CABINET.....332 W/AUX  
 SOFTWARE.....ECONOLITE ASC/3-2070  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S2,S5,S7,S8,AUX S4  
 PHASES USED.....2,4,5,6  
 OVERLAP "B".....NOT USED  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....\*  
 OVERLAP "D".....NOT USED  
 \* See overlap programming detail on sheet 2


**SIGNAL HEAD HOOK-UP CHART**

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6	
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18	
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE	
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42	NU	42	51	61,62,63	NU	NU	NU	NU	NU	NU	51	NU	NU	
RED		128			101		*		134										
YELLOW		129			102				135										
GREEN		130			103				136										
RED ARROW																		A114	
YELLOW ARROW								132											A115
FLASHING YELLOW ARROW																			A116
GREEN ARROW							133	133											

NU = Not Used  
 \* Denotes install load resistor. See load resistor installation detail this sheet.  
 ★ See pictorial of head wiring in detail this sheet.

**INPUT FILE POSITION LAYOUT**

(front view)

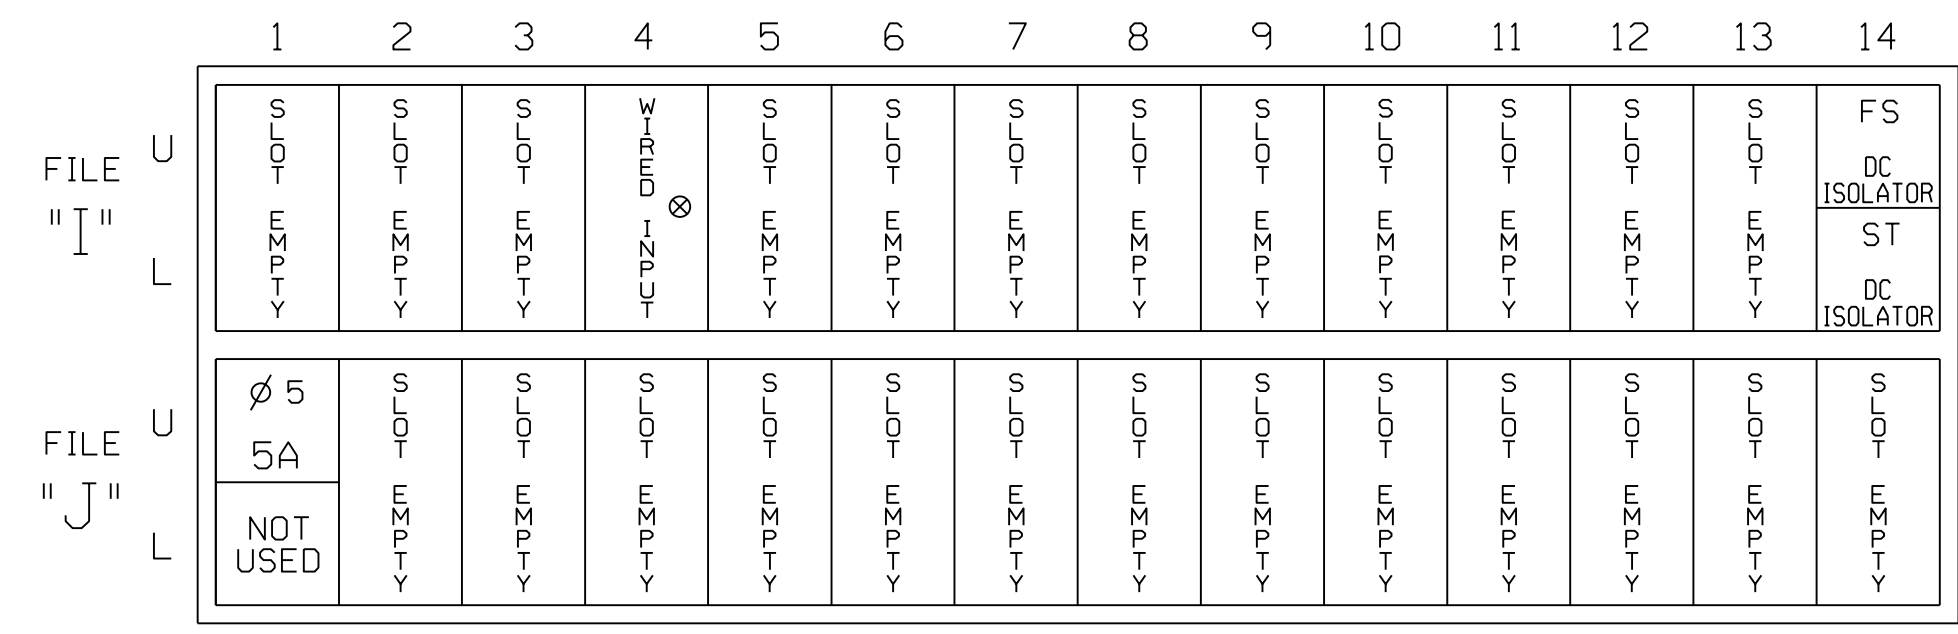


**DETECTOR NOTES**

- For all loops, install a video detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.
- For loop 5A detector card placement and slots reserved for wired inputs are typical for a NCDOT installation. Inputs associated with these slots are compatible with time of day instructions located on sheet 2 of this electrical detail.

**INPUT FILE CONNECTION & PROGRAMMING CHART**

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND TIME	DELAY TIME	ADDED INITIAL	DETECTOR TYPE
5A <sup>1</sup>	-	J1U	55	5 ★	5	YES		15		S
	-	I4U	47	22 ★	2	YES		3		G

<sup>1</sup>Add jumper from J1-W to I4-W, on rear of input file.  
 ★ For the detectors to work as shown on the signal design plan, see the Vehicle Detector Setup Programming Detail for Alternate Phasing on sheet 2.

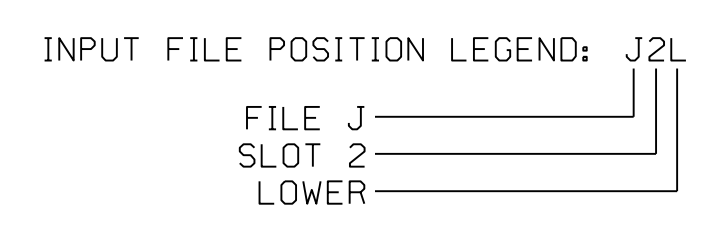


**LOAD RESISTOR INSTALLATION DETAIL**

(install resistor as shown)


ACCEPTABLE VALUES

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

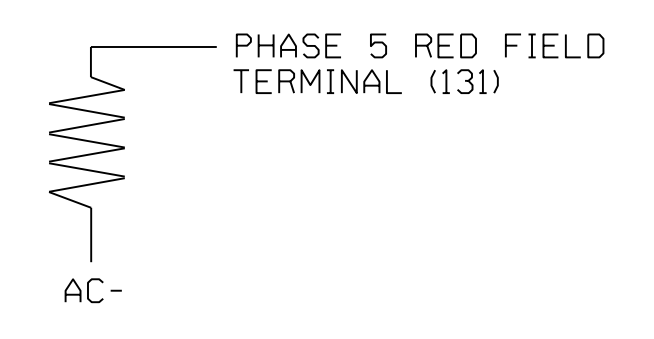

**FYA SIGNAL WIRING DETAIL**

(wire signal head as shown)

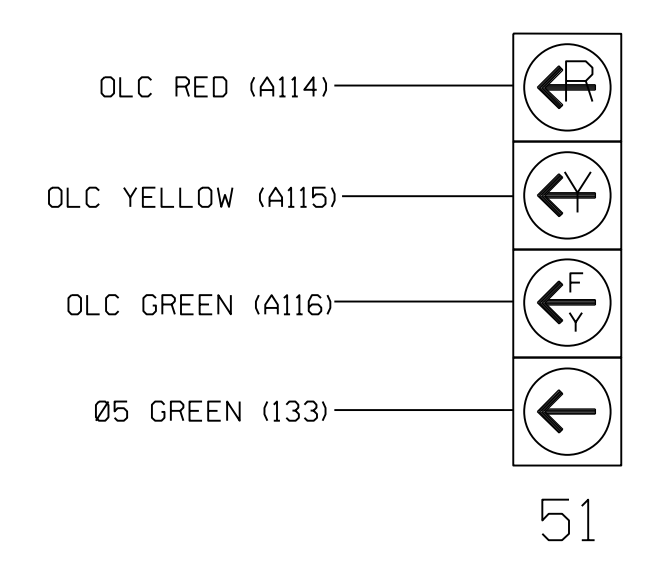

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 06-0334T1  
 DESIGNED: March 2018  
 SEALED: 03-29-2018  
 REVISED: N/A

Temporary Design 1 - TMP Phase I  
 Electrical Detail - Sheet 1 of 3

**Stantec**

Stantec Consulting Services Inc.  
 801 Jones Franklin Road-Suite 300  
 Raleigh, NC 27606  
 Tel. (919) 851-6866  
 Fax. (919) 851-7024  
 www.stantec.com  
 License No. F-0672

ELECTRICAL AND PROGRAMMING DETAILS FOR:

Prepared in the Offices of:

750 N. Greenfield Pkwy, Garner, NC 27529

US 401 Business (Raeford Road)  
 at  
 Montclair Drive

Division 6 Cumberland County Fayetteville

PLAN DATE: March 2018 REVIEWED BY: L Overn

PREPARED BY: R M Muncey REVIEWED BY:

REVISIONS	INIT.	DATE

SEAL

3/29/2018

SIG. INVENTORY NO. 06-0334T1

DATE: U:\Projects\Signal\Temp\Electrical\Detail\SignalPhase I\U-4405-sig.ele.06-0334T1.dgn User: rlmuncy