

PROPOSED ALIGNMENT CONTROL SHEET U-5114

-L-

TYPE	STATION	NORTH	EAST
POT	10+00.00	612739.4218	1446433.2492
PC	11+03.98	612642.3951	1446470.6287
PRC	18+41.63	611939.5694	1446693.1010
PRC	21+52.82	611639.4310	1446775.1806
PT	26+00.00	611207.0641	1446889.0555
PC	33+60.45	610466.0425	1447059.8733
PT	36+25.28	610208.1657	1447120.1178
POT	64+25.00	607483.7363	1447765.0521

-Y5-

TYPE	STATION	NORTH	EAST
PC	10+43.75	608571.7339	1447898.7057
PT	12+65.00	608369.6579	1447975.6079
POT	11+73.25	608447.7794	1447927.4971

-Y6-

TYPE	STATION	NORTH	EAST
POT	9+00.00	610839.4325	1446681.5397
POT	13+00.00	610450.4257	1446774.6723

-Y-

TYPE	STATION	NORTH	EAST
POT	8+70.00	609482.7801	1449091.2268
PC	18+14.02	609454.3293	1448147.6363
PT	21+80.37	609394.7485	1447787.2638
PC	28+32.39	609203.5887	1447163.9017
PT	29+56.02	609165.8150	1447046.1880
POT	33+70.00	609034.2261	1446653.6763

-Y7-

TYPE	STATION	NORTH	EAST
POT	13+00.00	610100.4029	1446837.3366

-Y1-

TYPE	STATION	NORTH	EAST
POT	10+00.00	610853.1346	1447186.1494

-SR-

TYPE	STATION	NORTH	EAST
POT	10+00.00	610746.7285	1447457.7753
PC	10+50.00	610698.0732	1447469.2934
PT	13+12.24	610487.6962	1447615.4149
PC	16+06.44	610324.2292	1447860.0320
PT	18+22.94	610265.3850	1448064.8057
POT	21+00.00	610273.5452	1448341.7453

-Y2-

TYPE	STATION	NORTH	EAST
POT	12+20.00	608805.7141	1447226.0309

-SR1-

TYPE	STATION	NORTH	EAST
PC	10+26.93	610366.5379	1447748.2536
PT	11+15.75	610322.5365	1447674.4490
POT	12+50.00	610309.9979	1447540.7808

-Y3-

TYPE	STATION	NORTH	EAST
POT	10+00.00	608941.1088	1447828.8720
PC	14+02.50	608541.1344	1447783.8539
PT	16+47.75	608368.8824	1447631.1801

-SR2-

TYPE	STATION	NORTH	EAST
POT	10+00.00	610473.1901	1447836.1117
PC	11+20.29	610374.2054	1447904.4649
PT	11+88.32	610309.4561	1447909.7265

-Y4-

TYPE	STATION	NORTH	EAST
POT	10+00.00	608606.6967	1447992.4684