

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A
(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.
2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

PAGE: 2 C1 PIN:48 VEHICLE DETECTOR INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....26 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#..... CHANGE PHASE SEQUENCE PAGE (1-12)..... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4)..... CHANGE OVERLAP CONTROL PAGE (1-4)..... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y).....

ENTER A 'Y' FOR NOT ENABLED
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL "NOT ENABLED" IS ENTERED.

(LOOP 1A - PHASE 6)

PAGE: 2 C1 PIN:48 NOT ENABLED INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64)..... PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#..... CHANGE PHASE SEQUENCE PAGE (1-12)..... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4)..... CHANGE OVERLAP CONTROL PAGE (1-4)..... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y).....

PRESS '+' TO ADVANCE TO INPUT 18

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....1 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#..... CHANGE PHASE SEQUENCE PAGE (1-12)..... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4)..... CHANGE OVERLAP CONTROL PAGE (1-4)..... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y).....

ENTER '51' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 1A - PHASE 1)

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....51 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#..... CHANGE PHASE SEQUENCE PAGE (1-12)..... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4)..... CHANGE OVERLAP CONTROL PAGE (1-4)..... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y).....

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N)
ENABLE DETECTOR.....N
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED :
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0.0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '1' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N)
ENABLE DETECTOR.....Y
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED :X
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0.0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0215T5
DESIGNED: June 2017
SEALED: 9/10/2021
REVISED: N/A

Electrical Detail - Sheet 4 of 8
Signal Upgrade
Temporary Design 5

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with project details: NC 211 (Howe Street) at NC 87 (River Road)/ SR 1852 (Robert Ruark Drive). Includes fields for Plan Date, Prepared By, Reviewed By, and a signature block for Natasha R. Simmons, Engineer, dated 9/10/2021.