

### OUTPUT PHASE REASSIGNMENT FOR LOADSWITCH S4 (REASSIGN AS OVERLAP G)

(program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS), WITH CURSOR IN 'OUTPUT ASSIGNMENT #' POSITION, ENTER "6"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:7 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....6
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

LOADSWITCH S4 RED

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A 'Y' IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:7 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1, P=16)...7
SELECT COLOR (0=RED,1=YEL,2=GRN)...0
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

```

PAGE:1 C1 PIN:7 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....6
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

PRESS "+" KEY FOR OUTPUT 7

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:8 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....7
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

LOADSWITCH S4 YELLOW

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A 'Y' IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:8 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1, P=16)...7
SELECT COLOR (0=RED,1=YEL,2=GRN)...1
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

```

PAGE:1 C1 PIN:8 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....7
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

PRESS "+" KEY FOR OUTPUT 8

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:9 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....8
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

LOADSWITCH S4 GREEN

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A 'Y' IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:9 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1, P=16)...7
SELECT COLOR (0=RED,1=YEL,2=GRN)...2
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

```

PAGE:1 C1 PIN:9 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....8
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

OUTPUT PROGRAMMING FOR LOADSWITCH S4 COMPLETE

### OUTPUT PHASE REASSIGNMENT FOR LOADSWITCH S10 (REASSIGN AS OVERLAP H)

(program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS), WITH CURSOR IN 'OUTPUT ASSIGNMENT #' POSITION, ENTER "22"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:24 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....22
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

LOADSWITCH S10 RED

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A 'Y' IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:24 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1, P=16)...8
SELECT COLOR (0=RED,1=YEL,2=GRN)...0
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

```

PAGE:1 C1 PIN:24 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....22
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

PRESS "+" KEY FOR OUTPUT 23

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:25 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....23
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

LOADSWITCH S10 YELLOW

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A 'Y' IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:25 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1, P=16)...8
SELECT COLOR (0=RED,1=YEL,2=GRN)...1
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

```

PAGE:1 C1 PIN:25 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....23
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

PRESS "+" KEY FOR OUTPUT 24

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:26 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....24
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

LOADSWITCH S10 GREEN

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A 'Y' IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:26 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1, P=16)...8
SELECT COLOR (0=RED,1=YEL,2=GRN)...2
    
```


WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER INPUTTING DATA, THEN 'ESC'.

```

PAGE:1 C1 PIN:26 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....24
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0.0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....Y
DETECTOR RESET.....Y
ADVANCE BEACON.....Y
OUT OF PHASE FLASHER.....Y
CONTROLLER FLASH.....Y
RUN FREE.....Y
RESERVED.....Y
PREEMPT.....Y
SOFT PREEMPT.....Y
ANY PREEMPT.....Y
COORDINATION PLAN.....Y
OFFSET.....Y
PHASE CHECK.....Y
PHASE ON.....Y
PHASE NEXT.....Y
    
```

OUTPUT PROGRAMMING FOR LOADSWITCH S10 COMPLETE

Electrical Detail - Sheet 3 of 7

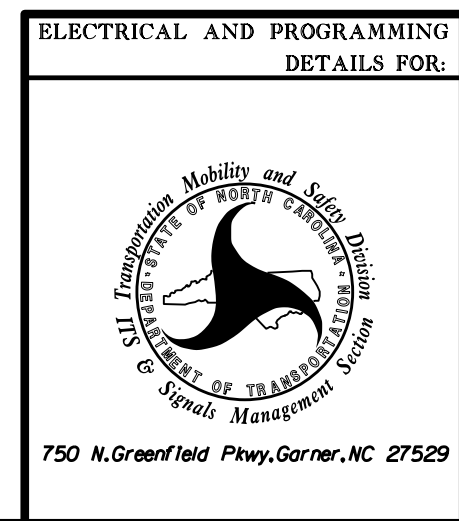

US 601 (Jake Alexander Blvd S)  
at  
SR 2528 (Julian Rd) and  
Martin Luther King Jr Ave  
Division 9 Rowan County Salisbury  
PLAN DATE: January 2022 REVIEWED BY: T. Joyce  
PREPARED BY: C. Strickland REVIEWED BY:  
REVISIONS INIT. DATE  
DocuSigned by:  
D. Todd Joyce 01/28/2022  
SIG. INVENTORY NO. 09-0640

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SEAL  
MARTIN LUTHER KING JR. PROFESSIONAL ENGINEER  
STATE OF MARYLAND  
031001  
D. Todd Joyce  
01/28/2022  
DATE  
SIG. INVENTORY NO. 09-0640

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-0640  
DESIGNED: January 2022  
SEALED: 1/27/2022  
REVISED: N/A