

## FYA SIGNAL OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL FOR LOADSWITCHES S7 & S9 (SIGNAL HEAD 51)

(program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS). WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "30"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:32 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....30
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
                    
```

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT, THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED. ENTER A "Y" FOR VEHICLE OVERLAP.

```

PAGE:1 C1 PIN:32 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...3
SELECT COLOR(0=RED,1=YEL,2=GRN)...0
                    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

PRESS "+" KEY FOR OUTPUT 31

```

PAGE:1 C1 PIN:33 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....31
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
                    
```

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT, THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED. ENTER A "Y" FOR VEHICLE OVERLAP.

```

PAGE:1 C1 PIN:33 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...3
SELECT COLOR(0=RED,1=YEL,2=GRN)...1
                    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

PRESS "+" KEY FOR OUTPUT 32

```

PAGE:1 C1 PIN:34 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....32
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
                    
```

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT, THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED. ENTER A "Y" FOR VEHICLE OVERLAP.

```

PAGE:1 C1 PIN:34 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...3
SELECT COLOR(0=RED,1=YEL,2=GRN)...2
                    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

PRESS "+" TWICE TO REACH OUTPUT 34.

```

PAGE:1 C1 PIN:36 NOT ENABLED
OUTPUT ASSIGNMENT #.....34
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....Y
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
                    
```

THE OUTPUT IS SET AS "NOT ENABLED" BY DEFAULT, THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED. ENTER A "Y" FOR VEHICLE PHASE.

```

PAGE:1 C1 PIN:36 NOT ENABLED
SELECT VEHICLE PHASE (1-16)...5
SELECT COLOR(0=RED,1=YEL,2=GRN)...2
                    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE PHASE' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE PHASE' AS SHOWN BELOW.

OUTPUT PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-0699T1  
DESIGNED: March 2023  
SEALED: April 25, 2023  
REVISED:

4/25/2023 0:43:03 1246C\_U-2729\T\off\c\k\signal\sig-0699\260\_035\_090699-20230425e4-11.dgn User:STDB627

Signal Upgrade - Temporary Design 1 - Electrical Detail - Sheet 4 of 5

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

SEAL

**SR 1672 (Hanes Mill Road) at Museum Drive**

Division 9 Forsyth County Winston-Salem

PLAN DATE: March 2023 REVIEWED BY: RW Thompson


PREPARED BY: LD Stouchko REVIEWED BY:

REVISIONS: INIT. DATE


1988B0398B404

SIG. INVENTORY NO. 09-0699T1

DATE



**MOTT MACDONALD**  
7621 Purfoy Road  
Suite 115  
Fuquay-Varina, NC 27526  
www.mottmac.com  
License No. F-0669

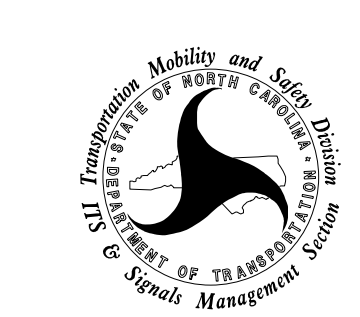

North Carolina State Seal  
Department of Transportation  
Signal Management Section

750 N. Greenfield Pkwy, Garner, NC 27529

1988B0398B404

Russell W. Thompson