

### OUTPUT REMAPPING PROGRAMMING DETAIL TO ASSIGN OVERLAP 'G' TO LOADSWITCH S4 (program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS). WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "6"

```

PAGE:1 C1 PIN:7 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....6
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

LOADSWITCH S4 RED

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A "Y" IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:7 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...7
SELECT COLOR(O=RED,1=YEL,2=GRN)...0
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:7 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....6
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

PRESS "+" KEY FOR OUTPUT 7

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:8 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....7
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

LOADSWITCH S4 YELLOW

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A "Y" IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:8 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...7
SELECT COLOR(O=RED,1=YEL,2=GRN)...1
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

```

PAGE:1 C1 PIN:8 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....7
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

PRESS "+" KEY FOR OUTPUT 8

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:9 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....8
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

LOADSWITCH S4 GREEN

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A "Y" IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:9 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...7
SELECT COLOR(O=RED,1=YEL,2=GRN)...2
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

```

PAGE:1 C1 PIN:9 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....8
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

OUTPUT PROGRAMMING COMPLETE

### OUTPUT REMAPPING PROGRAMMING DETAIL TO ASSIGN OVERLAP 'H' TO LOADSWITCH S10 (program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS). WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "22"

```

PAGE:1 C1 PIN:24 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....22
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

LOADSWITCH S10 RED

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A "Y" IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:24 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...8
SELECT COLOR(O=RED,1=YEL,2=GRN)...0
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:24 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....22
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

PRESS "+" KEY FOR OUTPUT 23

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:25 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....23
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

LOADSWITCH S10 YELLOW

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A "Y" IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:25 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...8
SELECT COLOR(O=RED,1=YEL,2=GRN)...1
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

```

PAGE:1 C1 PIN:25 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....23
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

PRESS "+" KEY FOR OUTPUT 24

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```

PAGE:1 C1 PIN:26 VEHICLE PHASE
OUTPUT ASSIGNMENT #.....24
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

LOADSWITCH S10 GREEN

THE VEHICLE PHASE ENTRY IS EXISTING BY DEFAULT: ENTER A "Y" IN THE VEHICLE OVERLAP FIELD.

```

PAGE:1 C1 PIN:26 VEHICLE PHASE
SELECT VEHICLE OVERLAP (A=1,P=16)...8
SELECT COLOR(O=RED,1=YEL,2=GRN)...2
    
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' KEY AFTER ENTERING DATA, THEN 'ESC'.

```



PAGE:1 C1 PIN:26 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....24
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....Y
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
    
```

OUTPUT PROGRAMMING COMPLETE

4/25/2023 0:40:35.0.DOC 1246C.U-2729\*TrOff.c\*61.ignals\*09-0557\*#60\_372\_090557-20230425a3-14.dgn User:ST086227

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-0557T4  
DESIGNED: March 2023  
SEALED: April 25, 2023  
REVISED:

Electrical Detail - Temporary Design 4 - Sheet 3 of 5

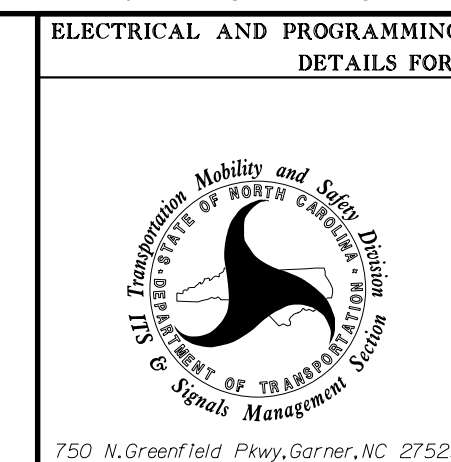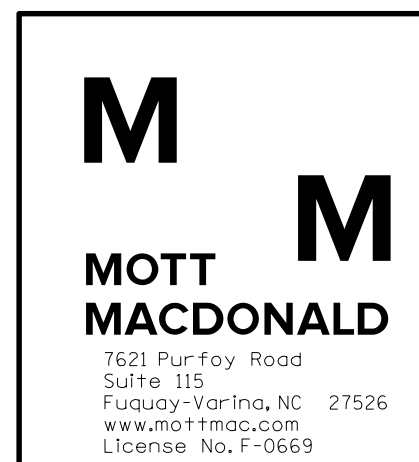

SR 4000 (University Parkway)  
at  
SR 1672 (Hanes Mill Rd)

Division 9 Forsyth County Winston-Salem

PLAN DATE: March 2023 REVIEWED BY: RW Thompson

PREPARED BY: LD Stouchko REVIEWED BY:

REVISIONS	INIT.	DATE

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED



SIG. INVENTORY NO. 09-0557T4