



TEMPORARY RUNAWAY TRUCK RAMP SETUP

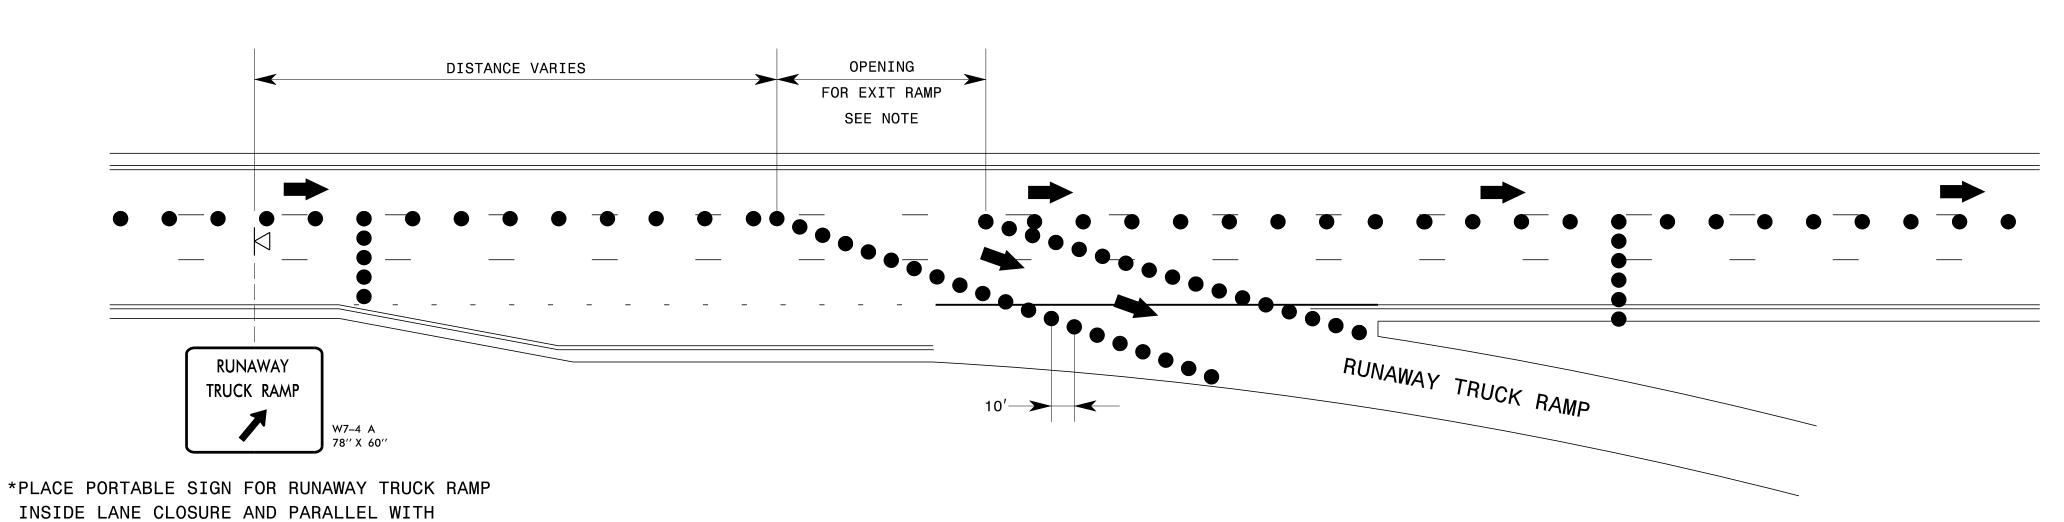

NOTES: MAINTAIN A MINIMUM 250' OPENING FOR RUNAWAY TRUCK EXIT RAMPS OR AS DIRECTED BY THE ENGINEER. CLOSE RAMPS WHEN ACTIVE WORK AREAS ARE WITHIN 500' OF EACH LOCATION. INSTALL TEMPORARY RUNAWAY TRUCK RAMP SETUP WHEN RESURFACING CENTER LANE OR OUTSIDE LANE WITHIN

VICINITY OF RUNAWAY TRUCK RAMP.

EXISTING SIGN RUNAWAY TRUCK RAMP SIGN.

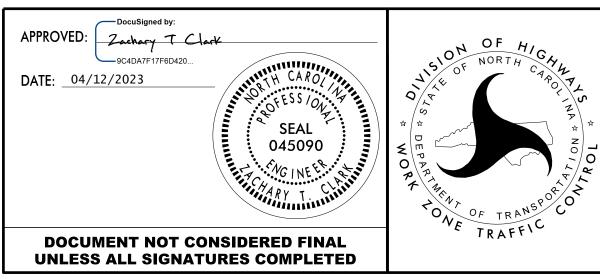

VICINITY MAP/ TEMPORARY RUNAWAY TRUCK RAMP SETUP