

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

Front Panel  
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface  
Home >Controller >Overlap Configuration >Overlaps

Overlap Plan 1

Overlap	1	2	3	4
Type	FYA 4 - Section	Off	FYA 4 - Section	Off
Included Phases	2		6	
Modifier Phases	1		5	
Modifier Overlaps	-	-	-	-
Trail Green	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0

### MAXTIME OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

Front Panel  
Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface  
Home >Controller >Overlap Configuration >Overlaps

In the table view of the web interface, right click on "Overlap" in the top left corner of the table. Copy the entire contents of Overlap Plan 1. Paste Overlap Plan 1 into Overlap Plan 2. Modify Overlap Plan 2 as shown below and save changes.

Overlap Plan 2

Overlap	1	2	3	4
Type	FYA 4 - Section	Off	FYA 4 - Section	Off
Included Phases	-	-	-	-
Modifier Phases	1		5	
Modifier Overlaps	-	-	-	-
Trail Green	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0

← NOTICE INCLUDED PHASE

### VEHICLE DETECTOR PROGRAMMING DETAIL FOR ALTERNATE PHASING LOOPS 1A & 5A

Front Panel  
Main Menu >Controller >Detector >Veh Det Plans

Web Interface  
Home >Controller >Detector Configuration >Vehicle Detectors

In the table view of web interface right click on "Detector" in the top left corner of the table. Copy the entire contents of Detector Plan 1. Paste Detector Plan 1 into Detector Plan 2. Modify Detector Plan 2 as shown below and save changes.

Plan 2

1A

Detector	Call Phase	Delay
1	1	0.0
29	0	0.0

5A

Detector	Call Phase	Delay
15	5	0.0
31	0	0.0

### MAXTIME ALTERNATE PHASING PATTERN PROGRAMMING DETAIL

Front Panel  
Main Menu >Controller >Coordination >Patterns

Web Interface  
Home >Controller >Coordination >Patterns

Pattern Parameters

Pattern	Veh Det Plan	Overlap Plan
*	2	2

\* The Pattern number(s) are to be determined by the Division and/or City Traffic Engineer.

### MAXTIME ALTERNATE PHASING ACTIVATION DETAIL

To run alternate phasing, select a Pattern that is programmed to run Overlap Plan 2 and Detector Plan 2. A Pattern can be selected through the scheduler or manually by changing the Operational Mode.

PHASING	OVERLAP PLAN	VEH DET PLAN
ACTIVE PLAN REQUIRED TO RUN DEFAULT PHASING	1	1
ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING	2	2

#### ALTERNATE PHASING CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN OVERLAP PLAN 2 AND VEHICLE DETECTOR PLAN 2 ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAP PLAN 2: Modifies overlap included phases for heads 11 and 51 to run protected turns only.

VEH DET PLAN 2: Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 0 seconds.

Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 0 seconds.

Electrical Detail - Sheet 2 of 2

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 09-0401  
DESIGNED: May 2024  
SEALED: 05-09-2024  
REVISED: N/A

Electrical and Programming  
Details For:

Prepared for the Offices of:



750 N. Greenfield Pkwy, Garner, NC 27529

NC 8 (Winston Road)  
at  
11th Street


Division 9 Davidson County Lexington

PLAN DATE: May 2024 REVIEWED BY:

PREPARED BY: J.T. Rowe REVIEWED BY: G.G. Murr, Jr.

REVISIONS INT. DATE

DOCUMENT NOT CONSIDERED  
FINAL UNLESS ALL  
SIGNATURES COMPLETED

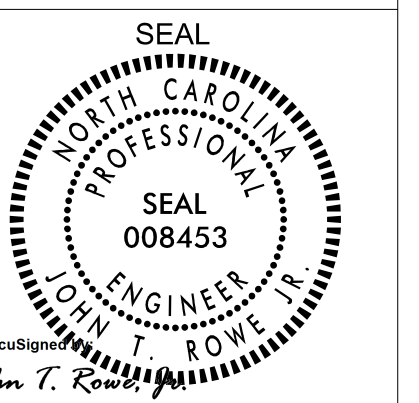

DATE

SIG. INVENTORY NO. 09-0401