MAXTIME STARTUP AND SOFTWARE FLASH PROGRAMMING DETAIL

Front Panel Main Menu >Controller >Unit

Web Interface

Home >Controller >Unit

Modify parameters as shown below and save changes.

Start Up Parameters

Unit Flash Parameters All Red Flash Exit Time

StartUp Clearance Hold

NOTE: Control Type and Control Source

Front Panel

Web Interface

Channel Configuration

| | Channel | Control Type | Control Source | Flash Yellow | Flash Red | Flash Alt | MMU Channel |
|----------|---------|---------------|----------------|--------------|-----------|-----------|-------------|
| + | 1 | Overlap | 7 | | Х | Х | 1 |
| | 2 | Phase Vehicle | 2 | | Х | | 2 |
| | 3 | Phase Vehicle | 3 | | Х | Х | 3 |
| | 4 | Phase Vehicle | 4 | | Х | | 4 |
| | 5 | Phase Vehicle | 5 | | Х | | 5 |
| | 6 | Phase Vehicle | 6 | | Х | Х | 6 |
| | 7 | Phase Vehicle | 7 | | Х | | 7 |
| | 8 | Phase Vehicle | 8 | | Х | Х | 8 |
| | 9 | Overlap | 1 | | Х | Х | 9 |
| | 10 | Overlap | 2 | | Х | Х | 10 |
| | 11 | Overlap | 3 | | Х | | 11 |
| | 12 | Overlap | 4 | | X | | 12 |
| | 13 | Phase Ped | 2 | | | | 13 |
| | 14 | Phase Ped | 4 | | | | 14 |
| | 15 | Phase Ped | 6 | | | | 15 |
| | 16 | Phase Ped | 8 | | | | 16 |
| | 17 | Overlap | 5 | | Χ | Х | 17 |
| | 18 | Overlap | 6 | | X | | 18 |

OUTPUT CHANNEL CONFIGURATION

Main Menu >Controller >More>Channels>Channels Config

Home >Controller >Advanced IO>Channels>Channel Configuration

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 05-1662 DESIGNED: May 2025 SEALED: 8/28/2025 REVISED: N/A

Electrical Detail - Sheet 3 of 3

Prepared in the Offices of:

SR 1006 (Old Stage Road) SR 2724 (Banks Road)

Fuquay-Varina August 2025 REVIEWED BY:

D. Told Joya 08/29/2025

ADDITION DATE

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SIG. INVENTORY NO. 05-1662

PREPARED BY: Zarrar Zafar REVIEWED BY: