U-2912 CROSS SECTION INDEX

	NO33 SECTIO	
ALIGNMENT	XSEC SHEET NUMBER	STATION TO STATION
-LRev-	X-2 TO X-26	7+00 TO 38+00
-Y1-	X-27	10+00 TO 10+80
Y2	X-28	10+00 TO 11+00
Y3	X-29	10+00 TO 10+80
Y4	X-30	10+00 TO 10+60
-Y5 -	X-31	10+00 TO 12+80
-Y6-	X-32	10+00 TO 10+60
-Y7-	X-33	10+00 TO 10+80
-Y8-	X-34	10+00 TO 11+00
-Y9-	X-35	10+00 TO 10+20
Y10	X-36	10+00 TO 10+20
-DRIVE 1-	X-37 TO X-38	10+00 TO 10+80
-DRIVE 2-	X-39	10+00 TO 10+20
	·	
	,	