
(program controller as shown below)

- 1. From Main Menu press '2' (PHASE CONTROL), then '1' (PHASE CONTROL FUNCTIONS). Scroll to the bottom of the menu and Enable ACT Logic Commands 1, 2 and 3.
- 2. From Main Menu press '6' (OUTPUTS), then '3' (LOGICAL I/O PROCESSOR).

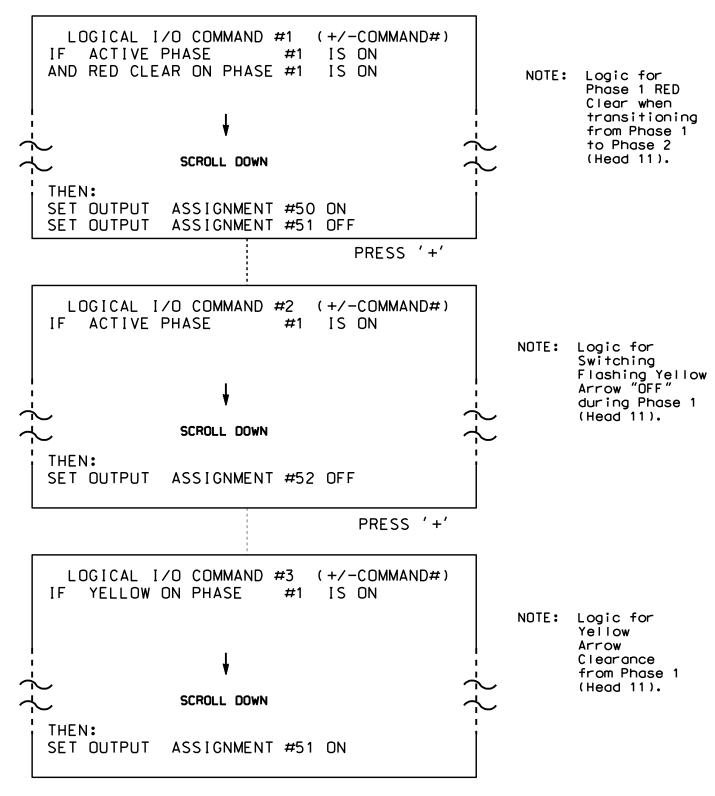

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE


OUTPUT REFERENCE SCHEDULE OUTPUT 50 = Overlap A Red OUTPUT 51 = Overlap A Yellow OUTPUT 52 = Overlap A Green

PROJECT REFERENCE NO. Sig. 11.2 C-5558

OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

From Main Menu press '8' (OVERLAPS), then '1' (VEHICLE OVERLAP SETTINGS).

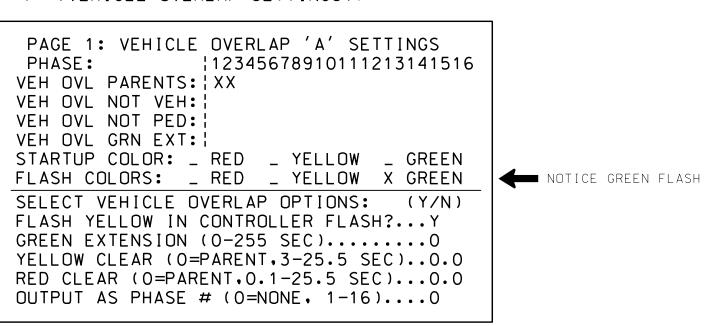


OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 07-0379 DESIGNED: February 2014 SEALED: 3/2/15 REVISED: N/A

REVISIONS

Electrical Detail - Sheet 2 of 2

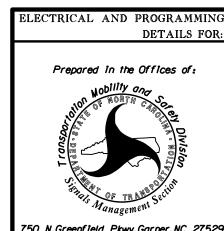

Brentwood Street I-85 Bus./US 29 NB-US 70 EB Ramps

ivision 7 Guilford County High Point PLAN DATE: July 2014 REVIEWED BY: T. Joyce PREPARED BY: B. SIMMONS REVIEWED BY:

INIT. DATE SIG. INVENTORY NO. 07-0379

SEAL

750 N.Greenfield Pkwy, Garner, NC 27529