

FY A SIGNAL OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL  
FOR LOADSWITCHES S10 & S12 (SIGNAL HEAD 71)

*(program controller as shown below)*

FROM MAIN MENU PRESS '6' (OUTPUTS). THEN  
'1' (OUTPUT ASSIGNMENTS).  
WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "22"

PAGE:1 C1 PIN:24 VEHICLE PHASE  
OUTPUT ASSIGNMENT #..... 22  
FREQUENCY (0=DEFAULT) (0-25.5 Hz) .. 0.0  
DUTY CYCLE (0=DEFAULT) (0 - 100%) .. 0  
MODE (0=SOLID,1=FLASH)..... 0  
SELECT ASSIGNMENT:  
NOT ENABLED..... -  
VEHICLE PHASE..... Y  
PEDESTRIAN PHASE..... -  
VEHICLE OVERLAP..... Y  
PEDESTRIAN OVERLAP..... -  
WATCHDOG..... -  
DETECTOR RESET..... -  
ADVANCE BEACON..... -  
OUT OF PHASE FLASHER..... -  
CONTROLLER FLASH..... -  
RUN FREE..... -  
RESERVED..... -  
PREEMPT..... -  
SOFT PREEMPT..... -  
ANY PREEMPT..... -  
COORDINATION PLAN..... -  
OFFSET..... -  
PHASE CHECK..... -  
PHASE ON..... -  
PHASE NEXT..... -

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT, THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.  
**ENTER A "Y" FOR VEHICLE OVERLAP.**

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'  
THE SCREEN SHOWN ABOVE WILL APPEAR.  
ENTER DATA AS SHOWN.

PRESS THE 'ENT' KEY AFTER ENTERING DATA  
THEN 'ESC'.

PRESS "+" KEY FOR OUTPUT 2

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT  
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW

```
PAGE:1 C1 PIN:24 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....22
FREQUENCY (0=DEFAULT) (0-25.5 HZ)....0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH).....0
SELECT ASSIGNMENT:
NOT ENABLED.....-
VEHICLE PHASE.....-
PEDESTRIAN PHASE.....-
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....-
WATCHDOG.....-
DETECTOR RESET.....-
ADVANCE BEACON.....-
OUT OF PHASE FLASHER.....-
CONTROLLER FLASH.....-
RUN FREE.....-
RESERVED.....-
PREEMPT.....-
SOFT PREEMPT.....-
ANY PREEMPT.....-
COORDINATION PLAN.....-
OFFSET.....-
PHASE CHECK.....-
PHASE ON.....-
PHASE NEXT.....-
```

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT  
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW

PAGE:1 C1 PIN:25 VEHICLE PHASE  
OUTPUT ASSIGNMENT #.....23  
FREQUENCY (0=DEFAULT) (0-25.5 HZ)....0.0  
DUTY CYCLE (0=DEFAULT) (0 - 100%)....0  
MODE (0=SOLID,1=FLASH).....0  
SELECT ASSIGNMENT:  
NOT ENABLED.....-  
VEHICLE PHASE.....Y

---

PEDESTRIAN PHASE.....-  
VEHICLE OVERLAP.....Y  
PEDESTRIAN OVERLAP.....-  
WATCHDOG.....-  
DETECTOR RESET.....-  
ADVANCE BEACON.....-  
OUT OF PHASE FLASHER.....-  
CONTROLLER FLASH.....-  
RUN FREE.....-  
RESERVED.....-  
PREEMPT.....-  
SOFT PREEMPT.....-  
ANY PREEMPT.....-  
COORDINATION PLAN.....-  
OFFSET.....-  
PHASE CHECK.....-  
PHASE ON.....-  
PHASE NEXT.....-

THE OUTPUT IS SET AS A VEHICLE PHASE BY DEFAULT, THIS  
"Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.  
**ENTER A "Y" FOR VEHICLE OVERLAP.**

PAGE:1 C1 PIN:25 VEHICLE PHASE  
SELECT VEHICLE OVERLAP (A=1,P=16)  
SELECT COLOR(0=RED,1=YEL,2=GRN)..

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'  
THE SCREEN SHOWN ABOVE WILL APPEAR.  
ENTER DATA AS SHOWN.

PRESS THE 'ENT' KEY AFTER ENTERING DATA  
THEN 'ESC'.

PRESS + KEY FOR OUTPUT 24

---

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT  
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW

```
PAGE:1 C1 PIN:25 VEHICLE OVERLAP  
OUTPUT ASSIGNMENT #.....23  
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0  
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0  
MODE (0=SOLID,1=FLASH)...0  
SELECT ASSIGNMENT:  
NOT ENABLED.....  
VEHICLE PHASE.....  
PEDESTRIAN PHASE.....  
VEHICLE OVERLAP.....Y  
PEDESTRIAN OVERLAP.....  
WATCHDOG.....  
DETECTOR RESET.....  
ADVANCE BEACON.....  
OUT OF PHASE FLASHER.....  
CONTROLLER FLASH.....  
RUN FREE.....  
RESERVED.....  
PREEMPT.....  
SOFT PREEMPT.....  
ANY PREEMPT.....  
COORDINATION PLAN.....  
OFFSET.....  
PHASE CHECK.....  
PHASE ON.....  
PHASE NEXT.....
```

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT  
ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW

PAGE:1 C1 PIN:26 VEHICLE PHASE  
OUTPUT ASSIGNMENT #.....24  
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0  
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0  
MODE (0=SOLID,1=FLASH).....0  
SELECT ASSIGNMENT:  
NOT ENABLED.....-  
VEHICLE PHASE.....Y  
PEDESTRIAN PHASE.....-  
VEHICLE OVERLAP.....Y  
PEDESTRIAN OVERLAP.....-  
WATCHDOG.....-  
DETECTOR RESET.....-  
ADVANCE BEACON.....-  
OUT OF PHASE FLASHER.....-  
CONTROLLER FLASH.....-  
RUN FREE.....-  
RESERVED.....-  
PREEMPT.....-  
SOFT PREEMPT.....-  
ANY PREEMPT.....-  
COORDINATION PLAN.....-  
OFFSET.....-  
PHASE CHECK.....-  
PHASE ON.....-  
PHASE NEXT.....-

PAGE:1 C1 PIN:26 VEHICLE PHASE  
SELECT VEHICLE OVERLAP (A=1,P=16)  
SELECT COLOR(0=RED,1=YEL,2=GRN)..

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP'  
THE SCREEN SHOWN ABOVE WILL APPEAR.  
ENTER DATA AS SHOWN.

PRESS THE 'ENT' KEY AFTER ENTERING DATA  
THEN 'ESC'.

PAGE:1 C1 PIN:26 VEHICLE OVERLAP  
OUTPUT ASSIGNMENT #.....24  
FREQUENCY (0=DEFAULT) (0-25.5 HZ)....0.0  
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0  
MODE (0=SOLID,1=FLASH).....0  
SELECT ASSIGNMENT:  
NOT ENABLED.....-  
VEHICLE PHASE.....-  
PEDESTRIAN PHASE.....-  
VEHICLE OVERLAP.....Y  
PEDESTRIAN OVERLAP.....-  
WATCHDOG.....-  
DETECTOR RESET.....-  
ADVANCE BEACON.....-  
OUT OF PHASE FLASHER.....-  
CONTROLLER FLASH.....-  
RUN FREE.....-  
RESERVED.....-  
PREEMPT.....-  
SOFT PREEMPT.....-  
ANY PREEMPT.....-  
COORDINATION PLAN.....-  
OFFSET.....-  
PHASE CHECK.....-  
PHASE ON.....-  
PHASE NEXT.....-

PRESS "+" UNTIL OUTPUT 36  
IS REACHED.

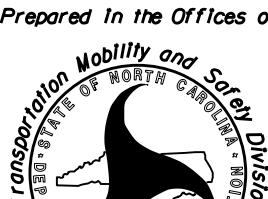
DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE PHASE' AS SHOWN BELOW.

PAGE:1 C1 PIN:38 VEHICLE PHASE  
OUTPUT ASSIGNMENT #.....36  
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0  
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0  
MODE (0=SOL ID,1=FLASH).....0  
SELECT ASSIGNMENT:  
NOT ENABLED.....-  
VEHICLE PHASE.....Y  
PEDESTRIAN PHASE.....-  
VEHICLE OVERLAP.....-  
PEDESTRIAN OVERLAP.....-  
WATCHDOG.....-  
DETECTOR RESET.....-  
ADVANCE BEACON.....-  
OUT OF PHASE FLASHER.....-  
CONTROLLER FLASH.....-  
RUN FREE.....-  
RESERVED.....-  
PREEMPT.....-  
SOFT PREEMPT.....-  
ANY PREEMPT.....-  
COORDINATION PLAN.....-  
OFFSET.....-  
PHASE CHECK.....-  
PHASE ON.....-  
PHASE NEXT.....-

OUTPUT PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 13-0248  
DESIGNED: February 2016  
SEALED: 12/16/2016  
REVISED: N/A

Electrical Detail - Sheet 4 of 4

<p>ELCTRICAL AND PROGRAMMING DETAILS FOR:</p> <p><i>Prepared In the Offices of:</i></p>  <p>O N.Greenfield Pkwy.Garner.NC 27529</p>	<p>US 25/SR 3214 (Biltmore Ave.) at US 25 (Southside Ave.) / Charlotte Street</p> <p>Division 13      Buncombe County      Asheville</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 50%;">PLAN DATE: December 2016</td> <td style="width: 50%;">REVIEWED BY: BAS</td> </tr> <tr> <td>PREPARED BY: S. Armstrong</td> <td>REVIEWED BY:</td> </tr> <tr> <td colspan="2">REVISIONS</td> </tr> <tr> <td colspan="2"></td> </tr> </table>	PLAN DATE: December 2016	REVIEWED BY: BAS	PREPARED BY: S. Armstrong	REVIEWED BY:	REVISIONS				<p>UNLESS ALL SIGNATURES ARE PRESENT</p> <p>SEAL</p>  <p>ZACHARY M. LITTLE</p> <p>DocuSigned by: <u>Zachary M. Little</u> 12/20/2016 0C21EFD94F5341F... DATE</p>
PLAN DATE: December 2016	REVIEWED BY: BAS									
PREPARED BY: S. Armstrong	REVIEWED BY:									
REVISIONS										