
LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO APPLY PHASE 8 VEH. CALL WITH PHASE 8 PED CALL

(program controller as shown below)

- 1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMAND 1.
- 2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

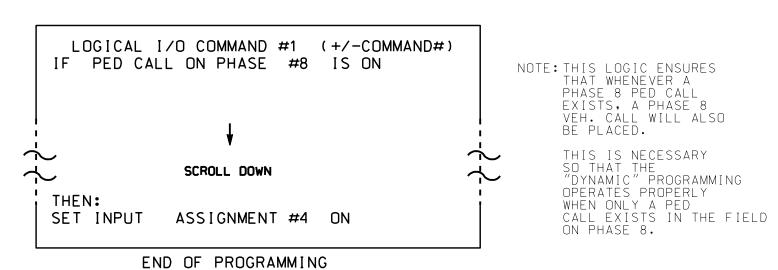

INPUT REFERENCE INPUT 4 = VEH. DET. 8

PHASE SEQUENCE PROGRAMMING DETAIL

(program controller as shown below)

FROM OASIS LOCAL CONTROLLER MAIN MENU SELECT: 4 PHASE SEQUENCE

PHASE SEQUENCE: PAGE 1 NEXT: PAGES)							
1 10	2 6	0	0	O I T	4 0	0	0
3 10	0	0	0	0	0	0	0
3 10	0	0	0	; 0 ; 0	0	0	0

DYNAMIC OMIT CONTROL PROGRAMMING

(program controller as shown below)

- 1. From Main Menu press '2' (Phase Control), then '1' (Phase Control Functions). Scroll to the bottom of the menu and enable Dynamic/Backup Control Functions 1 and 2.
- 2. From Phase Control Functions Menu press '2' (Dynamic/Backup Control Functions).

DYNAMIC/BACKUP CONTROL FUNCTION #01 OVERLAPS: ABCDEFGHIJKLMNOP IF OVERLAPS ARE ACTIVE | PHASES: 12345678910111213141516 IF PHASES ARE ON! X X OMIT PHASES CALL PHASES

PRESS 'NEXT'

DYNAMIC/BACKUP CONTROL FUNCTION #02 OVERLAPS: ABCDEFGHIJKLMNOP IF OVERLAPS ARE ACTIVE | OR PHASES: 12345678910111213141516 IF PHASES ARE ON! OMIT PHASES CALL PHASES

DYNAMIC OMIT PROGRAMMING COMPLETE

NOTE: THIS PROGRAMMING ENSURES THAT PHASE 7 WILL BE SERVED PRIOR TO PHASE 8 WHEN CONTROLLER IS ADVANCING FROM 2+6.

> PHASE 7 IS USED TO PROVIDE EXTENDED RED CLEARANCE BEFORE SERVING PHASE 8.

> > THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 13-0815 DESIGNED: June 2016 SEALED: 11/7/2016 REVISED:

Electrical Detail - Sheet 2 of 2

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR: NC 280 (Airport Road) I-26 Westbound Ramps

Buncombe County Fletcher ivision 13 PLAN DATE: October 2016 REVIEWED BY:

T. Joyce PREPARED BY: C. Strickland Reviewed BY: REVISIONS INIT. DATE

SIG. INVENTORY NO. 13-0815