


EDI MODEL 2018ECLIP-NC CONFLICT MONITOR

PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

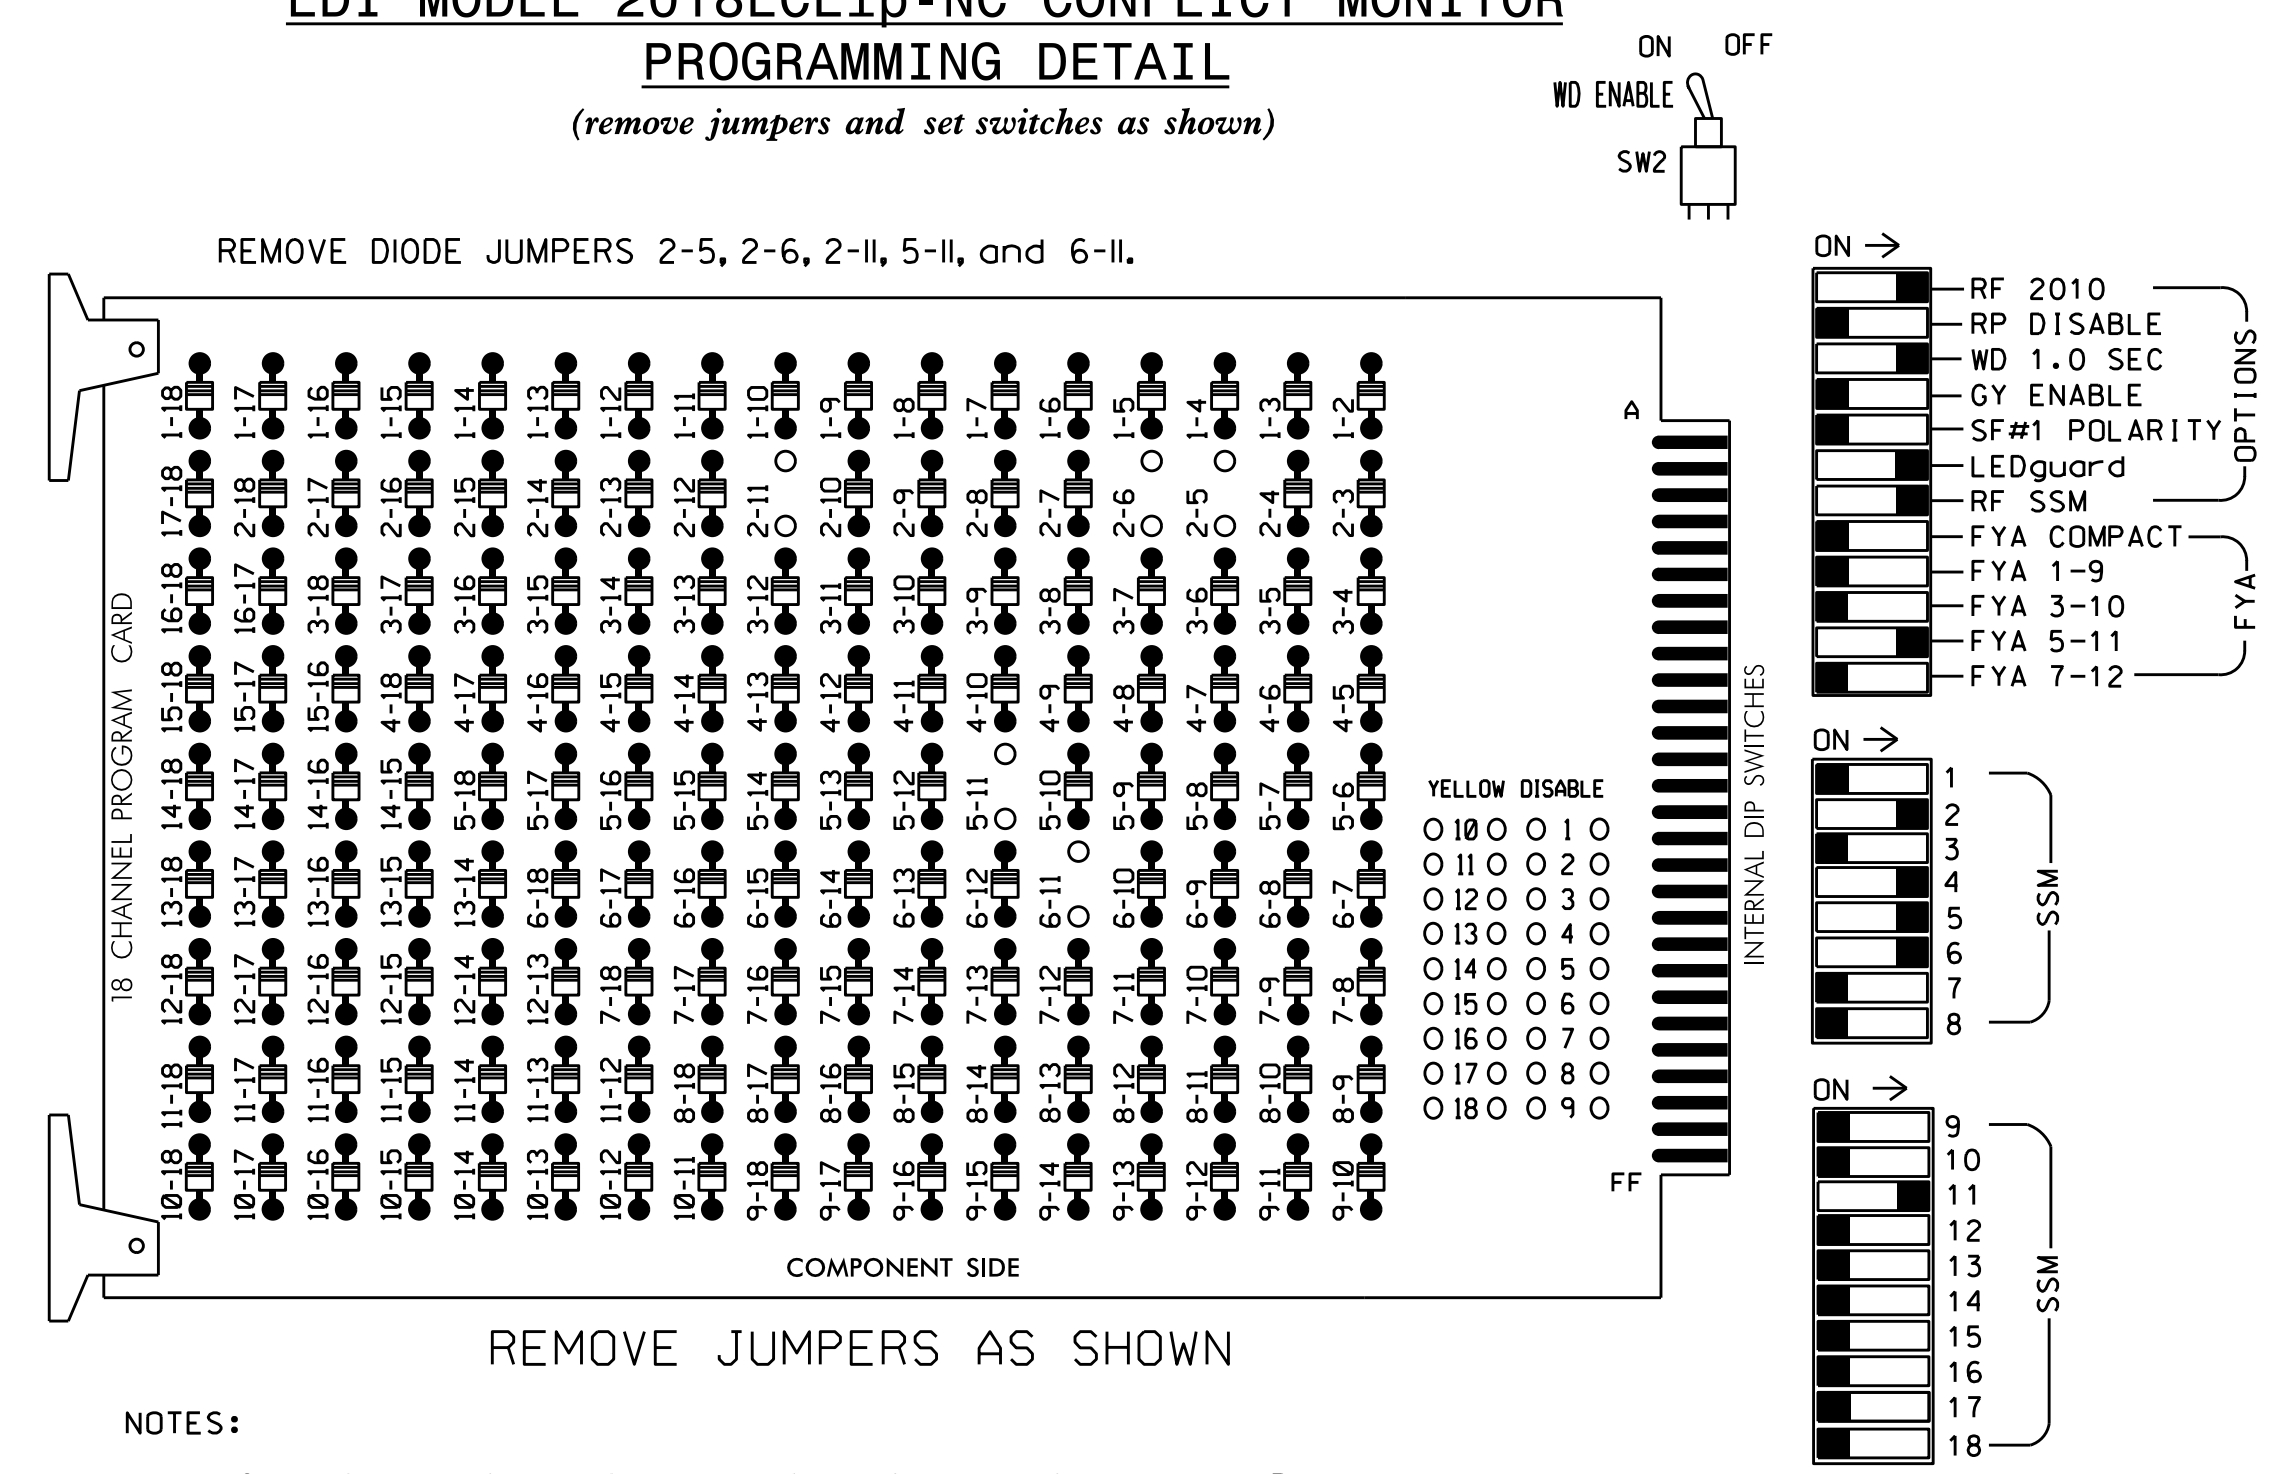

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all phases.
- Program phases 2 and 6 for Variable Initial and Gap Reduction.
- Program phases 2 and 6 for Start Up In Green.
- Program phases 2 and 6 for Yellow Flash.
- The cabinet and controller are part of the Asheville System.

EQUIPMENT INFORMATION

CONTROLLER.....2070E
 CABINET.....332 W/ AUX
 SOFTWARE.....ECONOLITE OASIS
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
 LOAD SWITCHES USED.....S2,S5,S7,S8,AUX S4
 PHASES USED.....2,4,5,6
 OVERLAP "A".....NOT USED
 OVERLAP "B".....NOT USED
 OVERLAP "C".....5+6
 OVERLAP "D".....NOT USED

PROJECT REFERENCE NO.	SHEET NO.
U-4715B	Fig. 163.1


SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42	NU	42	51*	61,62	NU	NU	NU	NU	NU	NU	51*	NU	NU
RED		128			101		*		134									
YELLOW		129			102				135									
GREEN		130			103				136									
RED ARROW																	A114	
YELLOW ARROW							132										A115	
FLASHING YELLOW ARROW																	A116	
GREEN ARROW							133	133										

NU = Not Used
 * Denotes install load resistor. See load resistor installation detail this sheet.
 * See pictorial of head wiring in detail below.

FYA SIGNAL WIRING DETAIL

(wire signal head as shown)

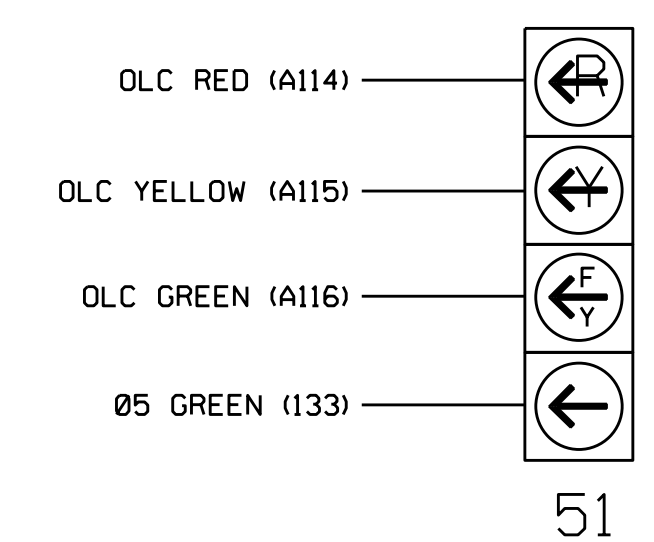


NOTE

The sequence display for signal head 51 requires special logic programming. See sheet 2 for programming instructions.

INPUT FILE POSITION LAYOUT

(front view)

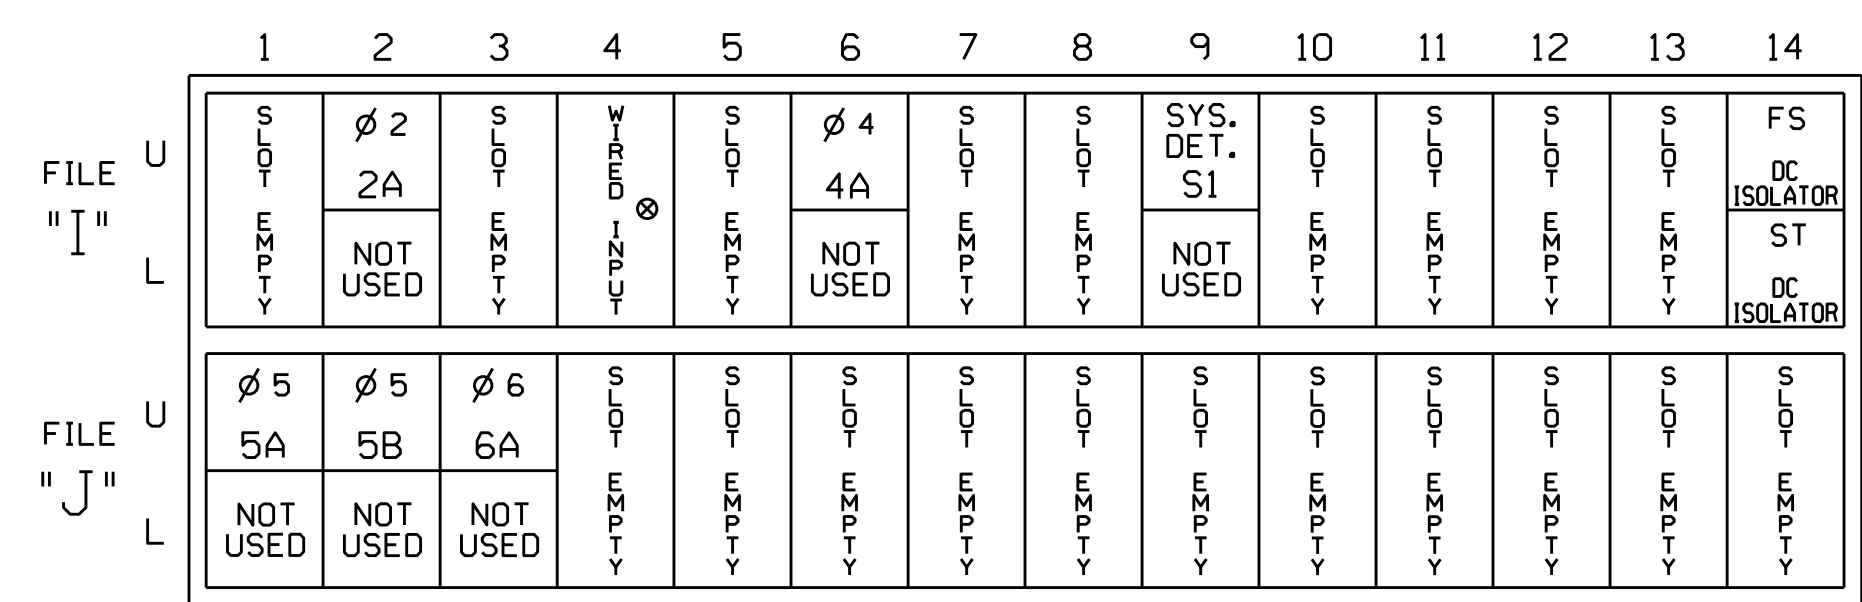


EX.: 1A, 2A, ETC. = LOOP NO.'S
 FS = FLASH SENSE
 ST = STOP TIME
 ⊗ Wired Input - Do not populate slot with detector card

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
2A	TB2-5,6	I2U	39	1	2	2	Y	Y			
4A	TB4-9,10	I6U	41	3	4	4	Y	Y			3
5A ¹	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	I4U	47	9	22	2	Y	Y	Y		3
5B	TB3-5,6	J2U	40	2	6	5	Y	Y			20
6A	TB3-9,10	J3U	64	26	36	6	Y	Y			
* S1	TB6-9,10	I9U	60	22	11	SYS					

¹Add jumper from J1-W to I4-W, on rear of input file.


* System detector only. Remove the vehicle phase assigned to this detector in the default programming.

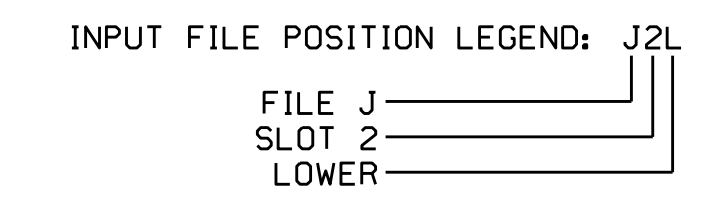

LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

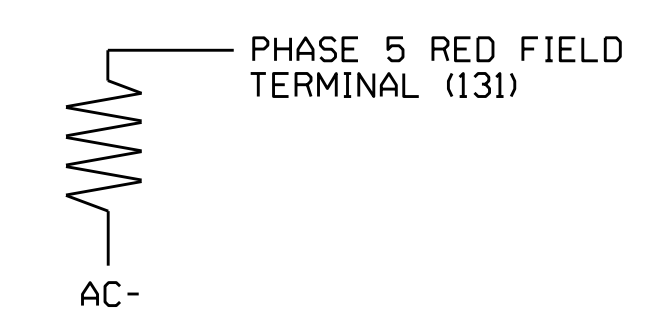

Electrical Detail - Sheet 1 of 2

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Prepared in the Offices of:

TRANSPORTATION MOBILITY AND SAFETY CONSULTANTS
 STATE OF NORTH CAROLINA
 Signal Management Solutions

750 N. Greenfield Pkwy, Garner, NC 27529

NC 191 (Brevard Road) at Blue Ridge Parkway Ramp

Division 13 Buncombe County Asheville

PLAN DATE: July 2016 REVIEWED BY: BAS

PREPARED BY: S. Armstrong REVIEWED BY:

REVISIONS INIT. DATE

Seal: KEITH M. MINS ENGINEER 036880

DocuSigned by: Keith M. Mins 9/7/2016

SIG. INVENTORY NO. 13-0837

15-AUG-2016 08:50
 S:\TCS\15-Signal\work\hous\51g_MonMstrFrngH30837_sml.ele.xxx.dgn
 S:\TCS\15-Signal\work\hous\51g_MonMstrFrngH30837_sml.ele.xxx.dgn
 S:\TCS\15-Signal\work\hous\51g_MonMstrFrngH30837_sml.ele.xxx.dgn