

- 1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS), SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5 AND 6.
- 2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

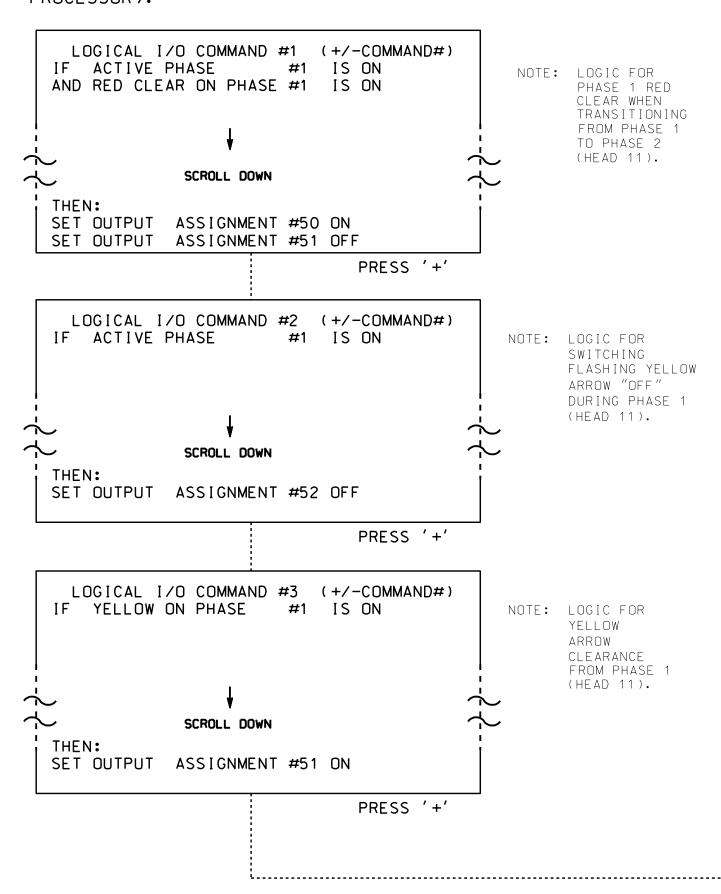

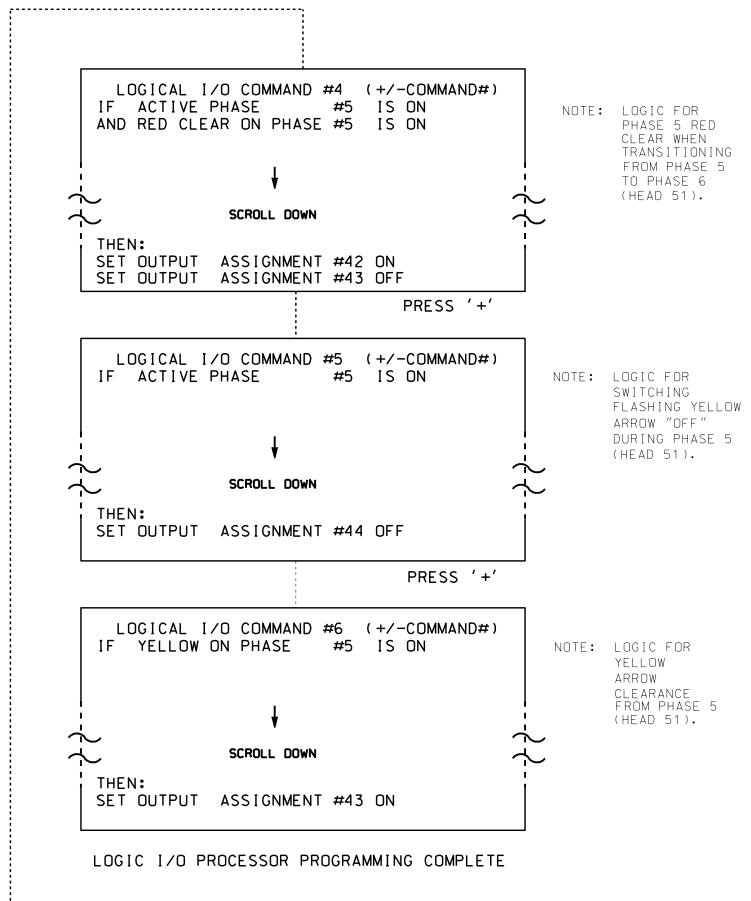

OUTPUT REFERENCE SCHEDULE


OUTPUT 42 = Overlap C Red
OUTPUT 43 = Overlap C Yellow
OUTPUT 44 = Overlap C Green
OUTPUT 50 = Overlap A Red
OUTPUT 51 = Overlap A Yellow
OUTPUT 52 = Overlap A Green

U-4715 B Sig.199.2

OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS). THEN '1' (VEHICLE OVERLAP SETTINGS).

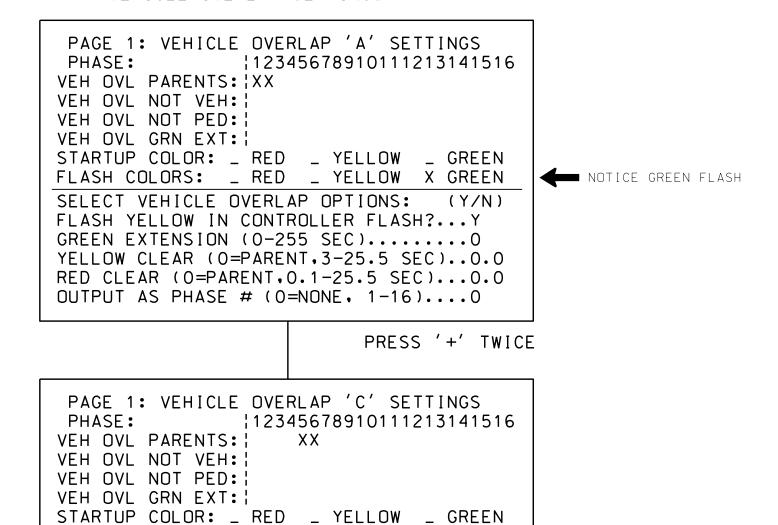

OVERLAP PROGRAMMING COMPLETE

750 N.Greenfield Pkwy.Garner.NC 27529

OUTPUT AS PHASE # (0=NONE, 1-16)....0

FLASH COLORS: _ RED _ YELLOW X GREEN


SELECT VEHICLE OVERLAP OPTIONS: (Y/N) FLASH YELLOW IN CONTROLLER FLASH?...Y GREEN EXTENSION (0-255 SEC)......

YELLOW CLEAR (O=PARENT,3-25.5 SEC)..0.0

RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 13-1193
DESIGNED: February 2016
SEALED: 8/18/2016
REVISED:

NOTICE GREEN FLASH

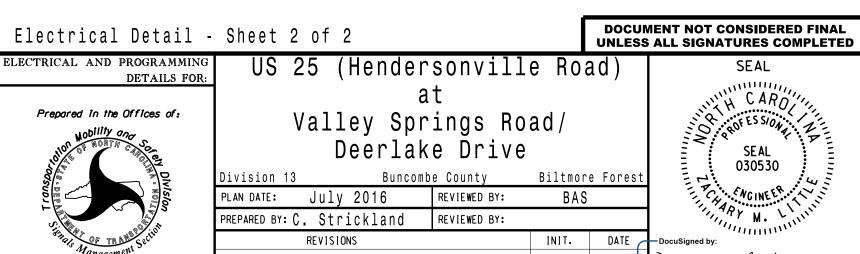

SIG. INVENTORY NO. 13-1193

19-AUG-2016 14:53 S:*ITS&SU*ITS Signals*Workgroups*Sig Man*Strickland*131193_ _cestrickland