

- 1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5 AND 6.
- 2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O

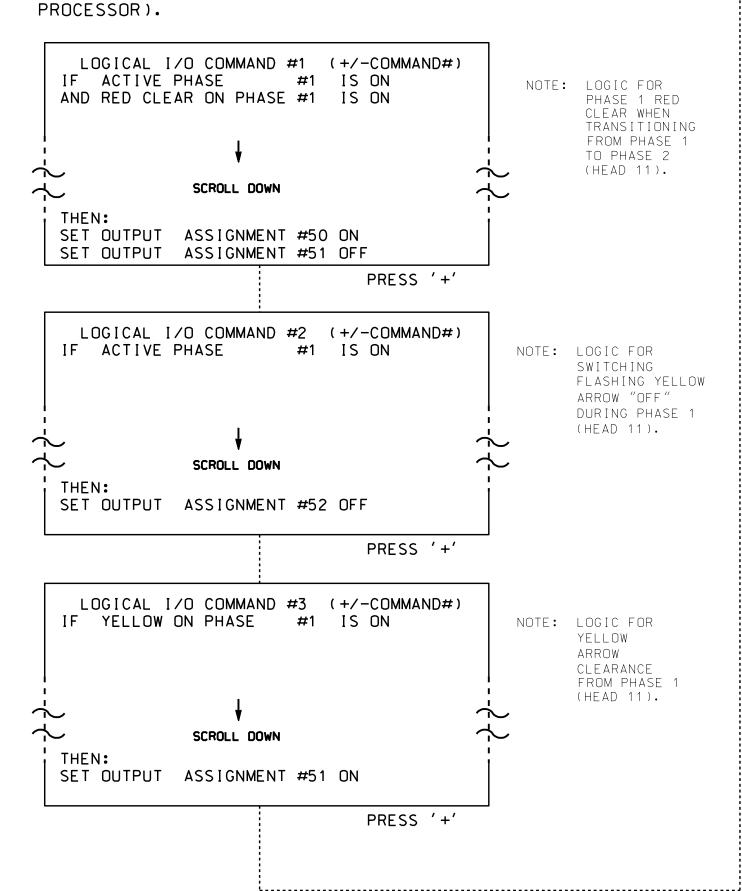

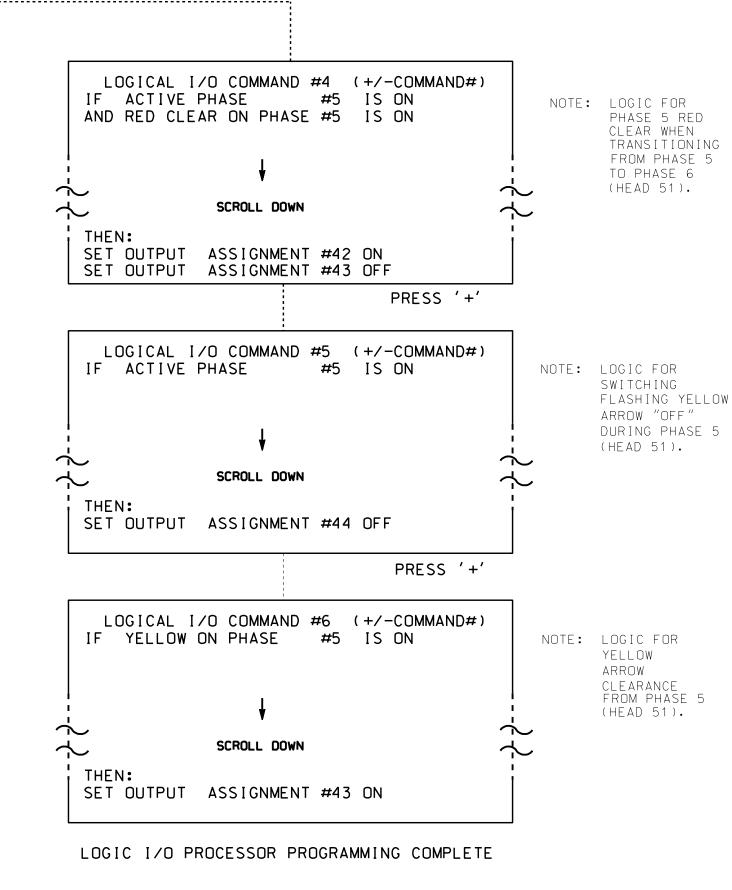

## OUTPUT REFERENCE SCHEDULE


OUTPUT 42 = Overlap C Red
OUTPUT 43 = Overlap C Yellow
OUTPUT 44 = Overlap C Green
OUTPUT 50 = Overlap A Red
OUTPUT 51 = Overlap A Yellow
OUTPUT 52 = Overlap A Green

U-4715B Sig. 202.2

## OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS). THEN '1' (VEHICLE OVERLAP SETTINGS).

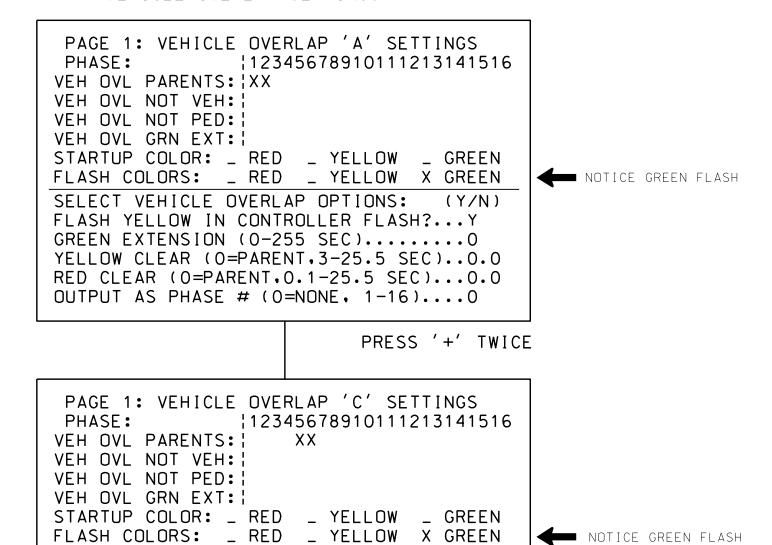

OVERLAP PROGRAMMING COMPLETE

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)

FLASH YELLOW IN CONTROLLER FLASH?...Y


GREEN EXTENSION (0-255 SEC).....0

OUTPUT AS PHASE # (0=NONE, 1-16)....0

YELLOW CLEAR (O=PARENT,3-25.5 SEC)..0.0

RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 13-1197
DESIGNED: December 2015
SEALED: 8/8/2016
REVISED: N/A

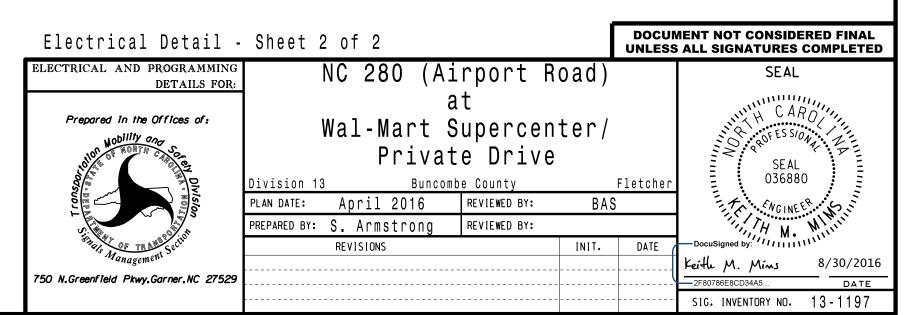

S:\*IIS&SU#IIS SIGNAIS\*WORKGroups\*SIG MAN\*Armstrong\*I31197\_SM\_616\_XX Sarmstrong -