
(program controller as shown below)


- 1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3 AND 4.
- 2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

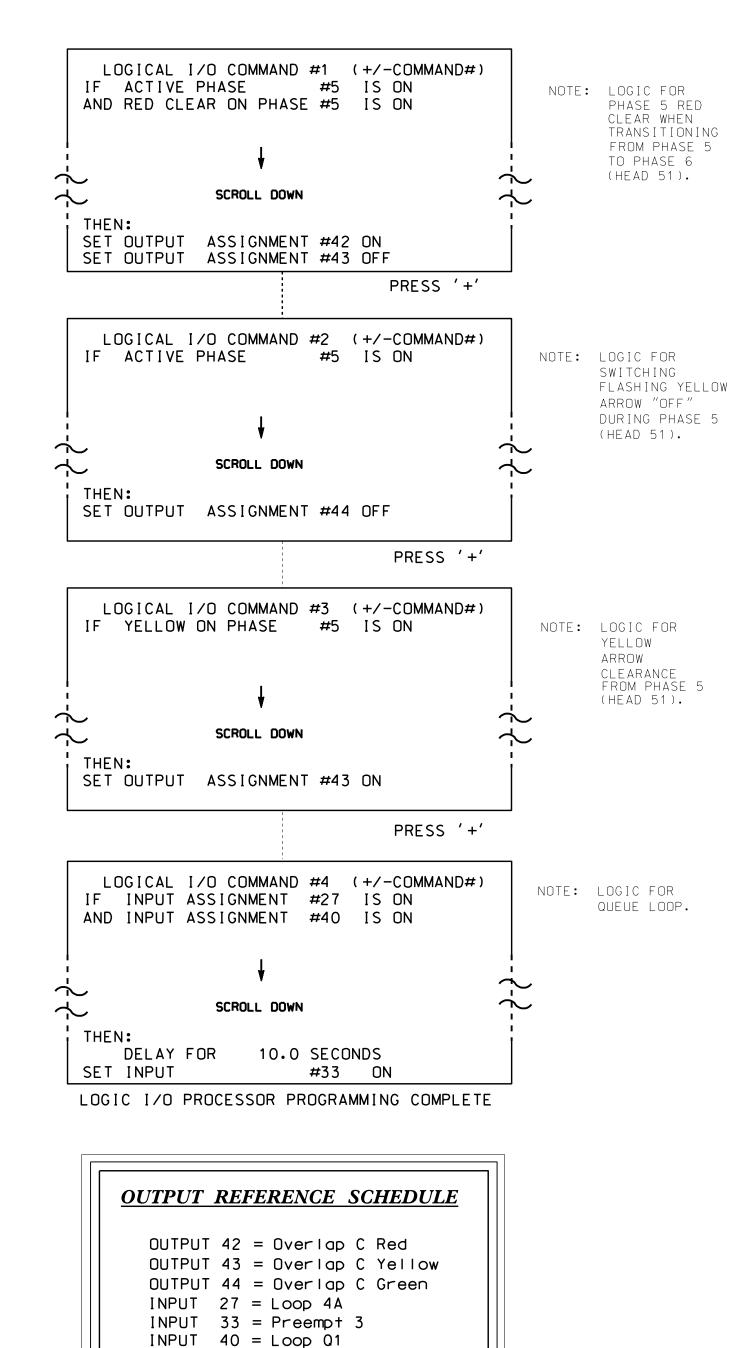

OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS). THEN '1' (VEHICLE OVERLAP SETTINGS).

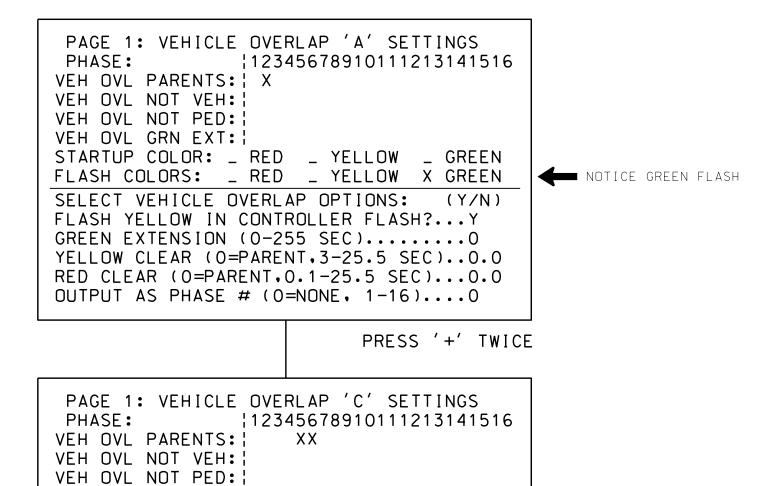

OVERLAP PROGRAMMING COMPLETE

STARTUP COLOR: _ RED _ YELLOW _ GREEN

FLASH COLORS: _ RED _ YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N) FLASH YELLOW IN CONTROLLER FLASH?...Y

YELLOW CLEAR (O=PARENT,3-25.5 SEC)..0.0

RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0


GREEN EXTENSION (0-255 SEC).....0

OUTPUT AS PHASE # (0=NONE, 1-16)....0

VEH OVL GRN EXT: :

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 14-0772 DESIGNED: December 2015 SEALED: 11-07-16 REVISED: N/A

NOTICE GREEN FLASH

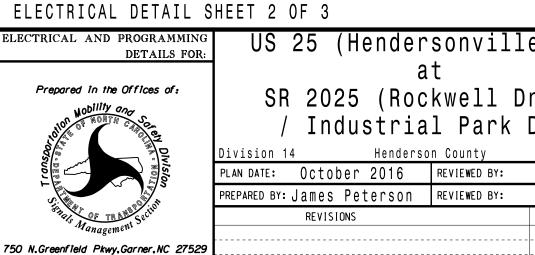

US 25 (Hendersonville Rd.) SR 2025 (Rockwell Drive)

Industrial Park Drive

INIT. DATE

SIG. INVENTORY NO. 14-0772

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

PROJECT REFERENCE NO.

U-4715B

Sig. 225.2