
ECONOLITE ASC/3-2070 LOAD SWITCH ASSIGNMENT DETAIL

(program controller as shown)

To assign load switch S10 as OLE, program LD SWITCH 7 as OVLP '5' TYPE '0' as shown below. To change load switch S11 back to a vehicle load switch, program LD SWITCH 8 as PHASE '8' TYPE 'V' as shown below.

1. From Main Menu select | 1. CONFIGURATION

2. From CONFIGURATION Submenu select 3. LOAD SW ASSIGN

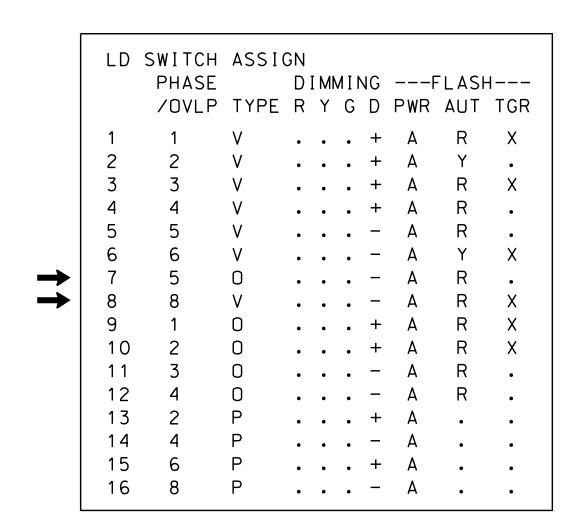

ECONOLITE ASC/3-2070 OVERLAP PROGRAMMING DETAIL

(program controller as shown)

1. From Main Menu select 2. CONTROLLER

2. From CONTROLLER Submenu select | 2. VEHICLE OVERLAPS

Toggle Four Times

OVERLAP E

Select TMG VEH OVLP [E] and 'NORMAL'

TMG VEH OVLP...[E] TYPE:NORMAL PHASES 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 LAG GRN 0.0 YEL 0.0 RED 0.0

END PROGRAMMING

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 10-1732T2 DESIGNED: July 2017 SEALED: 9/25/2017 REVISED: N/A

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED Electrical Detail - Temp Design 2 - Phase II - Sheet 2 of 2 SR 2894 (Concord Mills Blvd.) Shopping Center Entrance Cabarrus County PLAN DATE: September 2017 REVIEWED BY: PREPARED BY: S. Armstrong Reviewed BY: REVISIONS INIT. DATE