

	A2 = Overlap C Red	
OUTPUT	43 = Overlap C Yellow 44 = Overlap C Green	

PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

CLEARANCE FROM PHASE 5 (HEAD 51).

OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PRESS '+' TWICE

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS PHASE: 12345678910111213141516 VEH OVL PARENTS: XX VEH OVL NOT VEH: VEH OVL NOT PED: VEH OVL GRN EXT: STARTUP COLOR: _ RED _ YELLOW _ GREEN FLASH COLORS: _ RED _ YELLOW X GREEN SELECT VEHICLE OVERLAP OPTIONS: (Y/N) FLASH YELLOW IN CONTROLLER FLASH?Y GREEN EXTENSION (0-255 SEC)0 YELLOW CLEAR (0=PARENT,3-25.5 SEC)0.0 RED CLEAR (0=PARENT,0.1-25.5 SEC)0.0 OUTPUT AS PHASE # (0=NONE, 1-16)0	
PRESS '+'	
PAGE 1: VEHICLE OVERLAP 'D' SETTINGS PHASE: 12345678910111213141516 VEH OVL PARENTS: XX VEH OVL NOT VEH: VEH OVL NOT PED: VEH OVL GRN EXT: STARTUP COLOR: _ RED _ YELLOW _ GREEN FLASH COLORS: _ RED _ YELLOW _ GREEN SELECT VEHICLE OVERLAP OPTIONS: (Y/N) FLASH YELLOW IN CONTROLLER FLASH?N GREEN EXTENSION (0-255 SEC)0	

OVERLAP PROGRAMMING COMPLETE

YELLOW CLEAR (O=PARENT, 3-25.5 SEC)..0.0

RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0

OUTPUT AS PHASE # (0=NONE, 1-16)....0

REVISIONS

INIT. DATE

3/5/2018

SIG. INVENTORY NO. 09-1127

DATE

