
(program controller as shown below)

- 1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2 AND 3.
- 2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

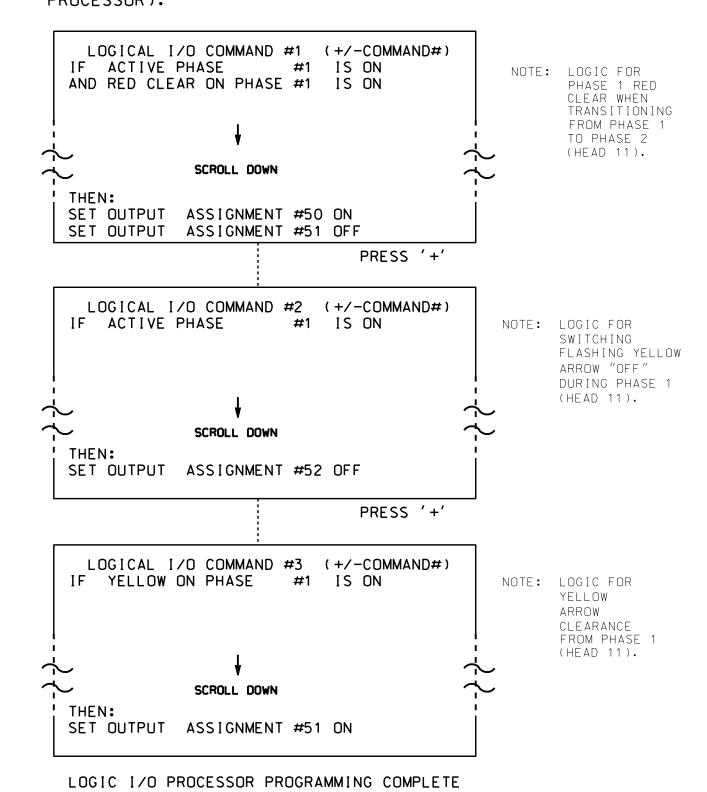

OUTPUT REFERENCE SCHEDULE


OUTPUT 50 = Overlap A Red OUTPUT 51 = Overlap A Yellow OUTPUT 52 = Overlap A Green

PROJECT REFERENCE NO. Sig 4 2 U-4734

OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

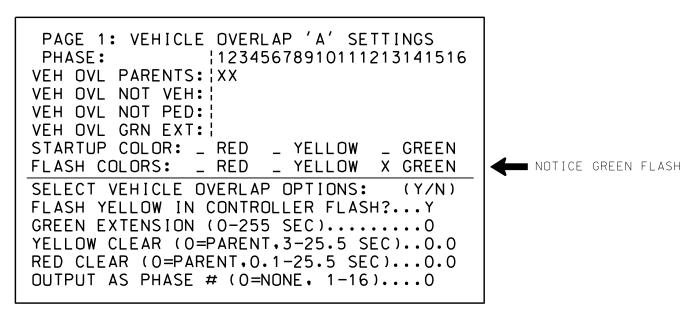


OVERLAP PROGRAMMING COMPLETE

OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS). THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

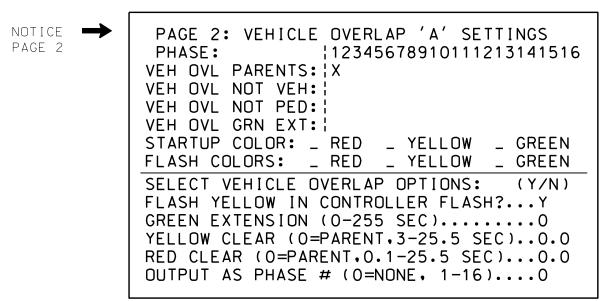

OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-1129 DESIGNED: January 2018 SEALED: 2-28-18 REVISED: N/A

Electrical Detail - Sheet 2 of 4 ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared in the Offices of: 750 N.Greenfield Pkwy, Garner, NC 27529

NC 150 (N. Main Street) SR 2037 (County Line Road)

> Forsyth County PLAN DATE: January 2018 REVIEWED BY: PREPARED BY: James Peterson | REVIEWED BY: REVISIONS

INIT. DATE SIG. INVENTORY NO. 09-1129

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL

SIGNATURES COMPLETED

SEAL