LOGICAL I/O PROCESSOR PROGRAMMING DETAIL


(program controller as shown below)

NOTE

WHEN PREEMPT DELAY TIMER IS IN USE STEP 1 SHOWN BELOW IS NECESSARY TO ENSURE PILOT LAMP IN FIRE HOUSE WILL ACTIVATE IMMEDIATELY AFTER PUSH BUTTON IS DEPRESSED:


STEP 1

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

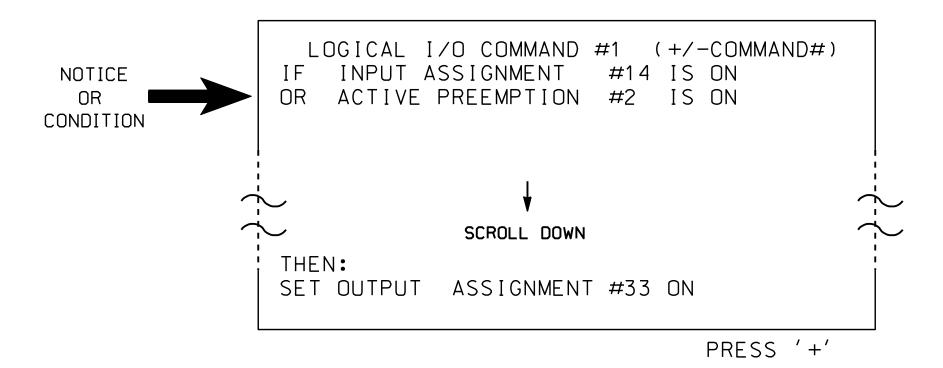


STEP 2

IN ORDER FOR PILOT LAMP IN FIRE HOUSE TO DEACTIVATE IMMEDIATELY AFTER ENDING PREEMPTION, PROGRAM THE FOLLOWING:

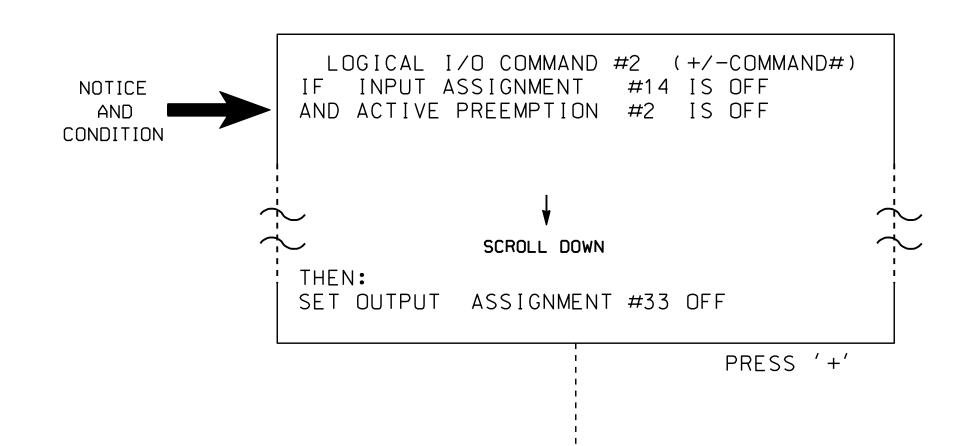


PROGRAMMING COMMANDS 3, 4 AND 5 ARE NECESSARY FOR SIGNAL HEAD 65 TO OPERATE AS SHOWN ON THE SIGNAL DESIGN PLANS.

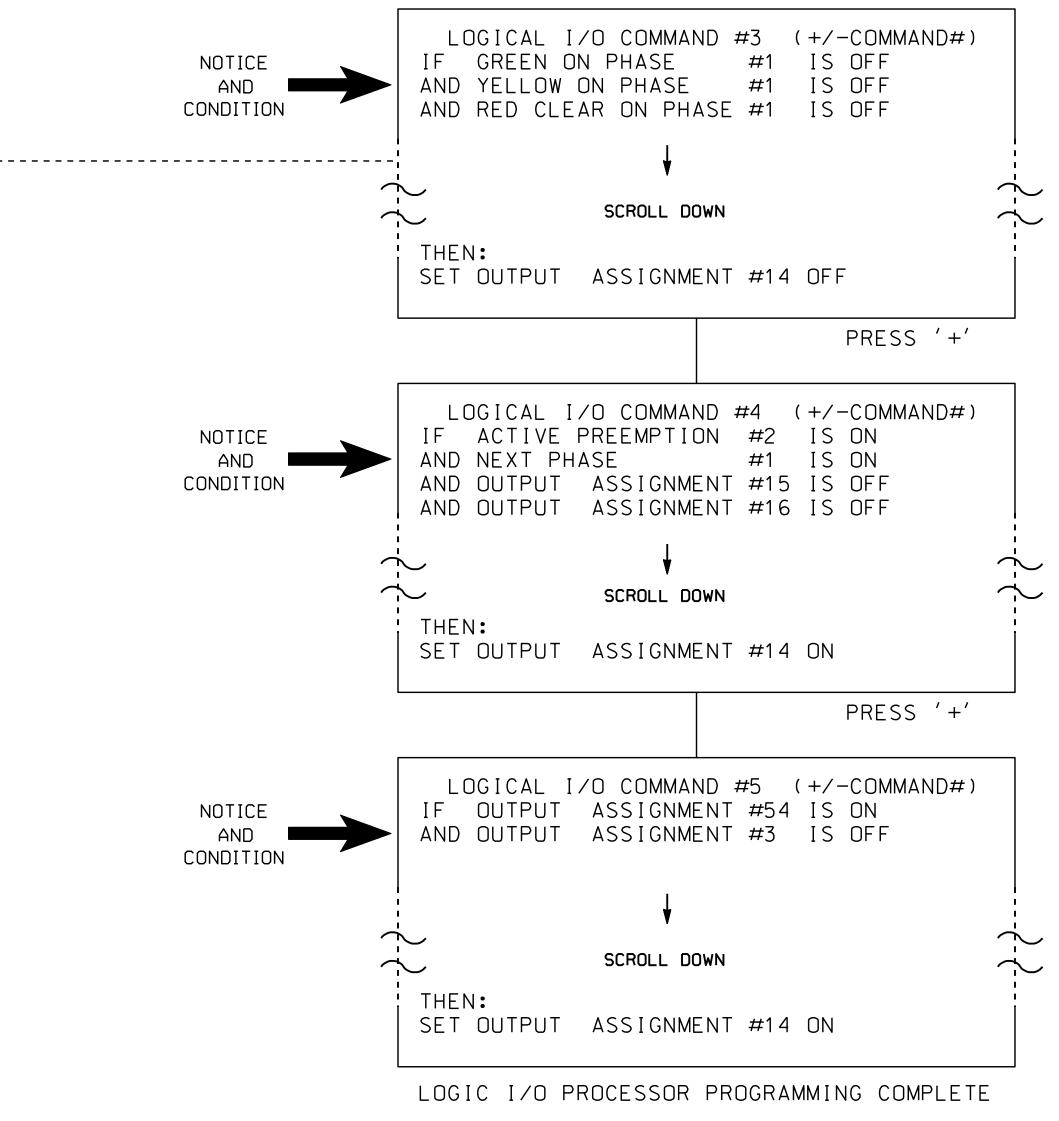


STEP 3

FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS), SCROLL TO THE BOTTOM OF THE MENU AND ENABLE LOGICAL PROCESSOR (ACT LOGIC 1-16) BY FLAGGING #1, #2, #3, #4 AND #5.

END OF PROGRAM.

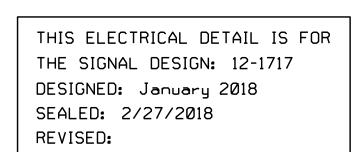

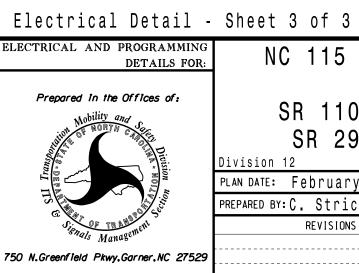

NC 115 (Mecklenburg Hwy.)

SEAL
031001

SEAL
031001

Docusigned by:

D. told Joya

A90CADFDBD4241D...

DATE

SIG. INVENTORY NO. 12-1717

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

S:*IIS&SU*IIS SIGNAIS*WORKGroups*Sig Man*Strick|and*121717_SM_6 cestrickland