

## LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, AND 12.
2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON  
AND RED CLEAR ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #50 ON  
SET OUTPUT ASSIGNMENT #51 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

LOGICAL I/O COMMAND #2 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #52 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW OFF DURING PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #3 (+/-COMMAND#)  
IF YELLOW ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #51 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #4 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON  
AND RED CLEAR ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #42 ON  
SET OUTPUT ASSIGNMENT #43 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

LOGICAL I/O COMMAND #5 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #44 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW OFF DURING PHASE 5 (HEAD 51).

LOGICAL I/O COMMAND #6 (+/-COMMAND#)  
IF YELLOW ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #43 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGICAL I/O COMMAND #7 (+/-COMMAND#)  
IF ACTIVE PHASE #3 IS ON  
AND RED CLEAR ON PHASE #3 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #47 ON  
SET OUTPUT ASSIGNMENT #48 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 3 RED CLEAR WHEN TRANSITIONING FROM PHASE 3 TO PHASE 4 (HEAD 31).

LOGICAL I/O COMMAND #8 (+/-COMMAND#)  
IF ACTIVE PHASE #3 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #49 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW OFF DURING PHASE 3 (HEAD 31).

LOGICAL I/O COMMAND #9 (+/-COMMAND#)  
IF YELLOW ON PHASE #3 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #48 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 3 (HEAD 31).

LOGICAL I/O COMMAND #10 (+/-COMMAND#)  
IF ACTIVE PHASE #7 IS ON  
AND RED CLEAR ON PHASE #7 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #39 ON  
SET OUTPUT ASSIGNMENT #40 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 7 RED CLEAR WHEN TRANSITIONING FROM PHASE 7 TO PHASE 8 (HEAD 71).

LOGICAL I/O COMMAND #11 (+/-COMMAND#)  
IF ACTIVE PHASE #7 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #41 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW OFF DURING PHASE 7 (HEAD 71).

LOGICAL I/O COMMAND #12 (+/-COMMAND#)  
IF YELLOW ON PHASE #7 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #40 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 7 (HEAD 71).

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

## OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: 12345678910111213141516  
VEH OVL PARENTS: XX  
VEH OVL NOT VEH:  
VEH OVL NOT PED:  
VEH OVL GRN EXT:  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

← NOTICE GREEN FLASH

PRESS '+'

PAGE 1: VEHICLE OVERLAP 'B' SETTINGS  
PHASE: 12345678910111213141516  
VEH OVL PARENTS: XX  
VEH OVL NOT VEH:  
VEH OVL NOT PED:  
VEH OVL GRN EXT:  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

← NOTICE GREEN FLASH

PRESS '+'

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: 12345678910111213141516  
VEH OVL PARENTS: XX  
VEH OVL NOT VEH:  
VEH OVL NOT PED:  
VEH OVL GRN EXT:  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

← NOTICE GREEN FLASH

PRESS '+'

PAGE 1: VEHICLE OVERLAP 'D' SETTINGS  
PHASE: 12345678910111213141516  
VEH OVL PARENTS: XX  
VEH OVL NOT VEH:  
VEH OVL NOT PED:  
VEH OVL GRN EXT:  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

← NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

## FLASHER CIRCUIT MODIFICATION DETAIL

IN ORDER TO INSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:

1. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
2. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
3. REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

### OUTPUT REFERENCE SCHEDULE

USE TO INTERPRET LOGIC PROCESSOR

- OUTPUT 39 = Overlap D Red
- OUTPUT 40 = Overlap D Yellow
- OUTPUT 41 = Overlap D Green
- OUTPUT 42 = Overlap C Red
- OUTPUT 43 = Overlap C Yellow
- OUTPUT 44 = Overlap C Green
- OUTPUT 47 = Overlap B Red
- OUTPUT 48 = Overlap B Yellow
- OUTPUT 49 = Overlap B Green
- OUTPUT 50 = Overlap A Red
- OUTPUT 51 = Overlap A Yellow
- OUTPUT 52 = Overlap A Green

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 10-0617T1

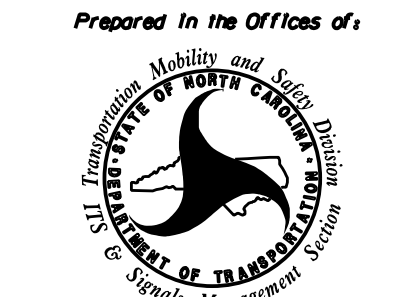
DESIGNED: December 2017

SEALED: 04-23-2018

REVISED: N/A

Electrical Detail - Sheet 2 of 2  
Signal Upgrade  
Temporary Design 1

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

ELECTRICAL AND PROGRAMMING DETAILS FOR:	SR 2136 (Gilead Road) at US 21 (Statesville Road)	SEAL NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 031464 NATASHA R. SIMMONS
Prepared in the Office of: 	Division 10 Mecklenburg Co. Huntersville PLAN DATE: December 2017 REVIEWED BY: A.D. Klinksiek PREPARED BY: A.H. Thornburg REVIEWED BY: N.R. Simmons	DocuSigned by: 4/23/2018 SIGNATURE DATE SIG. INVENTORY NO. 10-0617 T1
HNTB HNTB NORTH CAROLINA, P.C. 343 E. Six Forks Road, Suite 200 Raleigh, North Carolina 27609 NC License No: C-1554 (919) 546-8997		