


**EDI MODEL MMU2-16LEip
MALFUNCTION MANAGEMENT UNIT
PROGRAMMING DETAIL**

(program card and tables as shown below)

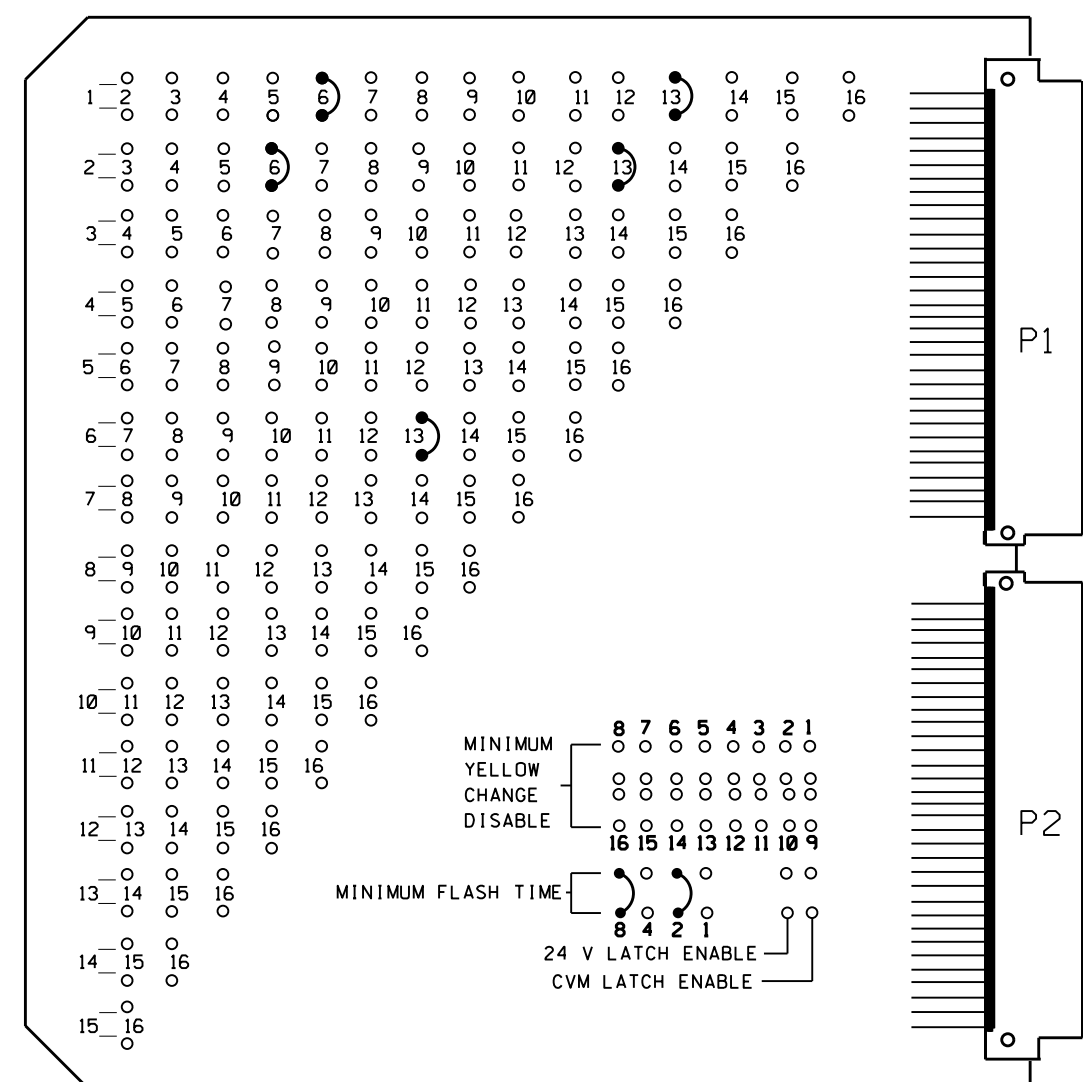

MMU PROGRAMMING CARD

**FIELD CHECK ENABLE
DUAL IND ENABLE
RED FAIL ENABLE**

CHANNEL NUMBER	ENABLE/DISABLE
1	DISABLE
2	ENABLE
3	DISABLE
4	ENABLE
5	DISABLE
6	ENABLE
7	DISABLE
8	DISABLE
9	DISABLE
10	DISABLE
11	DISABLE
12	DISABLE
13	ENABLE
14	DISABLE
15	DISABLE
16	DISABLE

UNIT OPTIONS

OPTION	SETTING
RECURRENT PULSE	ON
WALK DISABLE	OFF
LOG CVM FAULTS	ON
EXTERN WATCHDOG	OFF
24V-2=12VDC	OFF
PGM CARD MEMORY	ON
LEDguard	ON
FORCE TYPE 16	OFF
TYPE12-SDLC	OFF
VM 3x/Day Latch	ON

FLASHING YELLOW ARROW

CONFIG MODE	ENABLE CHANNEL PAIR, FYA
CH 1-13	ON
CH 3-14	OFF
CH 5-15	OFF
CH 7-16	OFF
RED/YEL INPUT ENABLE	
CH 1	ON
CH 3	OFF
CH 5	OFF
CH 7	OFF
FLASH RATE FAULT	ON
FYA TRAP DETECT	ON

MMU PROGRAMMING NOTE
ENSURE YELLOW CHANGE PLUS RED CLEARANCE MONITORING IS ENABLED FOR ALL CHANNELS.

DETECTOR RACK SET-UP DETAIL

INSERT DETECTOR CARDS IN RACK ACCORDING TO THE DETAIL SHOWN BELOW. PARTICULAR DETECTOR CHANNELS WILL CALL PHASES INDICATED.

RACK #1

BIU	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT	SLOT
	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY	EMPTY

WIRE LOOPS TO TERMINALS ON LOOP PANEL AS SHOWN IN THE CHART BELOW

LOOP NO.	LOOP PANEL TERMINALS
NU	L1A,L1B
NU	L2A,L2B
NU	L3A,L3B
NU	L4A,L4B
NU	L5A,L5B
NU	L6A,L6B
NU	L7A,L7B
NU	L8A,L8B
NU	L9A,L9B
NU	L10A,L10B
NU	L11A,L11B
NU	L12A,L12B
NU	L13A,L13B
NU	L14A,L14B
NU	L15A,L15B
NU	L16A,L16B

PROGRAM CONTROLLER DETECTORS ACCORDING TO THE SCHEDULE SHOWN IN THE CHART BELOW

CONTROLLER DETECTOR NO.	FUNCTION	TIMING	
		FEATURE	TIME (SEC)
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			

SPECIAL DETECTOR NOTE

Install a video detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer approved mounting locations to accomplish the detection schemes shown on the Signal Design Plans.

NOTES

- To prevent "flash-conflict" problems, wire all unused load switches to flash red. Verify that signal heads flash in accordance with the signal plans.
- To prevent red failures on unused monitor channels, tie unused load switch red outputs 3,5,7,8,9,10,11,12,14,15, and 16 to load switch AC+ by inserting a jumper plug in the unused load switch socket from pin 1 (LS AC+) to pin 3 (RED out). Make sure all flash transfer relays are in place.
- Program controller to start up in phase 2 Green and 6 Green.
- Set power-up flash time to 10 seconds and implement on the Malfunction Management Unit. Set controller power-up flash time to 0 seconds.
- Enable simultaneous gap-out feature for all phases.
- Program detectors in accordance with the manufacturer's instructions to accomplish the detection schemes shown on the signal design plans.
- Program detector call delay and extension timing on the controller, unless otherwise specified.
- Set all detector card unit channels to "presence" mode.
- Program phases 2 and 6 for volume density operation.
- The cabinet and controller are a part of the Cary Signal System.

SIGNAL HEAD HOOK-UP CHART

PHASE	1	2	3	4	5	6	7	8	2 PED	4 PED	6 PED	8 PED	OLA	OLB	OLC	OLD
SIGNAL HEAD NO.	11	21,22	NU	41, 42,43	44	NU	61,62	NU	NU	NU	NU	NU	11	NU	NU	NU
RED	*	2R		4R	4R		6R									
YELLOW	*	2Y			4Y		6Y									
GREEN		2G			4G											
RED ARROW				4R									13R			
YELLOW ARROW				4Y	4Y								13Y			
FLASHING YELLOW ARROW													13G			
GREEN ARROW	1G			4G	4G		6G									


NU = Not Used
* Denotes install load resistor. See Load Resistor Installation Detail on sheet 2.
★ See pictorial of head wiring detail this sheet.

EQUIPMENT INFORMATION

CONTROLLER.....2070EN2
CABINETNC-8 [TS-2]
SOFTWAREECONOLITE ASC/3-2070
CABINET MOUNT.....BASE
LOADBAY POSITIONS.....16
LOAD SWITCHES USED.....1,2,4,6,13
PHASES USED.....1,2,4,6
OLA.....*
OLB.....NOT USED
OLC.....NOT USED
OLD.....NOT USED
* SEE OVERLAP PROGRAMMING DETAIL ON SHEET 2

FYA SIGNAL WIRING DETAIL

(wire signal head as shown)

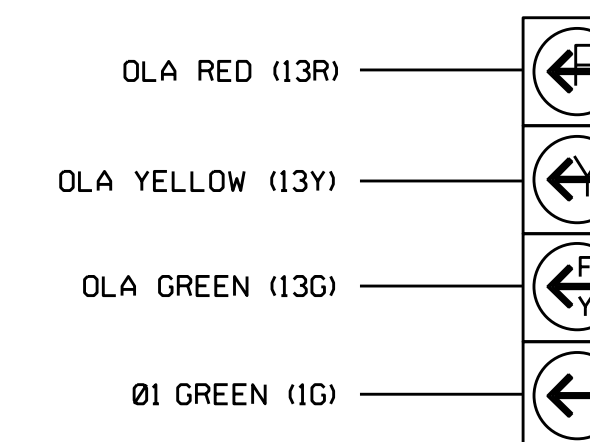

11

LOAD SWITCH ASSIGNMENT DETAIL


(program controller according to schedule in chart below)

LOAD SWITCH NUMBER	FUNCTION
1	Ø 1
2	Ø 2
3	Ø 3
4	Ø 4
5	Ø 5
6	Ø 6
7	Ø 7
8	Ø 8
9	Ø 2 PED
10	Ø 4 PED
11	Ø 6 PED
12	Ø 8 PED
13	OLA
14	OLB
15	OLC
16	OLD

THIS ELECTRICAL DETAIL SUPERSEDES THE DETAIL SEALED ON 8/1/2019.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 05-0947T1
DESIGNED: September 2019
SEALED: 10/2/2019
REVISED: N/A

Electrical Detail - Temp Design 1 (TMP Phase I)
Sheet 1 of 2

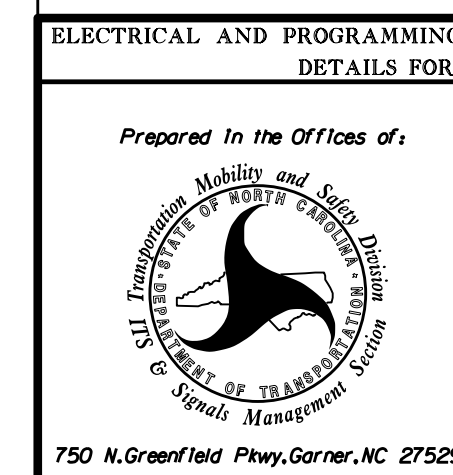


SR 3015 (Airport Boulevard)
at
I-40 EB Ramps

Division 5 Wake County Morrisville

PLAN DATE: October 2019 REVIEWED BY:
PREPARED BY: S. Armstrong REVIEWED BY:

REVISIONS INIT. DATE

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

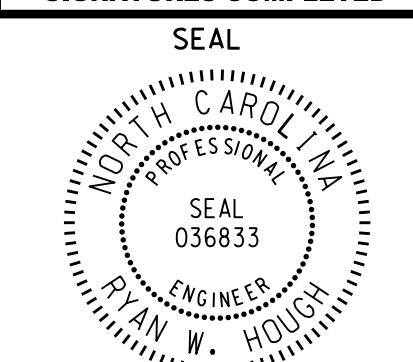

DocuSigned by: Ryan W. Hough 10/8/2019

SIG. INVENTORY NO. 05-0947T1