ECONOLITE ASC/3-2070 BACKUP PROTECTION ENABLE PROGRAMMING

(program controller as shown)

- 1. From Main Menu select | 1. CONFIGURATION |
- 2. From CONFIGURATION Submenu select | 1. CONTROLLER SEQ
- 3. From CONTROLLER SEQUENCE Submenu select | 3. BACKUP PREVENT PHASES

Follow programming as shown below. On the 'ENABLE BACKUP PREVENT' screen move cursor to the appropriate field and press 'YES/NO' on the controller keypad to toggle field value between 'X', 'B', 'C' and 'OFF'.

ENABLE BACKUP PREVENT TMG/BKUP 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 5 8 16

END PROGRAMMING

NOTE

1. 'B' without a 'C' programmed for the 'TIMING' (row) phase inhibits the controller from servicing the 'BACKUP' (column) phase when the 'TIMING' (row) phase is active, or next, until the controller goes through Red Revert and Red Clear. Make sure the proper Red Revert and Red Clear times shown on the Signal Design plan are programmed in the controller phase timing.

ECONOLITE ASC/3-2070 "PHASES IN USE" PROGRAMMING ASSIGNMENT DETAIL

(program controller as shown)

- 1. From Main Menu select | 1. CONFIGURATION
- 2. From DETECTOR Submenu select | 2. PHASES IN USE/PED

PHASES IN USE / EXCLUSIVE PED									
PHASE	1	2	3	4	5	6	7	8	
IN USE	X	X	X	X	X	X	•	•	
EXCLUSIVE PED	•	•	•	•	•	•	•	•	
PHASE	9	10	11	12	13	14	15	16	
IN USE	•	X	•	•	•	•	•	•	
EXCLUSIVE PED	•	•	•	•	•	•	•	•	

ECONOLITE ASC/3-2070 LOAD SWITCH ASSIGNMENT DETAIL

(program controller as shown)

To assign load switch S4 as OLG, program LD SWITCH 3 as OVLP '7' TYPE '0' as shown below.

- 1. From Main Menu select | 1. CONFIGURATION
- 2. From CONFIGURATION Submenu select 3. LOAD SW ASSIGN

LD SWITCH ASSIGN DIMMING ---FLASH---PHASE /OVLP TYPE R Y G D PWR AUT TGR NOTICE OVLP 5 ASSIGNED TO -. . . + A . . 16 8 P . . . - A . .

> THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: Ø1-Ø519 DESIGNED: MARCH 2018 SEALED: Ø8/21/2018 REVISED: N/A

Electrical Detail - Sheet 2 of 4

LD SWITCH 3

ELECTRICAL AND PROGRAMMING Prepared for the Offices of:

8000 Regency Parkway, Suite 175 Cary, NC 27518 NC License No. C-2213 (919) 650-1038

US 17 Bus. (Ehringhaus Street) Griffin Street/ Post Office Entrance

Division 1 Pasquotank County Elizabeth City PLAN DATE: March 2018 REVIEWED BY: AJ Davis PREPARED BY: DJ White REVIEWED BY: LM Moon REVISIONS INIT. DATE

DOCUMENT NOT CONSIDERED

FINAL UNLESS ALL SIGNATURES COMPLETED

Sig. 36.2

U-5942

Lisa M. Moon SIG. INVENTORY NO. 01-0519

ECONOLITE ASC/3-2070 CONTROLLER SEQUENCE PROGRAMMING DETAIL

(program controller as shown)

- 1. From Main Menu select 1. CONFIGURATION
- 2. From CONFIGURATION Submenu select | 1. CONTROLLER SEQ
- 3. From CONTROLLER SEQUENCE Submenu select | 1. PHASE RING SEQUENCE AND ASSIGNMENT


Move the cursor to the SEQUENCE COMMANDS field, toggle to select "C" mode, enter phases in desired sequence.

CONTROLLER SEQUENCE [1] SEQUENCE COMMANDS . HW ALT SEQ ENA. 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 BC- C C C C C C C C C C C C C C R1- . 2 1 3 4 10 R1-R4=RING 1-4, DATA ENTRY, PHASES 1-16 BC=BARRIER CONTROL, VALUES; B,C B=CURRENT GROUP RING BARRIER C=COMPATIBILITY PROGRAMMED BY MAIN MENU 1-1-2

END SEQUENCE AND ASSIGNMENT PROGRAMMING

- 1. From Main Menu select | 1. CONFIGURATION |
- 2. From CONFIGURATION Submenu select | 1. CONTROLLER SEQ |
- 3. From CONTROLLER SEQUENCE Submenu select | 2. PHASE COMPATIBILITY

Program phase compatibility as shown below to ensure phases 1 and 5 cannot run concurrently.

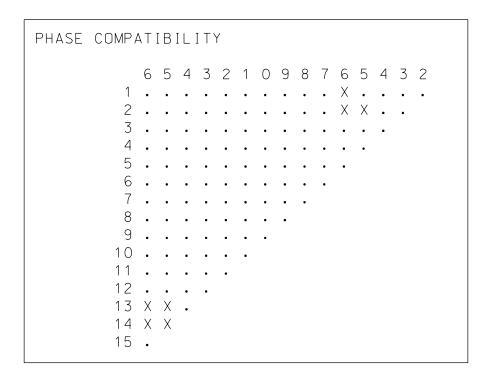

END COMPATIBILITY PROGRAMMING