

### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5 AND 6.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON  
AND RED CLEAR ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #50 ON  
SET OUTPUT ASSIGNMENT #51 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

LOGICAL I/O COMMAND #2 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #52 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #3 (+/-COMMAND#)  
IF YELLOW ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #51 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #4 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON  
AND RED CLEAR ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #42 ON  
SET OUTPUT ASSIGNMENT #43 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

LOGICAL I/O COMMAND #5 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #44 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

LOGICAL I/O COMMAND #6 (+/-COMMAND#)  
IF YELLOW ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #43 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: 12345678910111213141516  
VEH OVL PARENTS: XX  
VEH OVL NOT VEH:  
VEH OVL NOT PED:  
VEH OVL GRN EXT:  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

NOTICE GREEN FLASH

PRESS '+' TWICE

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: 12345678910111213141516  
VEH OVL PARENTS: XX  
VEH OVL NOT VEH:  
VEH OVL NOT PED:  
VEH OVL GRN EXT:  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: 12345678910111213141516  
VEH OVL PARENTS: X  
VEH OVL NOT VEH:  
VEH OVL NOT PED:  
VEH OVL GRN EXT:  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+' TWICE

NOTICE PAGE 2

PAGE 2: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: 12345678910111213141516  
VEH OVL PARENTS: X  
VEH OVL NOT VEH:  
VEH OVL NOT PED:  
VEH OVL GRN EXT:  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

OVERLAP PROGRAMMING COMPLETE

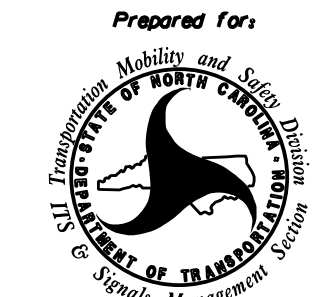
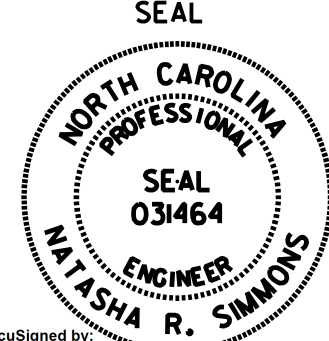
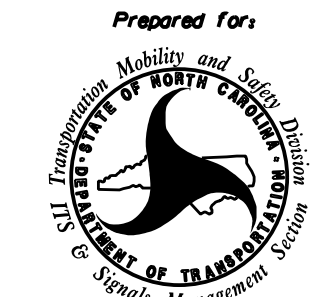
OUTPUT REFERENCE SCHEDULE	
USE TO INTERPRET LOGIC PROCESSOR	
OUTPUT 42 =	Overlap C Red
OUTPUT 43 =	Overlap C Yellow
OUTPUT 44 =	Overlap C Green
OUTPUT 50 =	Overlap A Red
OUTPUT 51 =	Overlap A Yellow
OUTPUT 52 =	Overlap A Green

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0897T1  
DESIGNED: June 2017  
SEALED: 9/10/2021  
REVISED: N/A

Electrical Detail - Sheet 2 of 5  
Signal Upgrade  
Temporary Design 1

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

**HNTB** HNTB NORTH CAROLINA, P.C.  
343 E. Six Forks Road, Suite 200  
Raleigh, North Carolina 27609  
NC License No: C-1554  
(919) 546-8997

	NC 211 (Howe Street) at Tidewater Plaza/Sandy Lane		
	Division 03 Brunswick Co. Southport		
Prepared for: 	PLAN DATE: June 2017 PREPARED BY: A.H. Thornburg	REVIEWED BY: A.D. Klinksiek REVIEWED BY: N.R. Simmons	SEAL NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 031464 NATASHA R. SIMMONS
REVISIONS		INIT. DATE	Signature: <i>Natasha Simmons</i> DATE: 9/10/2021 SIGNATURE NO. 03-0897T1