## **OUTPUT CHANNEL CONFIGURATION**

Front Panel Main Menu >Controller >More>Channels>Channels Config

Web Interface Home >Controller >Advanced IO>Channels>Channels Configuration

Channel Configuration

Channel	Control Type	Control Source	Flash Yellow	Flash Red	Flash Alt	MMU Channel
1	Phase Vehicle	1		Х	Х	1
2	Phase Vehicle	2	Х			2
3	Phase Vehicle	3		Х	Х	3
4	Phase Vehicle	4		Х		4
5	Overlap	7		Х		5
6	Phase Vehicle	6	Х		Х	6
7	Phase Vehicle	7		Х		7
8	Phase Vehicle	8		Х	Х	8
9	Overlap	1	Х		Х	9
10	Overlap	2		Х	Х	10
11	Overlap	3	Х			11
12	Overlap	4	Х			12
13	Phase Ped	2				13
14	Phase Ped	4				14
15	Phase Ped	6				15
16	Phase Ped	8				16
17	Overlap	5		Х	Х	17
18	Overlap	6	Х			18

ASSIGN CHANNEL 5 TO OVERLAP 7

⊢ P 5/23/2019 3:15:01 F \*\*vhb\*gb1\*proj\*Rale schiluka


## MAXTIME OVERLAP PROGRAMMING DETAIL

# Front Panel

Web Interface

### Overlap Plan 1

Overlap	3	4	6	7
Туре	FYA 4 - Section	FYA 4 - Section	FYA 4 - Section	Normal
Included Phases	2	2	2	7
Modifier Phases	7	7	7	<u>-</u>
Trail Green	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0
FYA Ped Delay	3.0	3.0	3.0	0.0

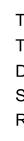



PROJECT REFERENCE NO.	SHEET NO.
U-5312	Sig.3.9

Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Home >Controller >Overlap Configuration >Overlaps

