

CROSS SECTION INDEX

ALIGNMENT

EARTHWORK XSC VOLUME SUMMARY

-L-
-Y1A-
-Y1B-
-Y2-
-Y3A-
-Y3B-
-Y4-
-Y6-
-Y7-
-Y8-
-RA1-
-RA2-
-DRIVE1-

SHEET NUMBERS

X-1B
X-1 THRU X-3
X-4 THRU X-6
X-7 THRU X-9
X-10 THRU X-12
X-13
X-14
X-15
X-16
X-17
X-18
X-19 THRU X-20
X-21 THRU X-22
X-23