


18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

REMOVE DIODE JUMPERS 1-3, 1-8, 1-9, 1-10, 3-8, 3-9, 3-10, 6-9, 6-10, 6-17, 8-9, 8-10, 9-10, 9-17 AND 10-17.

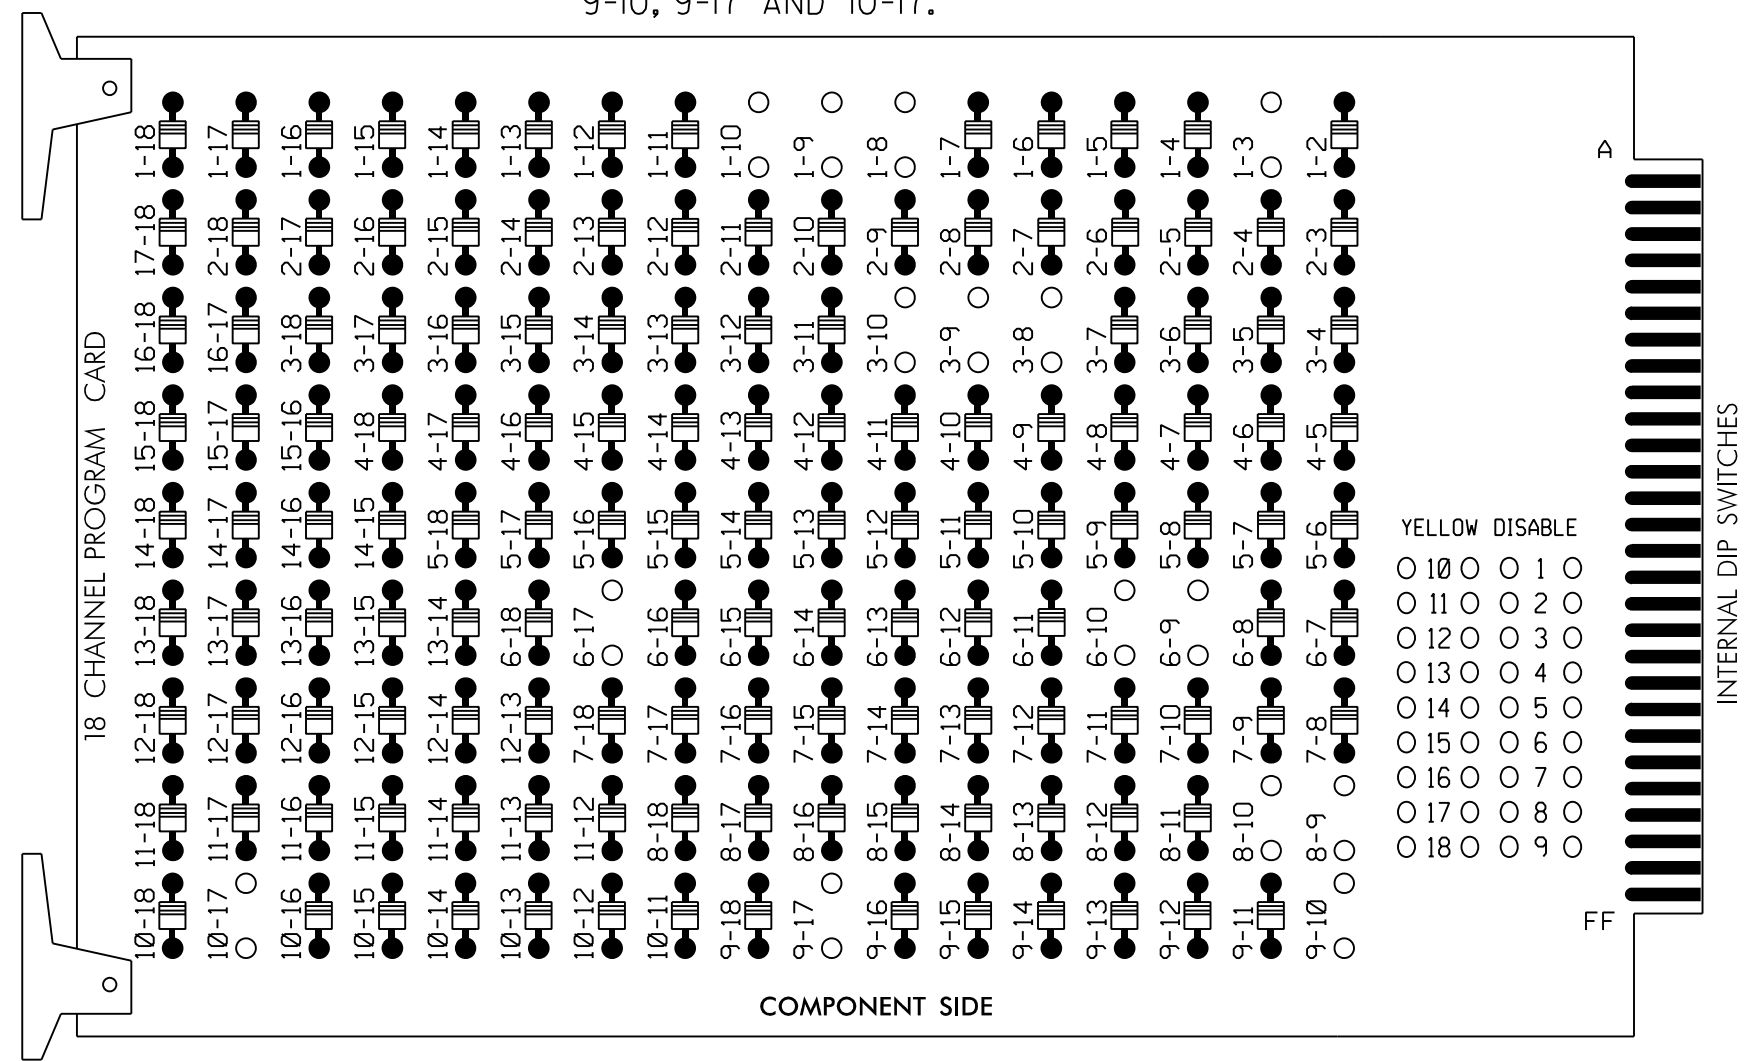

REMOVE JUMPERS AS SHOWN

NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 and SEL9 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Integrate monitor with Ethernet network in cabinet.

■ = DENOTES POSITION OF SWITCH

NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all Phases.
- Program phase 6 for Variable Initial and Gap Reduction.
- Program phase 6 for Startup In Green.
- Program phase 6 for Yellow Flash.
- The cabinet and controller are part of the Winston-Salem Signal System.

EQUIPMENT INFORMATION

CONTROLLER.....2070
 CABINET.....332 w/ AUX
 SOFTWARE.....ECONOLITE OASIS
 CABINET MOUNT.....BASE
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE
 LOAD SWITCHES USED.....S1,S4,S8,S11,AUX S1,AUX S2
 AUX S3
 PHASES USED.....3,6,8
 OVERLAP "A".....3+6
 OVERLAP "B".....3+6
 OVERLAP "C".....NOT USED
 OVERLAP "D".....NOT USED
 OVERLAP "E".....6
 OVERLAP "G".....3

SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	OLG	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	OLE	OLC	OLD	SPARE
SIGNAL HEAD NO.	32	NU	NU	31	NU	NU	NU	61	62	NU	NU	81,82,83	NU	32	31	63	NU	NU
RED								134	134			107				A111		
YELLOW	*			*				135	135									
GREEN								136										
RED ARROW															A121	A124		
YELLOW ARROW												108			A122	A125	A112	
FLASHING YELLOW ARROW															A123	A126	A113	
GREEN ARROW	127							136				109						


NU = Not Used

* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail below.

INPUT FILE POSITION LAYOUT

(front view)

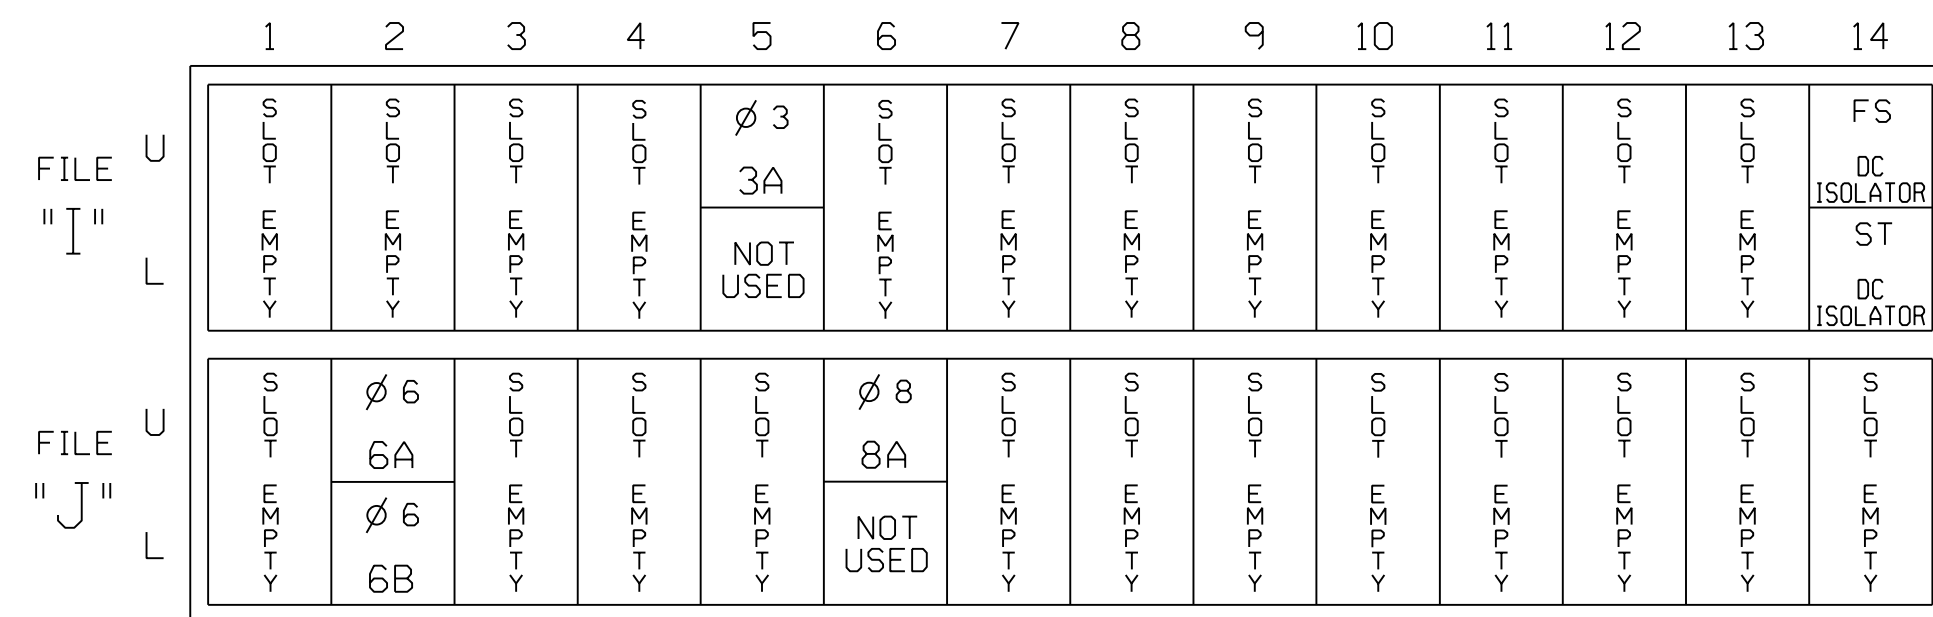

EX.: 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE
 ST = STOP TIME

INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
3A	TB4-5,6	I5U	58	20	3	3	Y	Y			15
6A	TB3-5,6	J2U	40	20★	3	3	Y	Y			
6B	TB3-7,8	J2L	44	6	16	6	Y	Y			
8A	TB5-9,10	J6U	42	4	8	8	Y	Y			


★ See Input Assignment Programming Details for Alternate Phasing on sheet 4.

INPUT FILE POSITION LEGEND: J2L

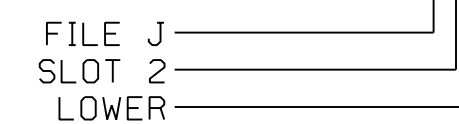

FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

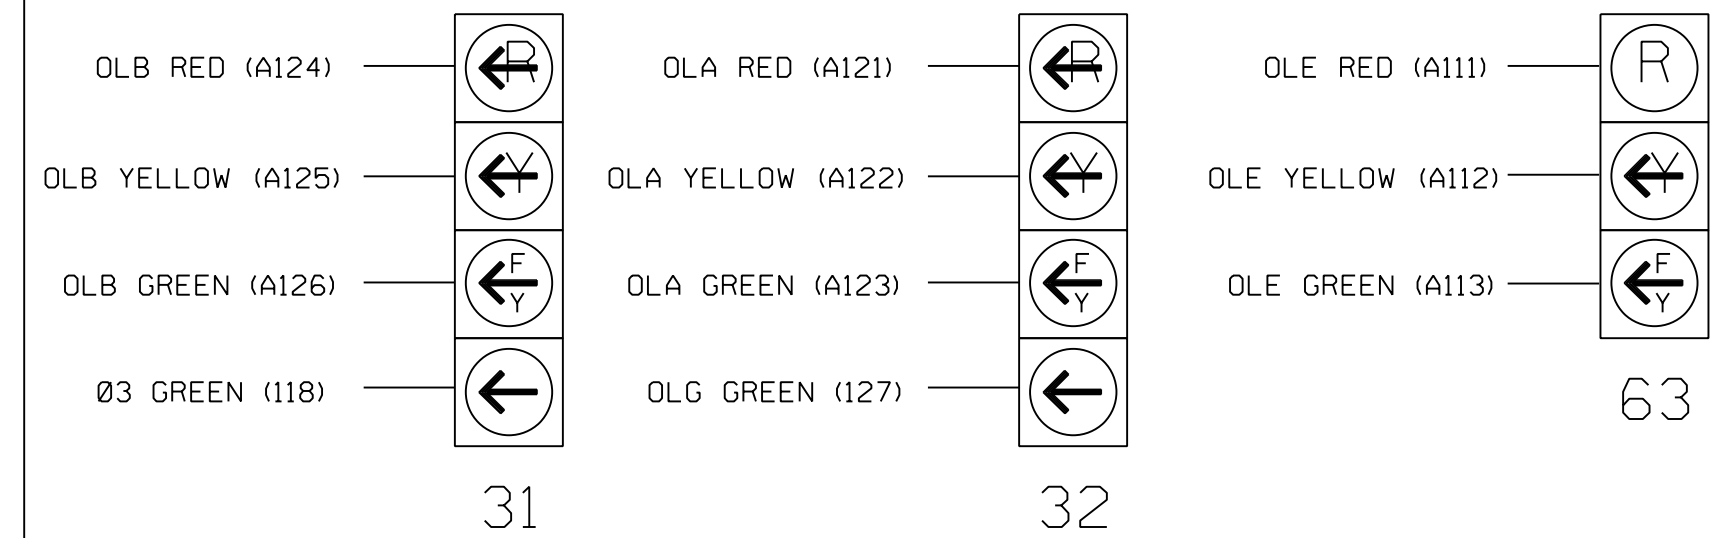


NOTE

The sequence display for Signals 31 and 32 require special logic programming. See sheet 2 for programming instructions.

LOAD RESISTOR INSTALLATION DETAIL

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

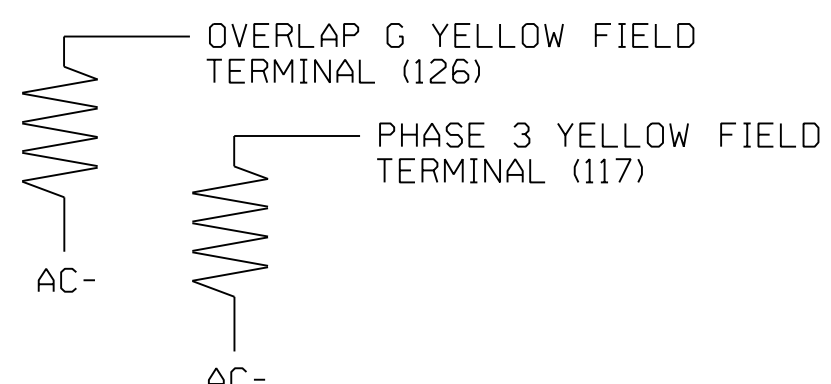

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-0975
 DESIGNED: February 2024
 SEALED: February 12, 2024
 REVISED:




P: (919) 878-8560
 8801 Six Forks Road Suite 700 | Raleigh, North Carolina 27615-2965
 NC License No. F-0112

Engineers | Construction Managers | Planners | Scientists
 www.rk.com

Responsive People | Creative Solutions

ELECTRICAL AND PROGRAMMING DETAILS FOR:

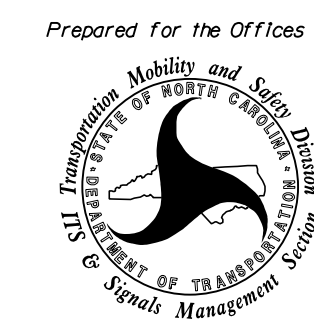

US 158 WB (Reidsville Rd.)
 at
 SR 2396 (Old Belevs Creek Rd.)

Division 9 Forsyth County Winston-Salem

PLAN DATE: February 2024 REVIEWED BY: DT Sears

PREPARED BY: WP Erickson-Jones REVIEWED BY:

REVISIONS INIT. DATE

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SEAL
 NORTH CAROLINA PROFESSIONAL ENGINEER
 SEAL 056142
 PORTER JONES

DocuSigned by
 Porter Jones
 2/12/2024

SIG. INVENTORY NO. 09-0975