MAXTIME ALTERNATE PHASING ACTIVATION DETAIL

To run alternate phasing, select a Pattern that is programmed to run Overlap Plan 2 and Detector Plan 2. A Pattern can be selected through the scheduler or manually by changing the Operational Mode.

PHASING

ACTIVE PLAN REQUIRED TO RUN DEFAULT PHASING ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING

ALTERNATE PHASING CH

 
THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN OVERLAP PLAN 2 AND VEHICLE DETECTOR PLAN 2 ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAP PLAN 2: Modifies overlap included phases for head 11 to run protected turns only. VEH DET PLAN 2: Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 0 seconds.

OVERLAP PLAN	VEH DET PLAN
1	1
2	2

ANGE	SUMMARY





PROJECT REFERENCE NO.	SHEET NO.
U-5813	Sig. 13.3

MAXTIME ALTERNATE PHASING PATTERN PROGRAMMING DETAIL

Front Panel Main Menu >Controller >Coordination >Patterns

Web Interface Home >Controller >Coordination >Patterns

Pattern Parameters

Veh Det Plan Overlap Plan Pattern 2 2 * |

* The Pattern number(s) are to be determined by the Division and/or City Traffic Engineer.

> THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 08-0502T1 DESIGNED: AUGUST 2021 SEALED: 05/21/2024 **REVISED**:

