OVERLAP PROGRAMMING

Front Panel

Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface

Home >Controller >Overlap Configuration >Overlaps

Overlap Plan 1

Overlap	1	2	3	4
Type	Off	Off	FYA 4 - Section	Normal
Included Phases	-	1	6	4,5
Modifier Phases	-	1	5	0
Modifier Overlaps	=			-
Trail Green	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0

FLASHER CIRCUIT MODIFICATION DETAIL

IN ORDER TO INSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:

- 1. ON REAR OF PDA REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
- 2. ON REAR OF PDA REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
- 3. REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

OUTPUT CHANNEL CONFIGURATION


Front Panel

Main Menu >Controller >More>Channels>Channels Config

Web Interface

Home >Controller >Advanced IO>Channels>Channels Configuration

Channel Configuration

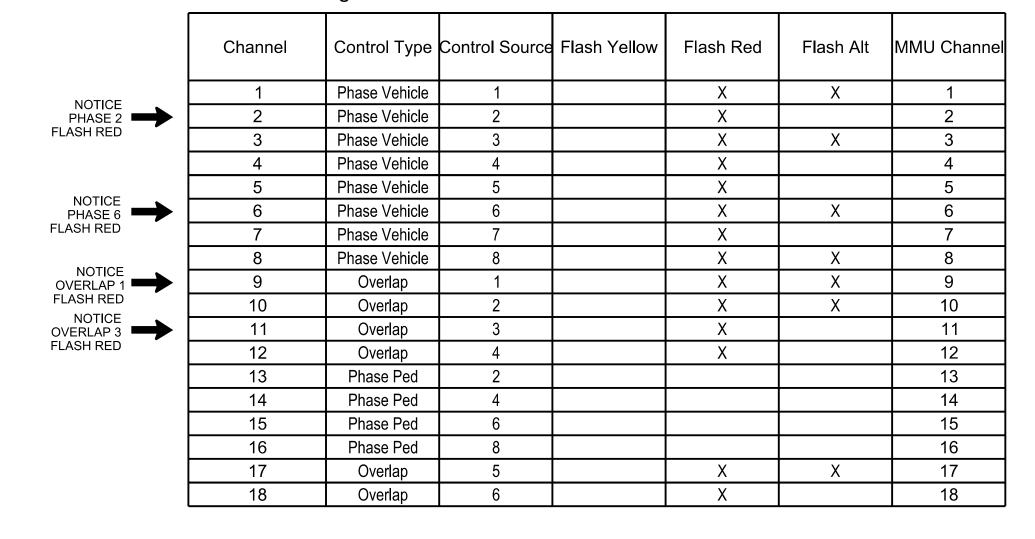

MAXTIME STARTUP AND SOFTWARE FLASH PROGRAMMING DETAIL

Front Panel

Main Menu >Controller >Unit

Web Interface

Home >Controller >Unit


Modify parameters as shown below and save changes.

Startup Parameters


Startup Clearance Hold

Unit Flash Parameters All Red Flash Exit Time

> THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 08-0709T2 DESIGNED: June 2024 SEALED: 7/11/2024 REVISED:

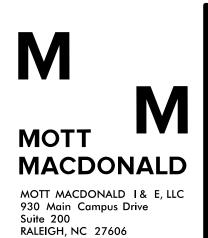

License No. F-0669

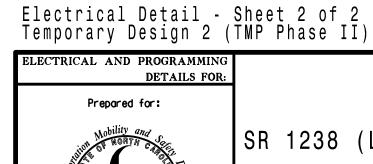

SR 1238 (Love Grove Church Rd) PLAN DATE:

Moore County REVIEWED BY: R. Mullinax June 2024 PREPARED BY: LD Stouchko REVIEWED BY: REVISIONS INIT. DATE

NC 211

034437

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SIG. INVENTORY NO. 08-0709T2