

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION. 2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS). THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

PAGE: 2 C1 PIN:48 VEHICLE DETECTOR INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....26 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED  
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 1A - PHASE 6)

PAGE: 2 C1 PIN:48 NOT ENABLED INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....- PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 18

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....1 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '51' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 1A - Phase 2)

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....51 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS). THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '1' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED :X SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T3 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade- Electrical Detail - Sheet 3 of 5 (Construction Phase 3)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with columns for ELECTIONAL AND PROGRAMMING DETAILS FOR, SR 2048 (Gordon Rd) at SR 1328 (White Rd), Division 3 New Hanover County Wilmington, PLAN DATE: August 2023, REVIEWED BY: N.K. Vlanich, PREPARED BY: E.E. Tiller, REVIEWED BY: N.R. Simmons, and a signature block for N. K. Vlanich dated 5/17/2024.