

### INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 3 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

```

PAGE: 2 C1 PIN:47 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....22
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER A 'Y' FOR NOT ENABLED

DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 5A - PHASE 2)

```

PAGE: 2 C1 PIN:47 NOT ENABLED
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PRESS '+' TO ADVANCE TO INPUT 17

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....5
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER '55' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 5A - PHASE 5)

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....55
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PROGRAMMING COMPLETE

### SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....N
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED :
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '5' FOR PHASES ASSIGNED

ENSURE DELAY IS '3'

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....Y
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED : X
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....3
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```




DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139T1  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade-  
Electrical Detail - Sheet 4 of 5  
(Construction Phase 1)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

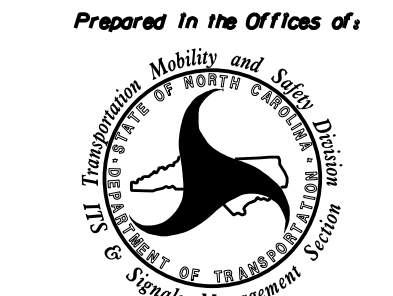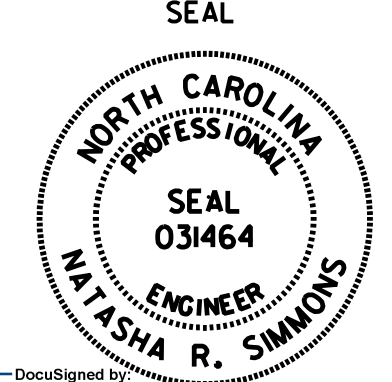	SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave		
	Division 3 New Hanover County Wilmington	PLAN DATE: August 2023 REVIEWED BY: N.K. Vianich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	
REVISIONS		INIT.	DATE
DocuSigned by: 		5/17/2024	
750 N. Greenfield Pkwy, Garner, NC 27529		SIG. INVENTORY NO. 03-1139T1	

## ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

### ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

- OVERLAPS PAGE 2: Modifies overlap parent phases for heads 11 and 51 to run protected turns only.
- INPUTS PAGE 2: Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 3 seconds.
- Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 3 seconds.

## FLASHER CIRCUIT MODIFICATION DETAIL

IN ORDER TO ENSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:




1. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
2. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
3. REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 03-1139T1  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:


Signal Upgrade-  
Electrical Detail - Sheet 5 of 5  
(Construction Phase 1)

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

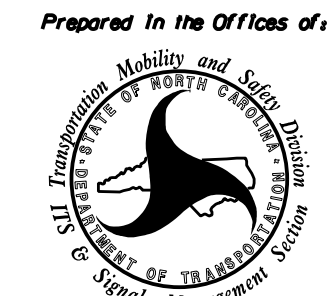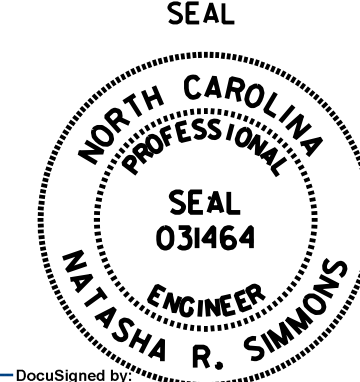
ELECTRICAL AND PROGRAMMING DETAILS FOR:  Prepared in the Offices of:  750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 2135 (Blount Dr) / Lewis Landing Ave  Division 3    New Hanover County    Wilmington PLAN DATE: August 2023    REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller    REVIEWED BY: N.R. Simmons	SEAL  ENGINEER NATASHA R. SIMMONS
REVISIONS    INIT.    DATE		DocuSigned by:  5/17/2024 DATE SIG. INVENTORY NO. 03-1139T1



DEFAULT PHASING DIAGRAM

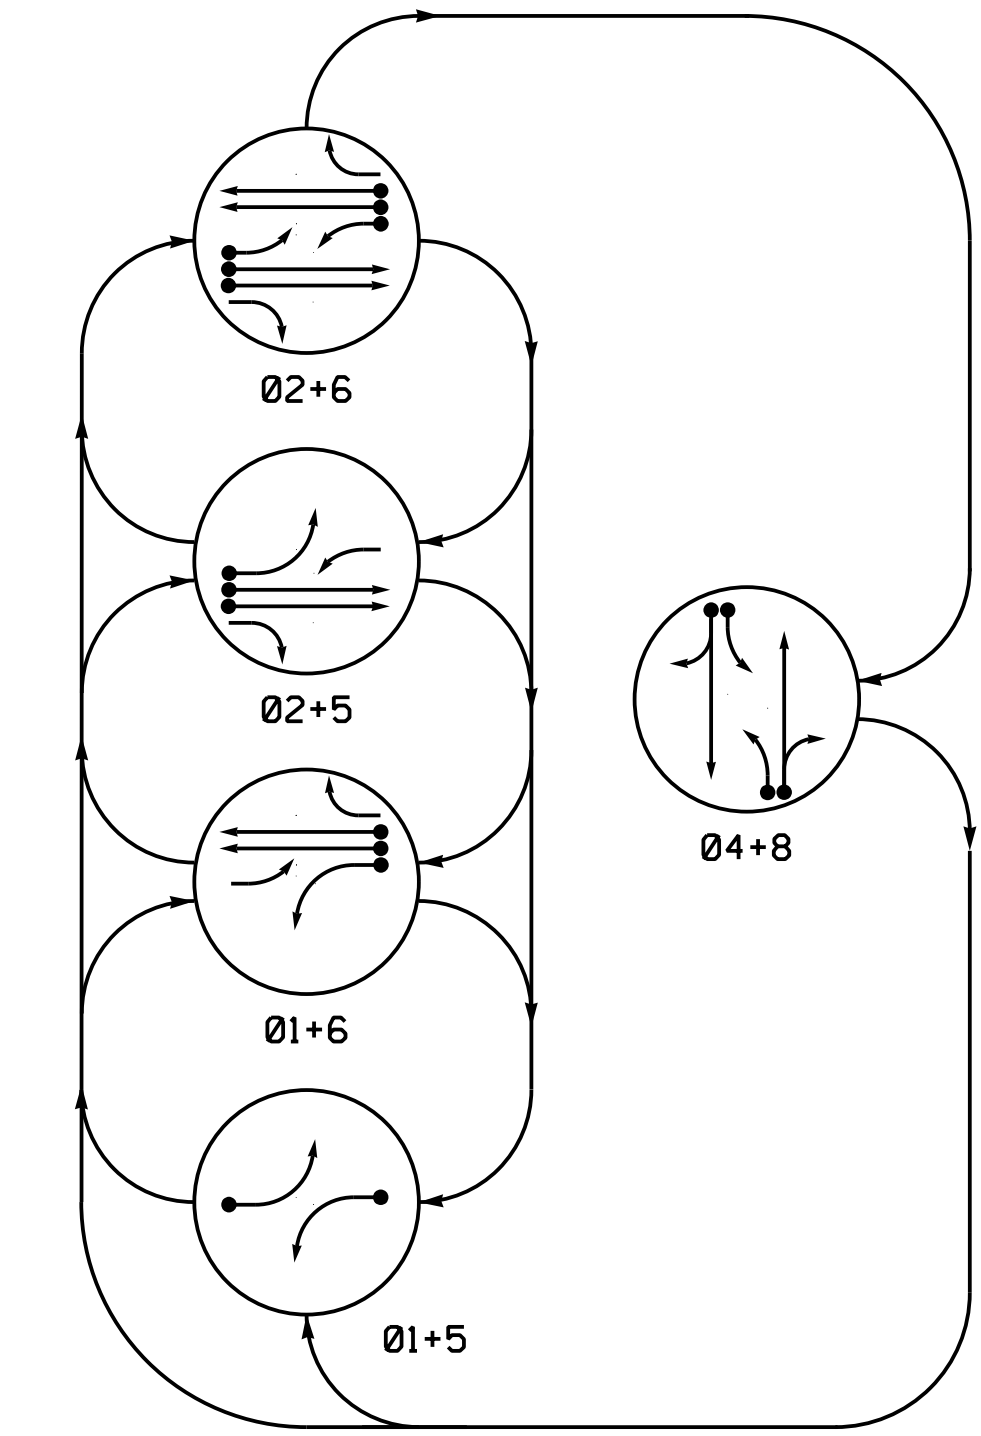

ALTERNATE PHASING DIAGRAM

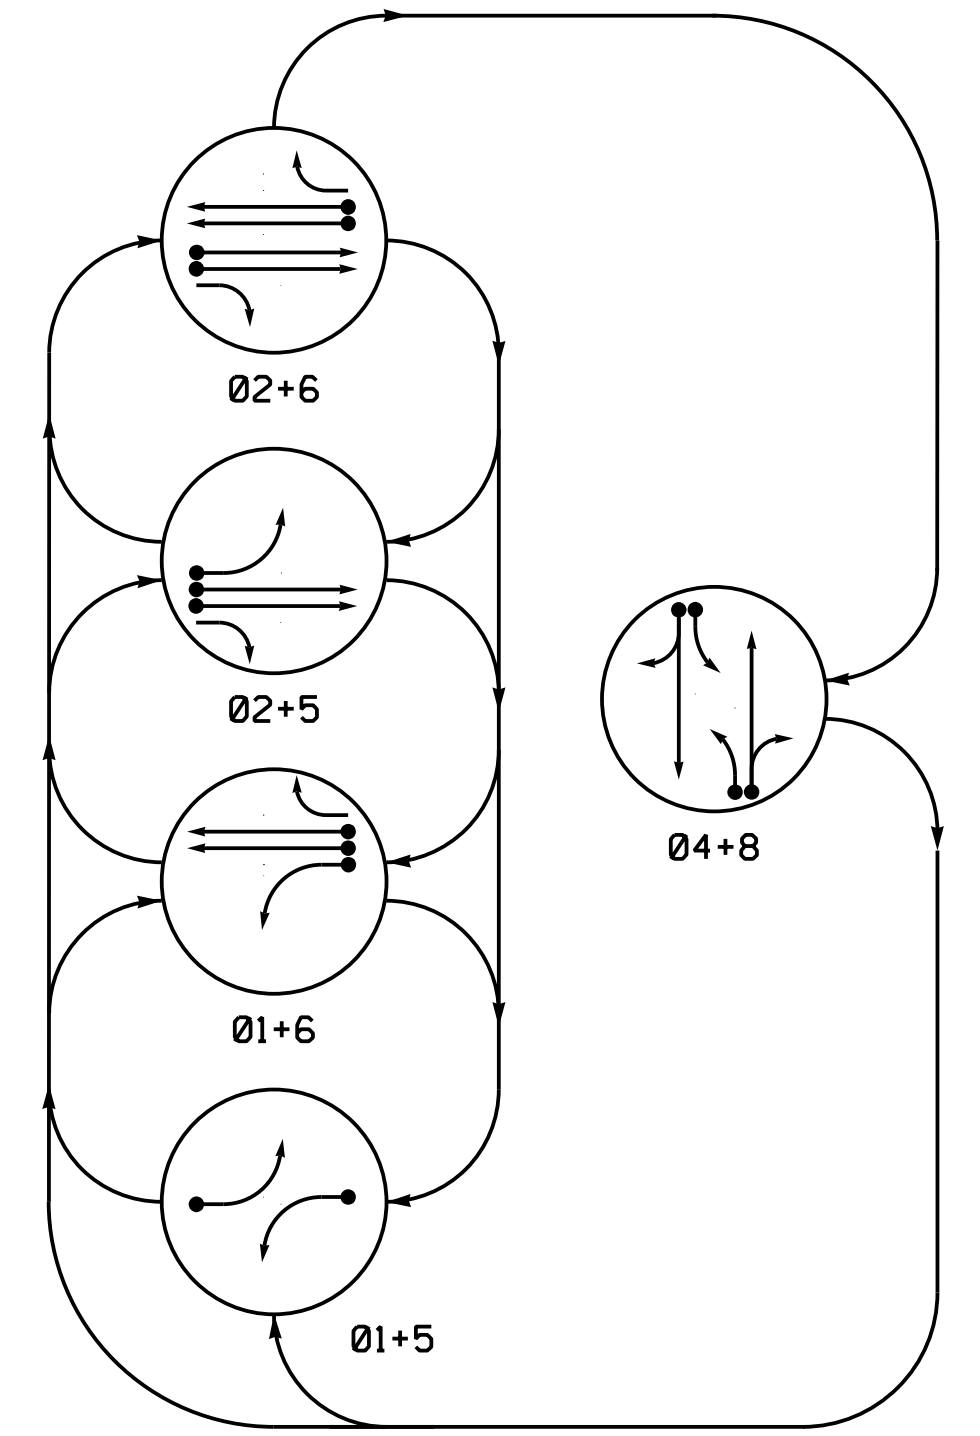

PHASING DIAGRAM DETECTION LEGEND

- DETECTED MOVEMENT
UNDETECTED MOVEMENT (OVERLAP)
UNSIGNALIZED MOVEMENT
PEDESTRIAN MOVEMENT

DEFAULT PHASING TABLE OF OPERATION table with columns for SIGNAL FACE and PHASE (01+5, 01+6, 02+5, 02+6, 04+8, F, I, O, P, D, R).

ALTERNATE PHASING TABLE OF OPERATION table with columns for SIGNAL FACE and PHASE (01+5, 01+6, 02+5, 02+6, 04+8, F, I, O, P, D, R).


OASIS 2070 LOOP & DETECTOR INSTALLATION CHART table with columns for ZONE, SIZE, DISTANCE, TURNS, NEW LOOP, PHASE, CALLING, EXTENSION, FULL TIME DELAY, STRETCH TIME, DELAY TIME, SYSTEM LOOP, NEW CARD.

\* Multizone Microwave Detection
\*\* Disable Delay During Alternate Phasing Operation.
# Disable phase call for loop(s) during alternate phasing.

5 Phase Fully Actuated Wilmington Signal System

NOTES


- 1. Refer to "Roadway Standard Drawings NCDOT" dated January 2024 and "Standard Specifications for Roads and Structures" dated January 2024.
2. Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
3. Phase 1 and/or phase 5 may be lagged.
4. Reposition existing signal heads numbered 21, 22, 23, 51, 62, and 63.
5. Set all detector units to presence mode.
6. The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
7. This intersection uses multi-zone microwave detection. Install the detectors according to the manufacturer's instructions to achieve the desired detection.
8. Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
9. Signal system data: Controller Asset #1139.

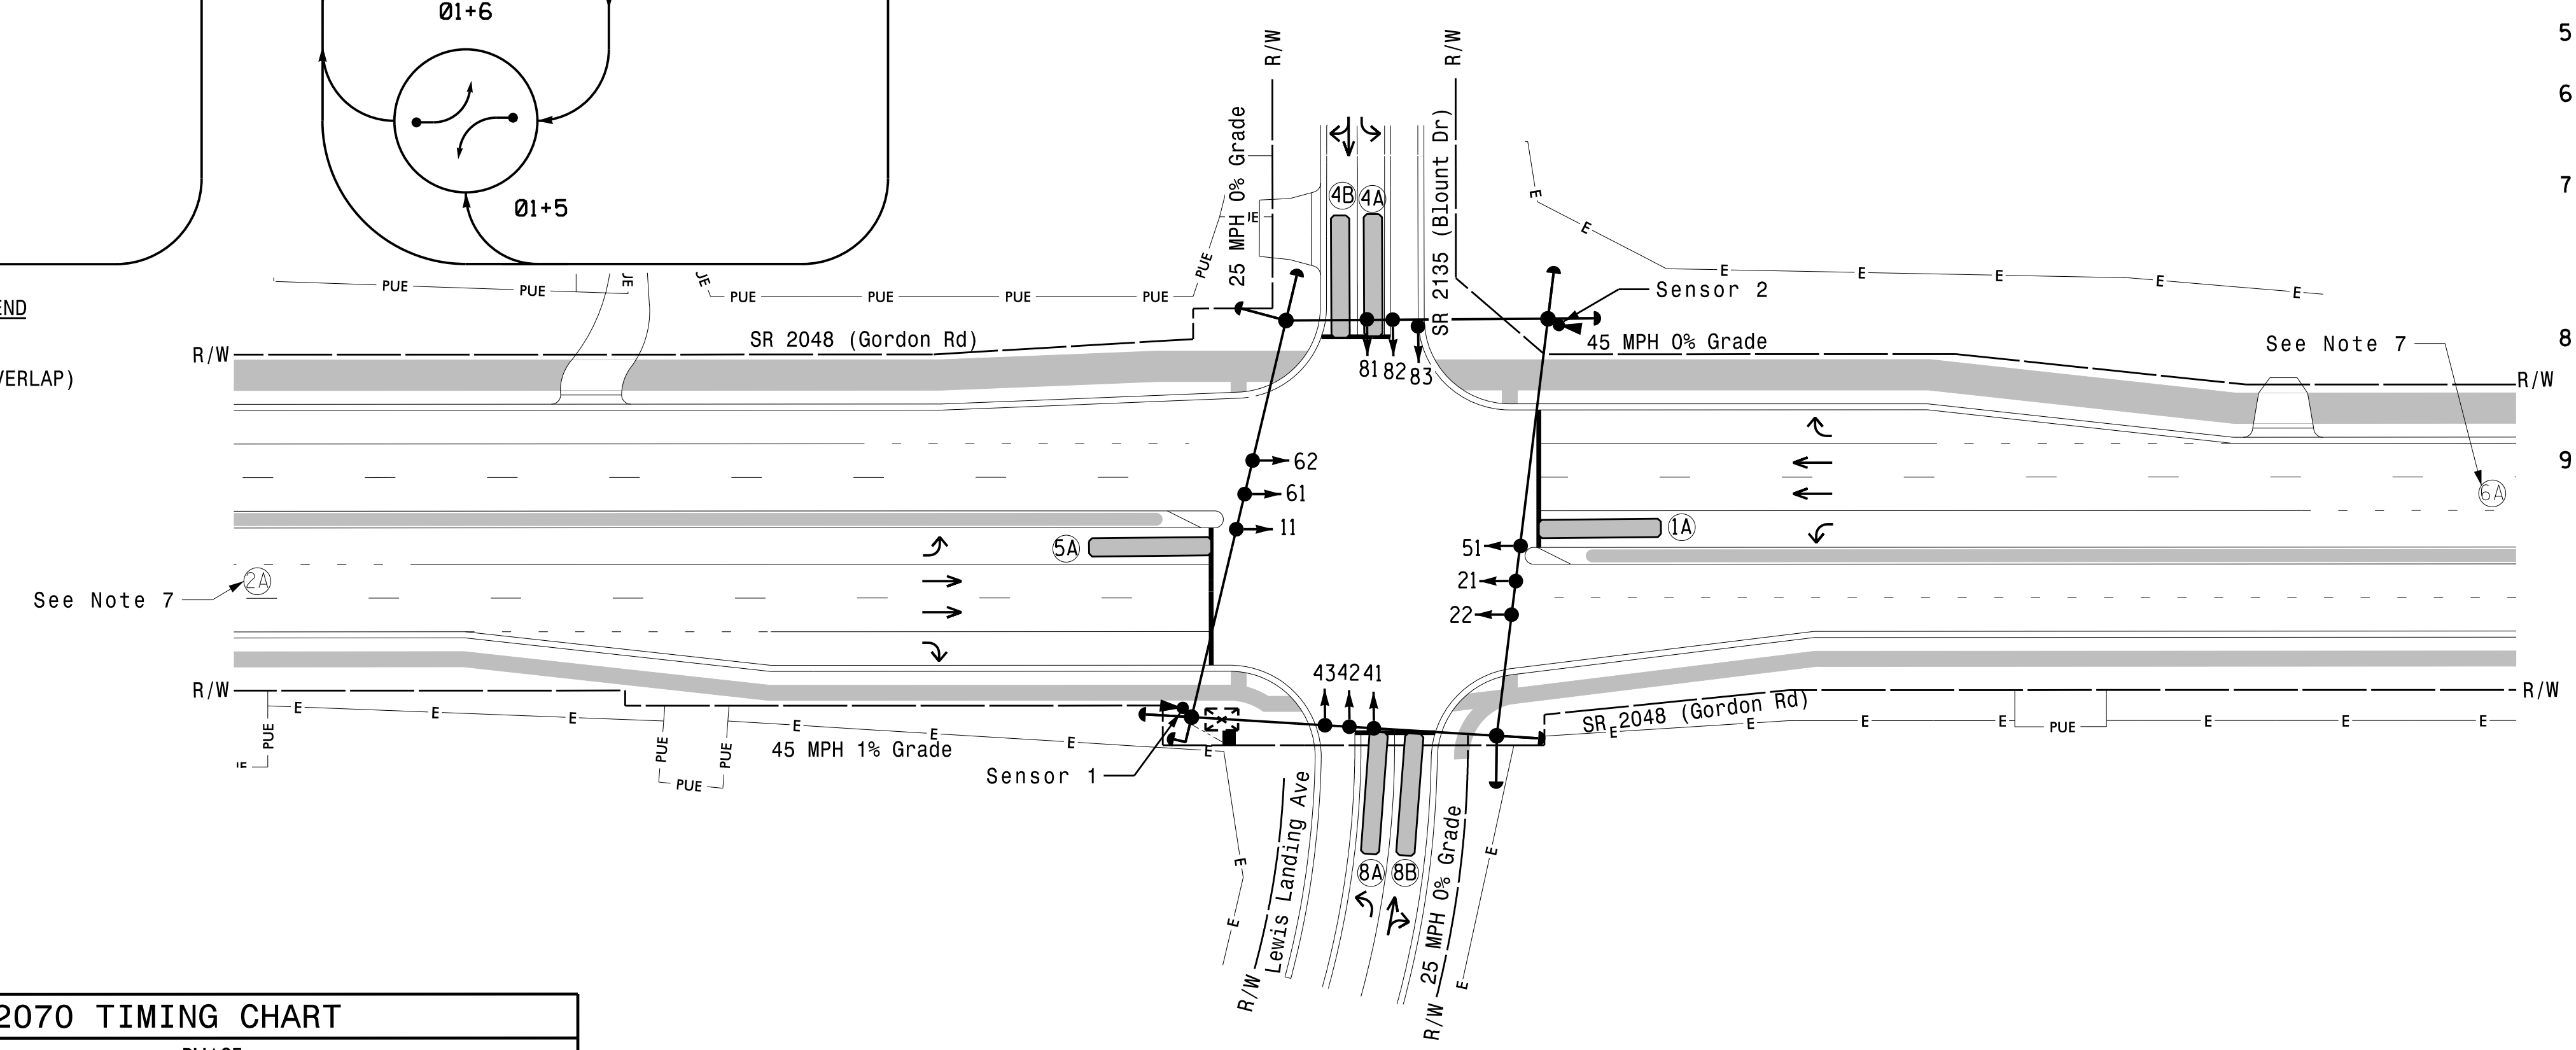

LEGEND table with columns for PROPOSED and EXISTING, listing symbols for Traffic Signal Head, Modified Signal Head, Sign, Pedestrian Signal Head, Signal Pole with Guy, Signal Pole with Sidewalk Guy, Microwave Detection Zone, Out of Pavement Detector, Controller & Cabinet, Junction Box, 2-in Underground Conduit, Right of Way, Permanent Utility Easement, Construction Easement, Directional Arrow, Construction Zone, and Curb Ramp.

OASIS 2070 TIMING CHART table with columns for FEATURE and PHASE (1, 2, 4, 5, 6, 8), listing timing values for Min Green, Extension, Max Green, Yellow Clearance, Red Clearance, Red Revert, Walk, Don't Walk, Seconds Per Actuation, Max Variable Initial, Time Before Reduction, Time To Reduce, Minimum Gap, Recall Mode, Vehicle Call Memory, Dual Entry, and Simultaneous Gap.

SIGNAL FACE I.D.

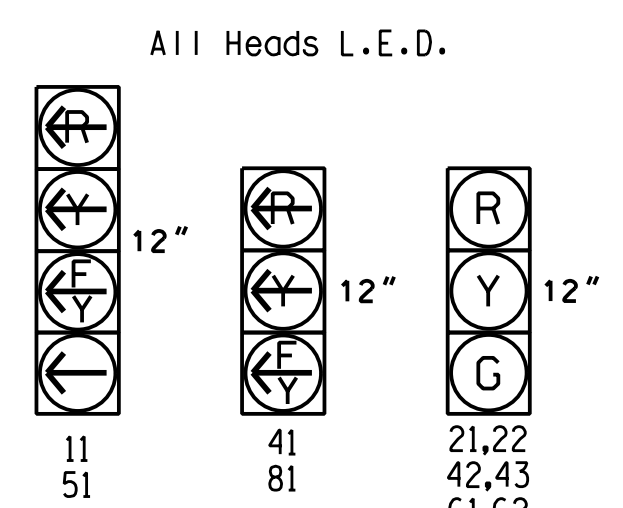

RADAR DETECTION SYSTEM table with columns for FUNCTION, Sensor 1, and Sensor 2, listing Channel, Phase, Direction of Travel, Detection Zone, Enable Speed, Speed Range, Enable Estimated Time of Arrival, and Estimated Time of Arrival.

Signal Upgrade-Temporary Design 2 (Construction Phase 2)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED


Professional seal and signature block for N. K. Vlanich, N. R. Simmons, and A. Asha R. Simmons, including project details for SR 2048 (Gordon Rd) at SR 2135 (Blount Dr) / Lewis Landing Ave, Division 3, New Hanover County, Wilmington, NC.



### 18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)



REMOVE DIODE JUMPERS 1-5, 1-6, 1-9, 1-11, 2-5, 2-6, 2-9, 2-11, 4-8, 4-10, 4-12, 5-9, 5-11, 6-9, 6-11, 8-10, 8-12, 9-11, AND 10-12.

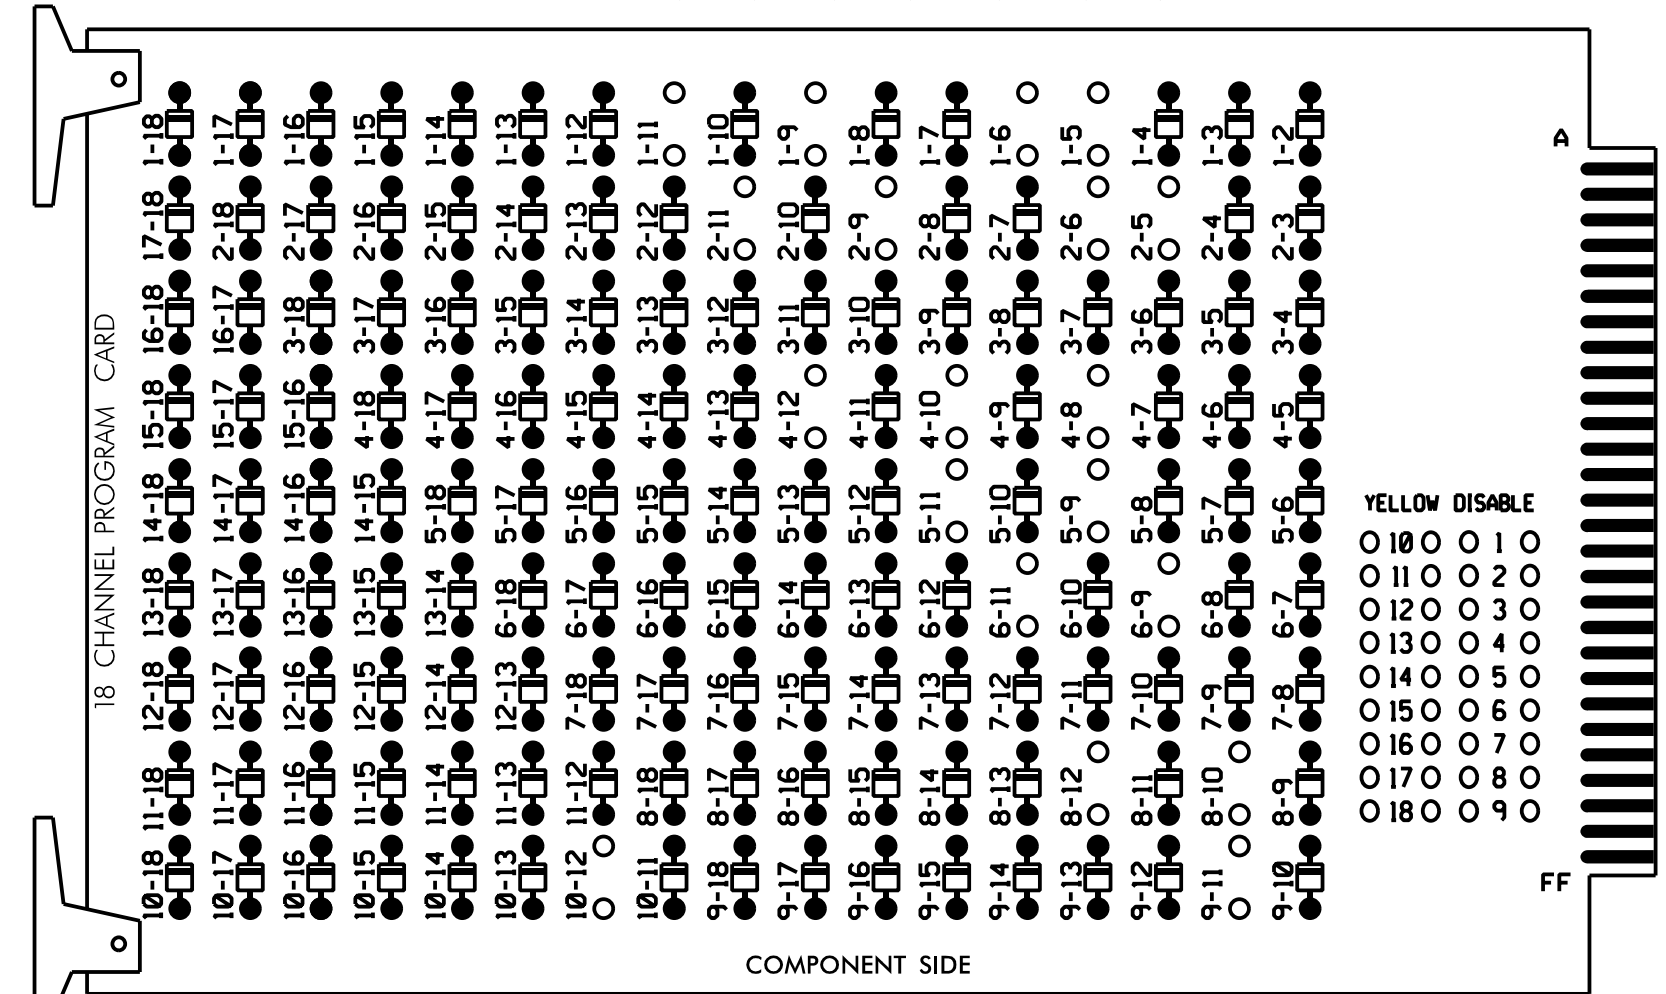

REMOVE JUMPERS AS SHOWN

**NOTES:**

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

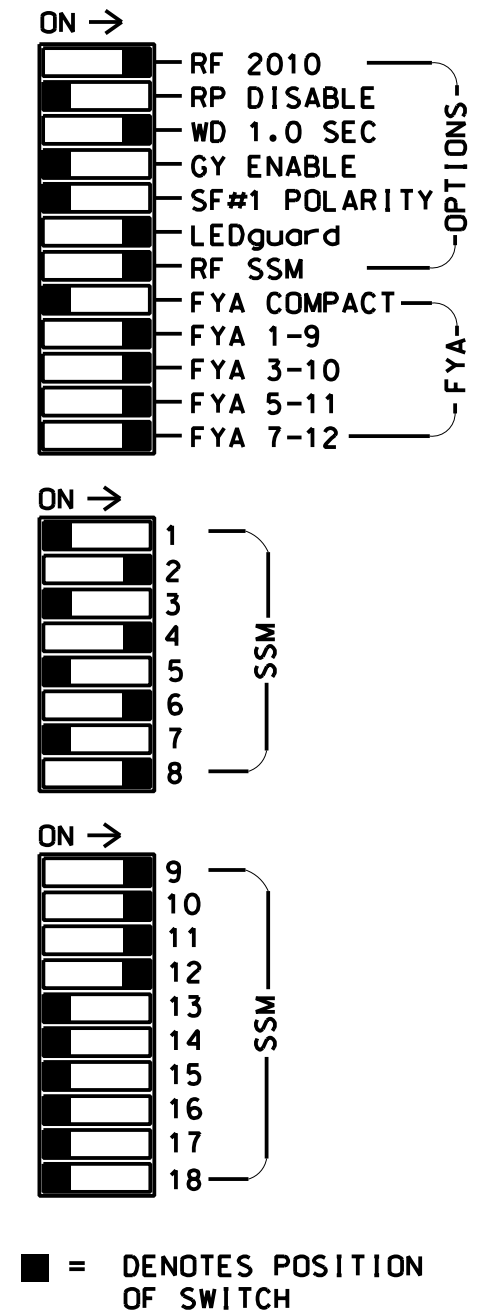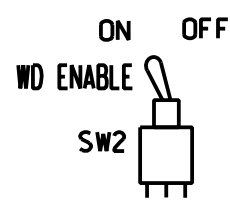

### NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Startup In Green.
- Program phases 2 and 6 for Yellow Flash, and overlaps 1 and 2 as Wag Overlaps.
- The cabinet and controller are part of the Wilmington Signal System.

### EQUIPMENT INFORMATION

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S1,S2,S5,S7,S8,S11,AUX S1,  
 AUX S2,AUX S4,AUX S5  
 PHASES USED.....1,2,4,5,6,8  
 OVERLAP "A".....1+2  
 OVERLAP "B".....4  
 OVERLAP "C".....5+6  
 OVERLAP "D".....8


### SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	21,22	NU	NU	42,43	NU	51	61,62	NU	NU	82,83	NU	11	81	NU	51	41	NU
RED		128			101			134			107							
YELLOW	*	129			102		*	135			108							
GREEN		130			103			136			109							
RED ARROW													A121	A124		A114	A101	
YELLOW ARROW													A122	A125		A115	A102	
FLASHING YELLOW ARROW													A123	A126		A116	A103	
GREEN ARROW	127							133										
Hand icon																		
Person icon																		

NU = Not Used  
 \* Denotes install load resistor. See load resistor installation detail this sheet.  
 ★ See pictorial of head wiring in detail this sheet.

### INPUT FILE POSITION LAYOUT

(front view)

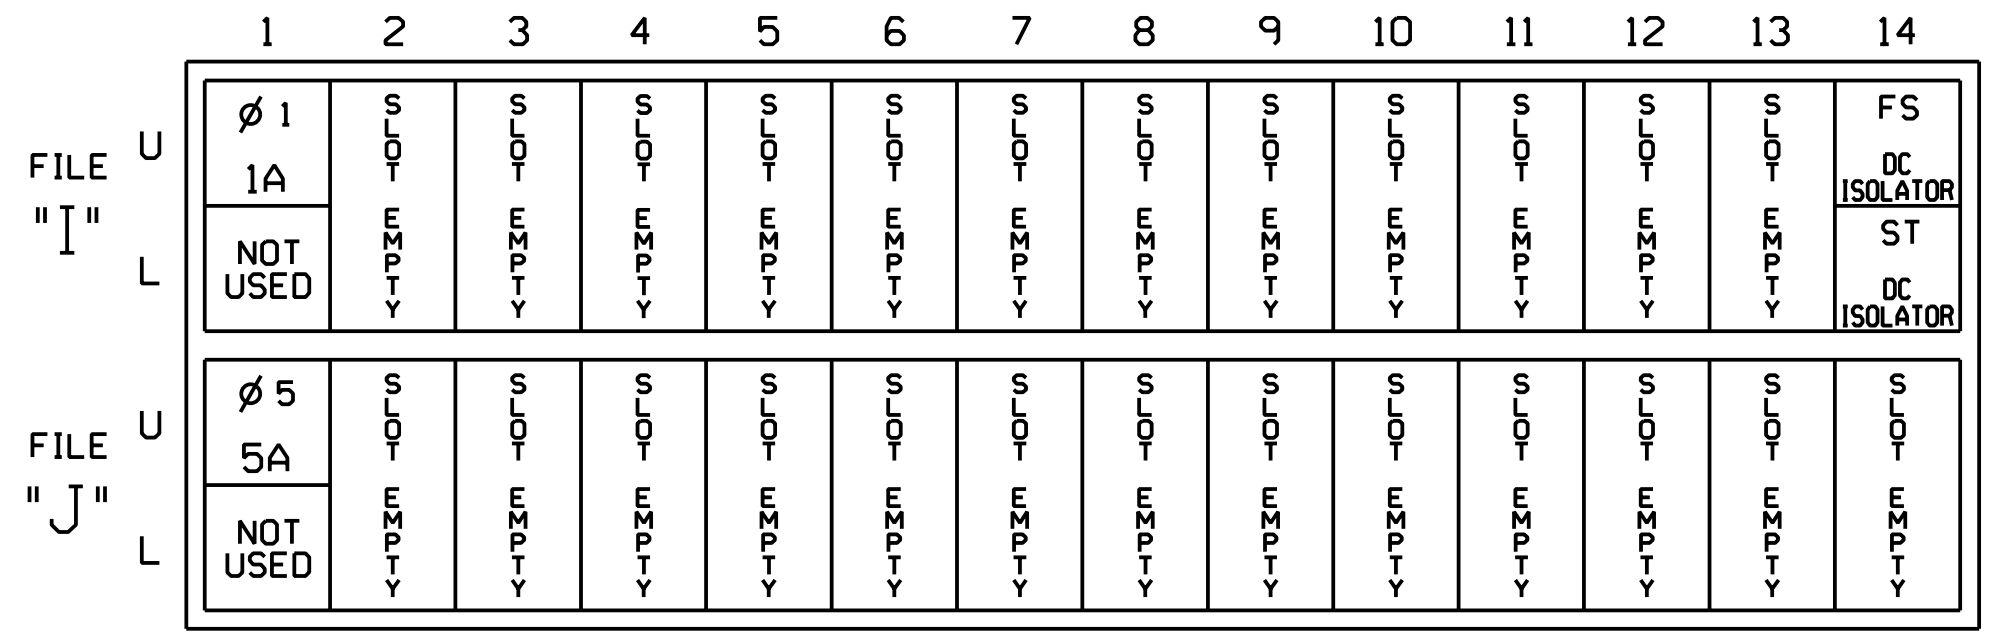

EX.: 1A, 2A, ETC. = LOOP NO.'S  
 FS = FLASH SENSE  
 ST = STOP TIME

⊗ Wired Input - Do not populate slot with detector card


### SPECIAL DETECTOR NOTE

Install a multizone microwave detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish detection schemes shown on the Signal Design Plans.

### INPUT FILE CONNECTION & PROGRAMMING CHART


LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10 ★	26	6	Y	Y			
	-	I1U	56	18 ★	51	1	Y	Y			
5A	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	14U	47	9 ★	22	2	Y	Y			
	-	J1U	55	17 ★	55	5	Y	Y			

\* See Input Page Assignment programming details on sheets 3 and 4.  
 † Add jumper from J1-W to 14-W, on rear of input file.  
 INPUT FILE POSITION LEGEND: J2L

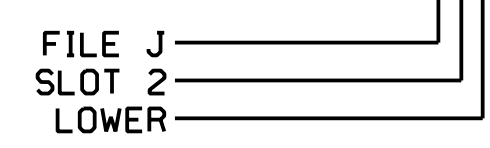

### FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

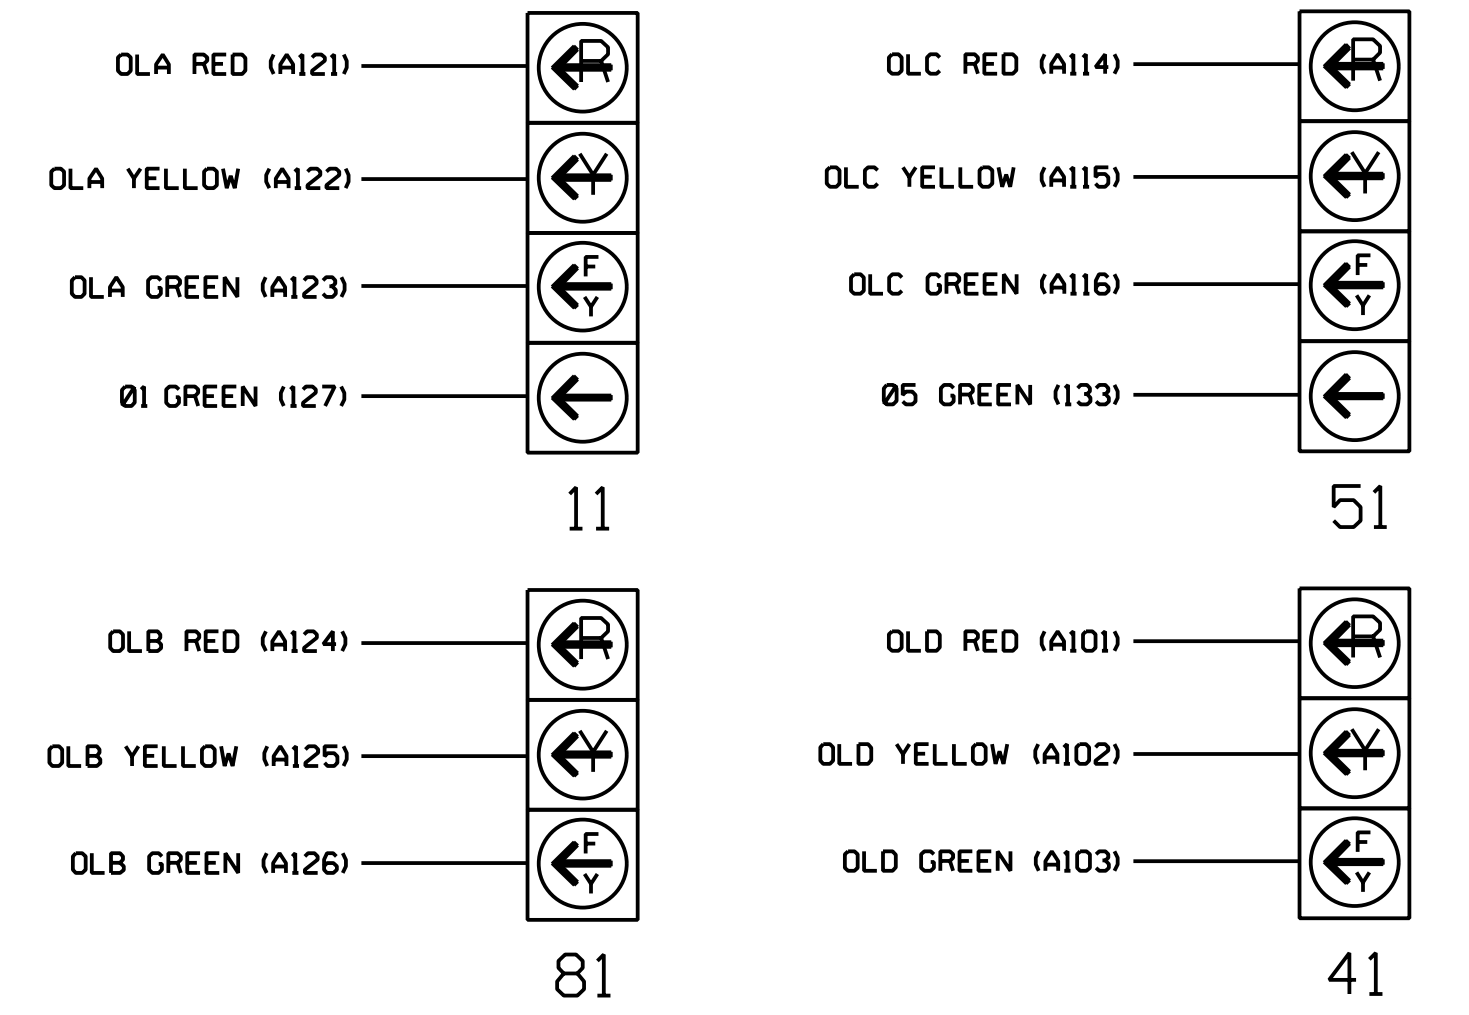


**NOTE**

The sequence display for signal heads 11 and 51 require special logic programming. See sheet 2 for programming instructions.

### LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

ACCEPTABLE VALUES	
VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

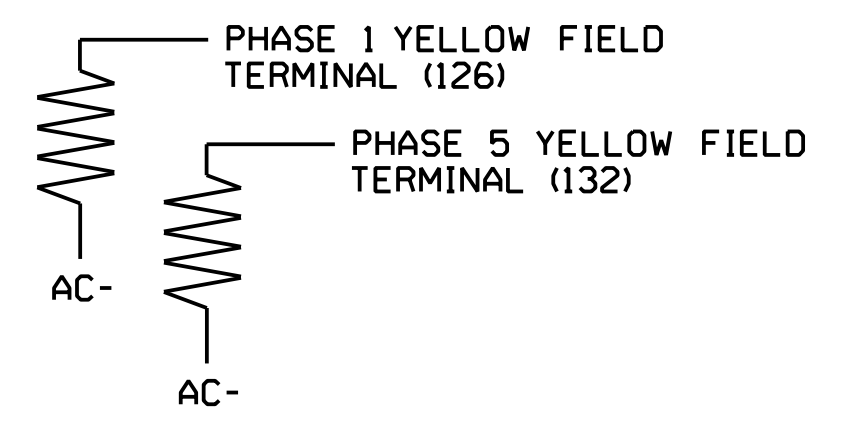

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139T2  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

**HNTB**  
 HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

Signal Upgrade-  
 Electrical Detail - Sheet 1 of 5

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

ELECTRICAL AND PROGRAMMING DETAILS FOR:  
 SR 2048 (Gordon Rd) at  
 SR 2135 (Blount Dr)/  
 Lewis Landing Ave

Division 3 New Hanover County Wilmington

PLAN DATE: August 2023 REVIEWED BY: N.K. Vianich  
 PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons

REVISIONS: INIT. DATE

DocuSigned by:  
 Metasha R. Simmons 5/17/2024  
 SIGNATURE DATE  
 SIG. INVENTORY NO. 03-1139T2

SEAL  
 NORTH CAROLINA PROFESSIONAL SEAL 031464  
 ENGINEER  
 METASHA R. SIMMONS



### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5, AND 6.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON  
AND RED CLEAR ON PHASE #1 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #50 ON  
SET OUTPUT ASSIGNMENT #51 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

LOGICAL I/O COMMAND #2 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #52 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #3 (+/-COMMAND#)  
IF YELLOW ON PHASE #1 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #51 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #4 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON  
AND RED CLEAR ON PHASE #5 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #42 ON  
SET OUTPUT ASSIGNMENT #43 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

LOGICAL I/O COMMAND #5 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #44 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

LOGICAL I/O COMMAND #6 (+/-COMMAND#)  
IF YELLOW ON PHASE #5 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #43 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

OUTPUT REFERENCE SCHEDULE	
USE TO INTERPRET LOGIC PROCESSOR	
OUTPUT 42 =	Overlap C Red
OUTPUT 43 =	Overlap C Yellow
OUTPUT 44 =	Overlap C Green
OUTPUT 50 =	Overlap A Red
OUTPUT 51 =	Overlap A Yellow
OUTPUT 52 =	Overlap A Green

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'B' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'D' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE PAGE 2

PAGE 2: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE PAGE 2

PAGE 2: VEHICLE OVERLAP 'B' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'

NOTICE GREEN FLASH

NOTICE PAGE 2

PAGE 2: VEHICLE OVERLAP 'D' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC).....0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)....0

PRESS '+'


NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE


Signal Upgrade-  
Electrical Detail - Sheet 2 of 5  
(Construction Phase 2)

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 03-1139T2  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

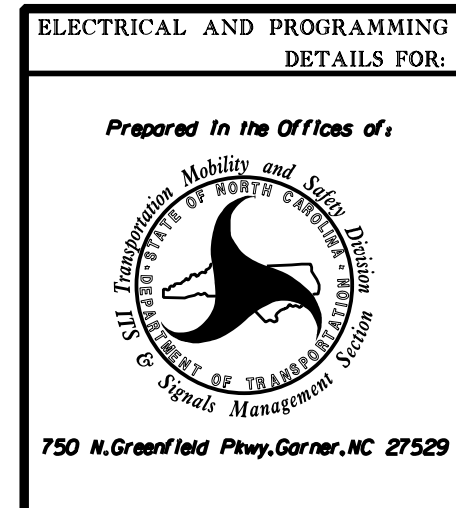

ELECTRICAL AND PROGRAMMING DETAILS FOR:	
Prepared in the Office of:	
750 N. Greenfield Pkwy, Garner, NC 27529	
SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave	
Division 3	New Hanover County Wilmington
PLAN DATE: August 2023	REVIEWED BY: N.K. Vlanich
PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons
REVISIONS	INIT. DATE

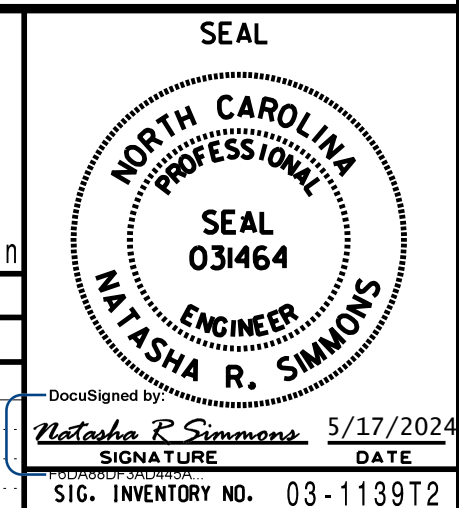



INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION. 2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS). THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

PAGE: 2 C1 PIN:48 VEHICLE DETECTOR INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....26 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED  
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 1A - PHASE 6)

PAGE: 2 C1 PIN:48 NOT ENABLED INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....- PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 18

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....1 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '51' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 1A - PHASE 1)

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....51 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS). THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '1' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED :X SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139T2 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade- Electrical Detail - Sheet 3 of 5 (Construction Phase 2)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED


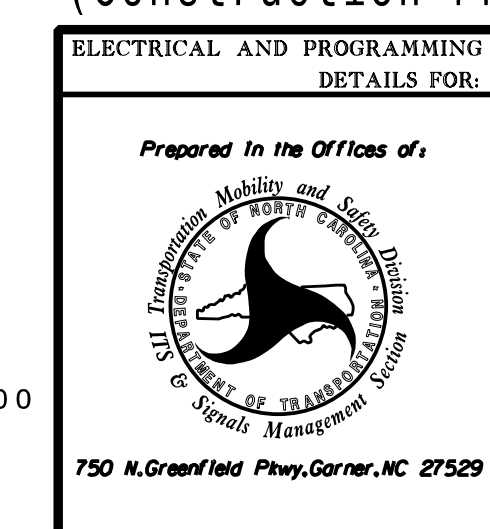


Table with project details: SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave, Division 3 New Hanover County Wilmington, PLAN DATE: August 2023, REVIEWED BY: N.K. Vianich, PREPARED BY: E.E. Tiller, REVIEWED BY: N.R. Simmons.



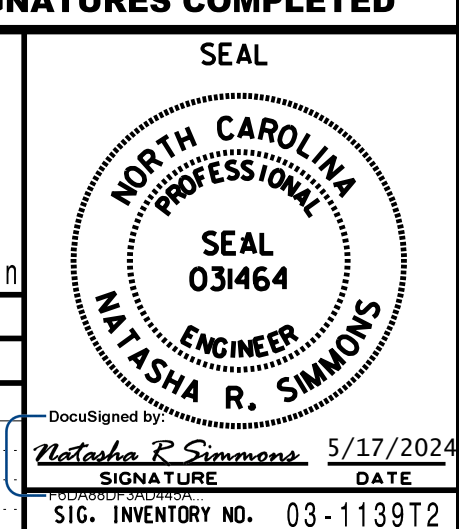

### INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

```

PAGE: 2 C1 PIN:47 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....22
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER A 'Y' FOR NOT ENABLED

DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 5A - PHASE 2)

```

PAGE: 2 C1 PIN:47 NOT ENABLED
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PRESS '+' TO ADVANCE TO INPUT 17

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....5
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER '55' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 5A - PHASE 5)

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....55
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PROGRAMMING COMPLETE

### SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....N
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED :
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '5' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....Y
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED : X
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```




DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139T2  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade-  
Electrical Detail - Sheet 4 of 5  
(Construction Phase 2)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

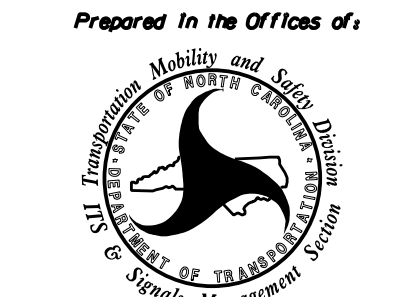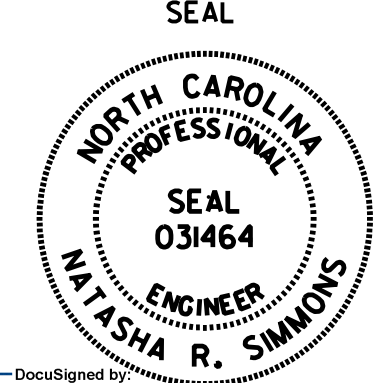	SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave		
	Division 3 New Hanover County Wilmington	PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	
REVISIONS		INIT.	DATE
DocuSigned by: 		5/17/2024	
750 N. Greenfield Pkwy, Garner, NC 27529		SIG. INVENTORY NO. 03-1139T2	

### ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

PHASING	INPUTS PAGE	OVERLAPS PAGE
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

#### ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAPS PAGE 2: Modifies overlap parent phases for heads 11 and 51 to run protected turns only.

INPUTS PAGE 2: Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 0 seconds.

Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 0 seconds.

### FLASHER CIRCUIT MODIFICATION DETAIL

IN ORDER TO ENSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:




- ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
- ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
- REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

THIS ELECTRICAL DETAIL IS FOR  
 THE SIGNAL DESIGN: 03-1139T2  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:


Signal Upgrade-  
Electrical Detail - Sheet 5 of 5  
(Construction Phase 2)

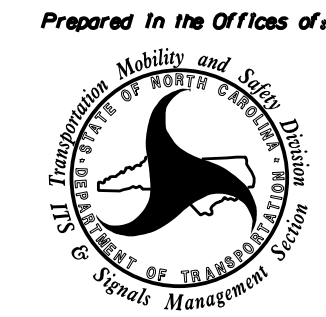**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**



ELECTRICAL AND PROGRAMMING DETAILS FOR:  Prepared in the Office of:  750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave	SEAL  NORTH CAROLINA PROFESSIONAL SEAL 031464 ENGINEER NATASHA R. SIMMONS
	Division 3    New Hanover County    Wilmington	
REVISIONS    INIT.    DATE		DocuSigned by:  NATASHA R. SIMMONS    5/17/2024 SIGNATURE    DATE SIG. INVENTORY NO. 03-1139T2
_____ _____		



DEFAULT PHASING DIAGRAM

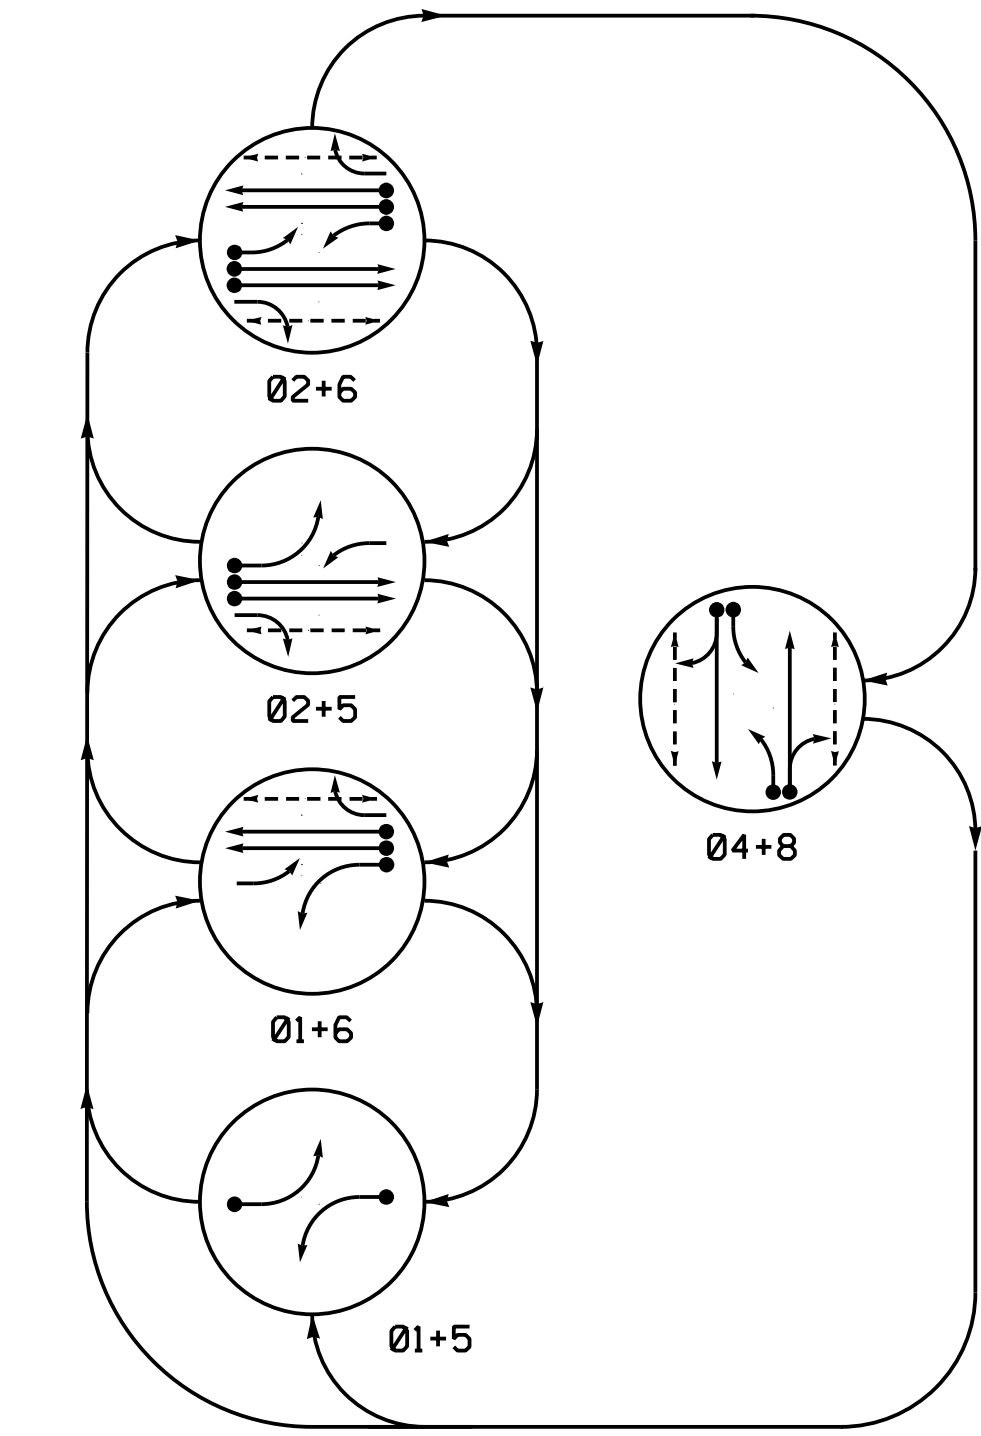

ALTERNATE PHASING DIAGRAM

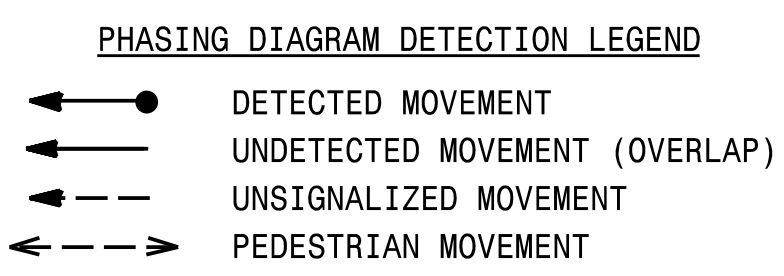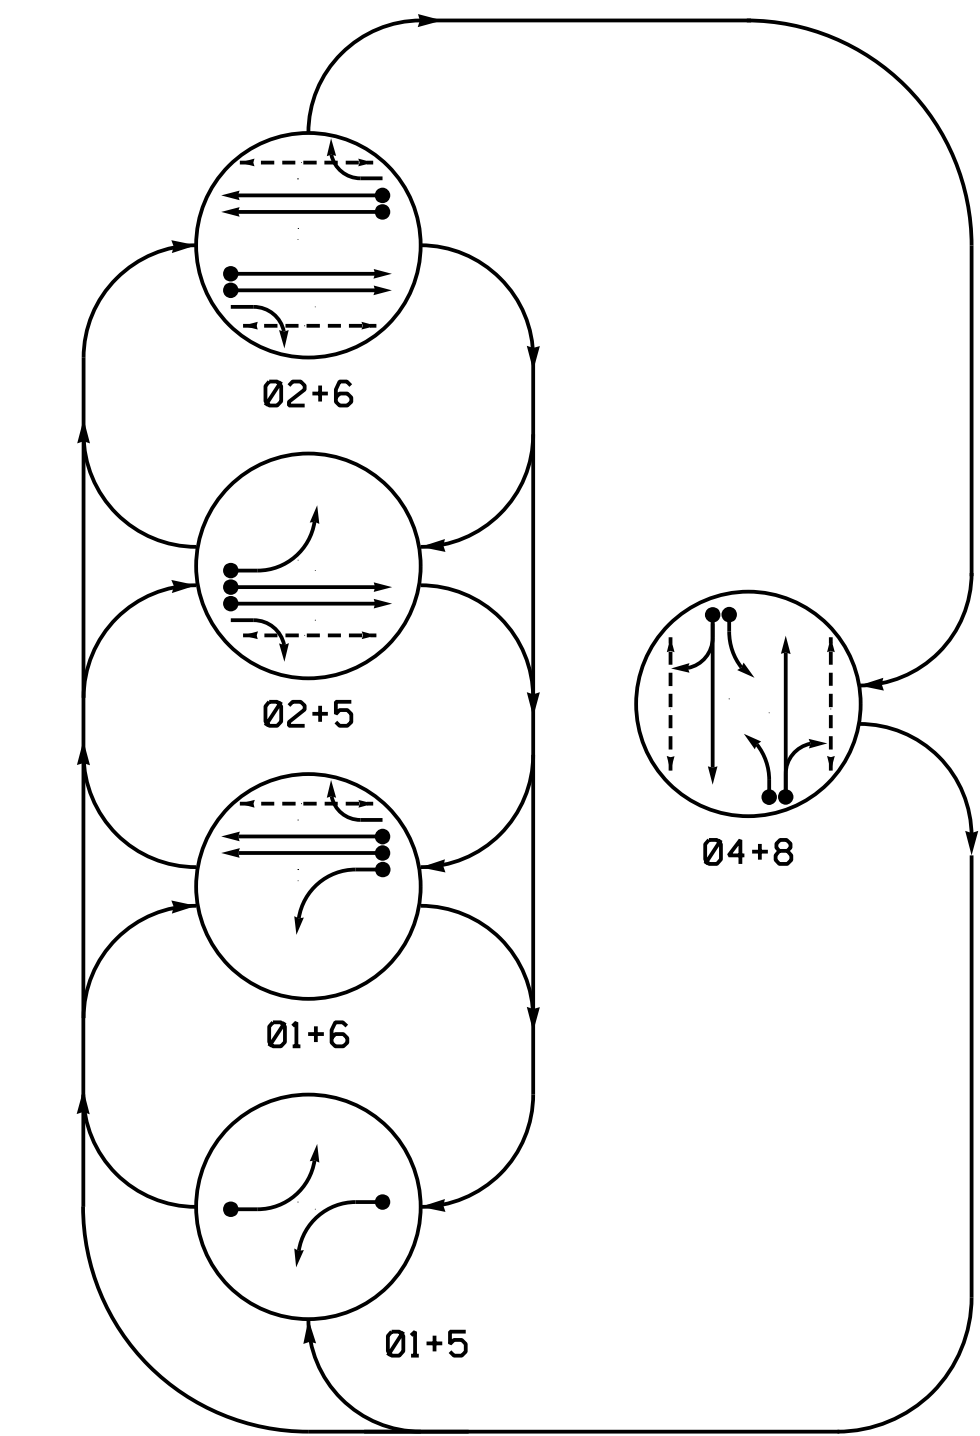

DEFAULT PHASING TABLE OF OPERATION table with columns for Signal Face and Phase (01+5, 02+5, 04+8, F, L, E, W, B, R, Y).


ALTERNATE PHASING TABLE OF OPERATION table with columns for Signal Face and Phase (01+5, 02+5, 04+8, F, L, E, W, B, R, Y).

OASIS 2070 LOOP & DETECTOR INSTALLATION CHART table with columns for Zone, Size (FT), Distance from Stopbar (FT), Turns, New Loop, Phase, Calling, Extension, Full Time Delay, Stretch Time, Delay Time, System Loop, and New Card.

\* Multizone Microwave Detection
\*\* Disable Delay During Alternate Phasing Operation.
# Disable phase call for loop(s) during alternate phasing.


5 Phase Fully Actuated Wilmington Signal System NOTES

- 1. Refer to "Roadway Standard Drawings NCDOT" dated January 2024 and "Standard Specifications for Roads and Structures" dated January 2024.
2. Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
3. Phase 1 and/or phase 5 may be lagged.
4. Set all detector units to presence mode.
5. Omit "WALK" and flashing "DON'T WALK" with no pedestrian calls.
6. Program pedestrian heads to countdown the flashing "Don't Walk" time only.
7. All pedestrian pushbuttons shall be located in the field by the Division Traffic Engineer before installation.
8. The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
9. This intersection uses multizone microwave detection. Install the detectors according to the manufacturer's instructions to achieve the desired detection.
10. Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
11. Signal system data: Controller Asset #1139.

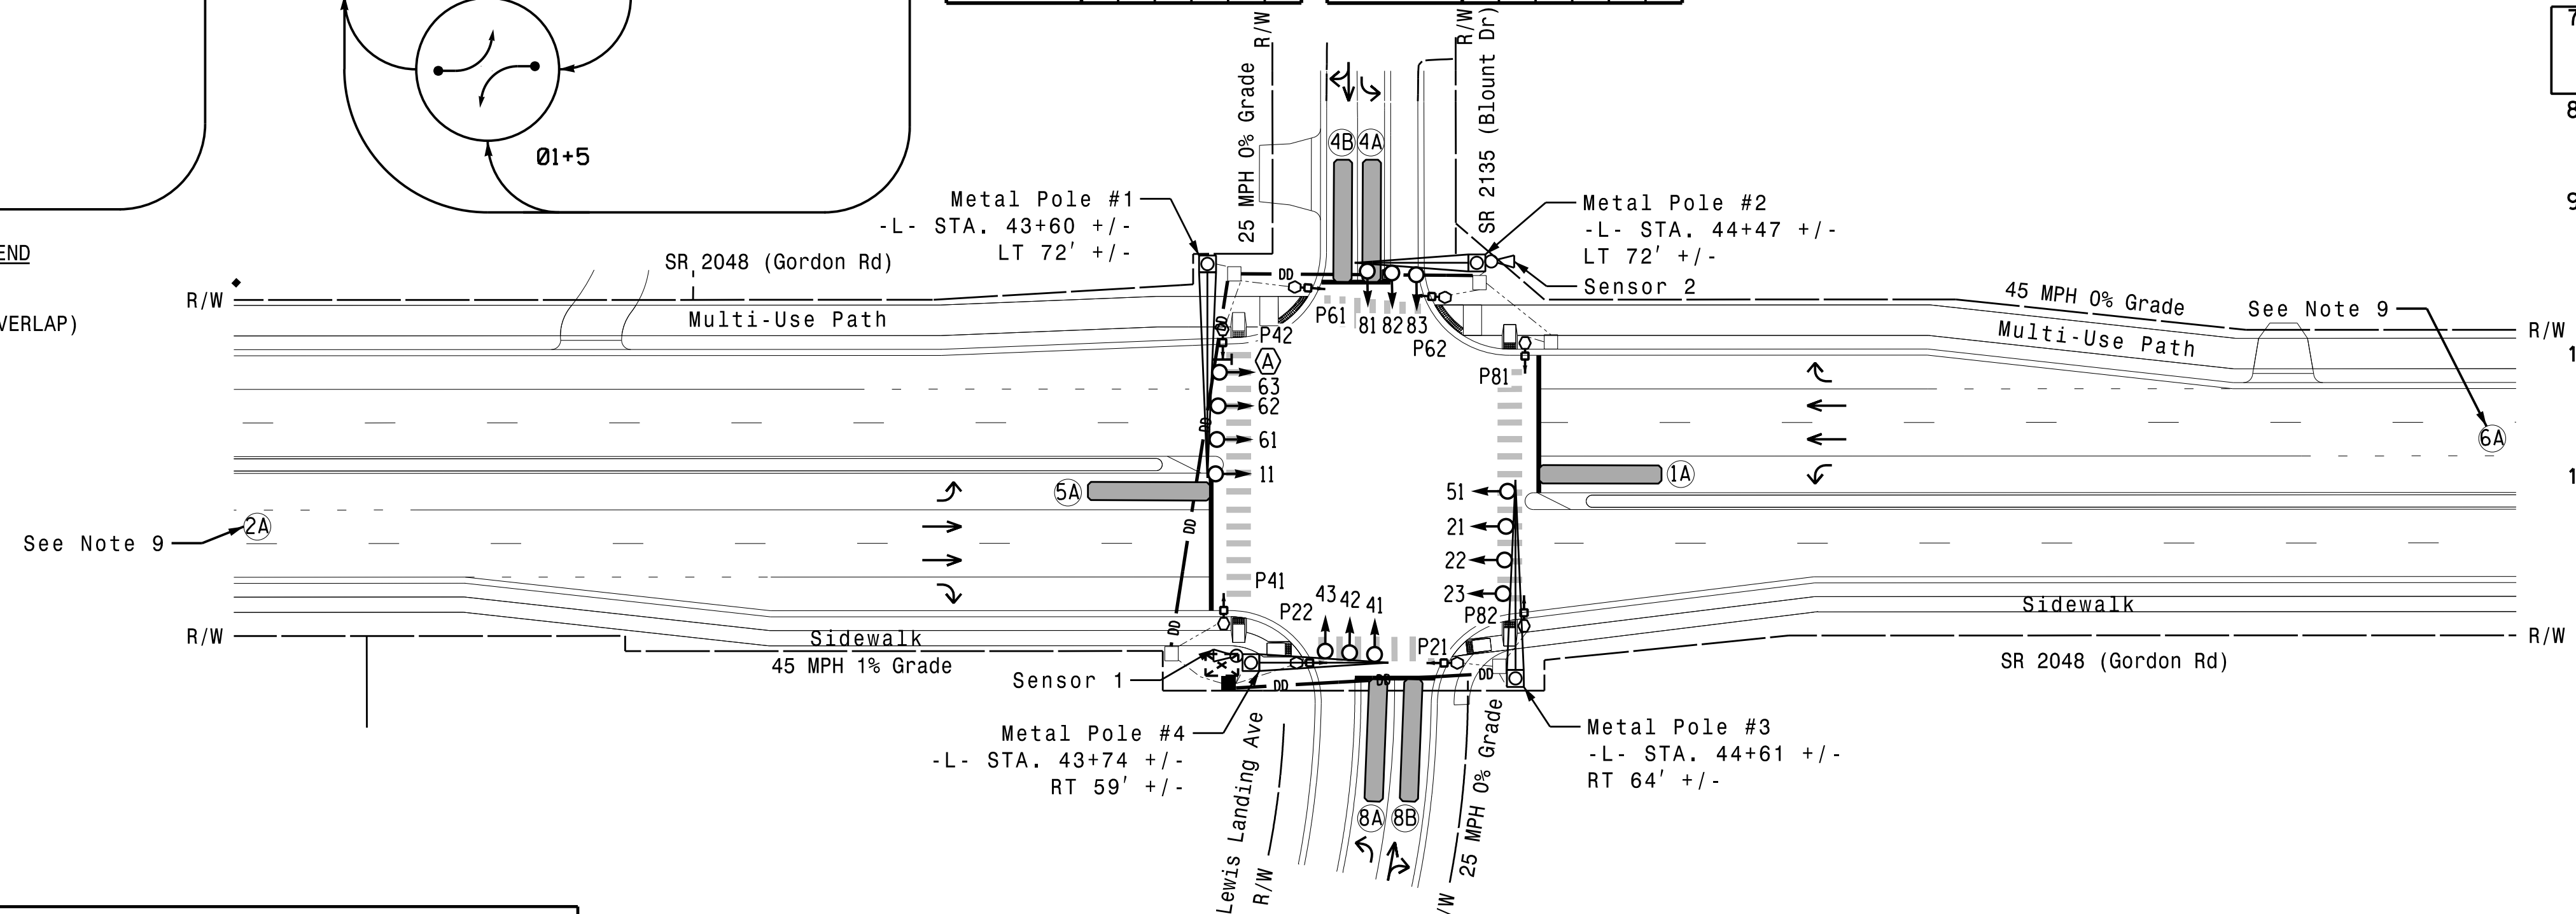


OASIS 2070 TIMING CHART table with columns for Feature and Phase (1, 2, 4, 5, 6, 8) and rows for Min Green 1, Extension 1, Max Green 1, Yellow Clearance, Red Clearance, Red Revert, Walk 1, Don't Walk 1, Advanced Walk, Seconds Per Actuation, Max Variable Initial, Time Before Reduction, Time To Reduce, Minimum Gap, Recall Mode, Vehicle Call Memory, Dual Entry, and Simultaneous Gap.

SIGNAL FACE I.D.

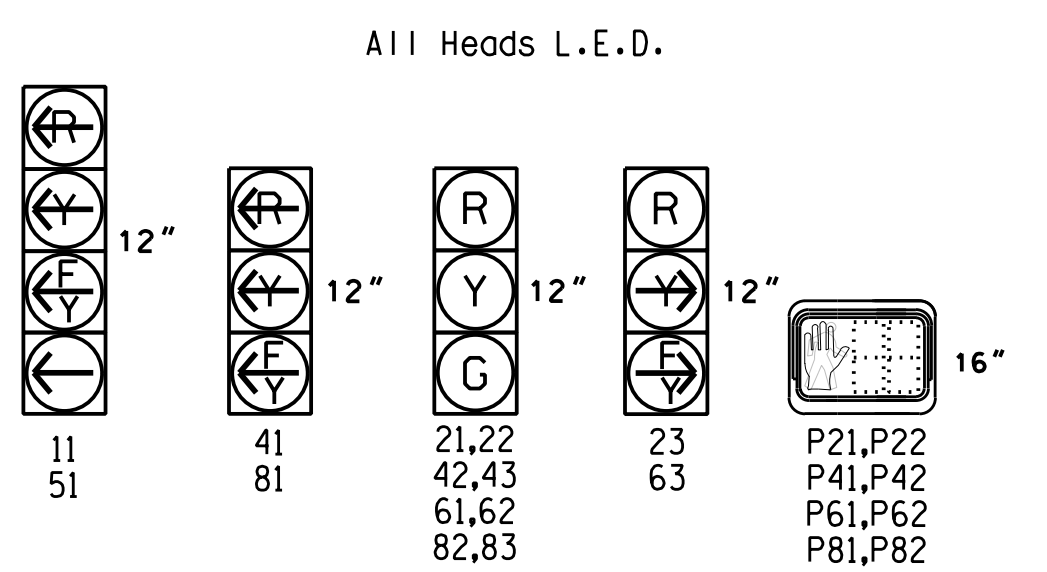


RADAR DETECTION SYSTEM table with columns for Function, Sensor 1, and Sensor 2, and rows for Channel, Phase, Direction of Travel, Detection Zone (ft), Enable Speed, Speed Range (mph), Enable Estimated Time of Arrival, and Estimated Time of Arrival (sec).


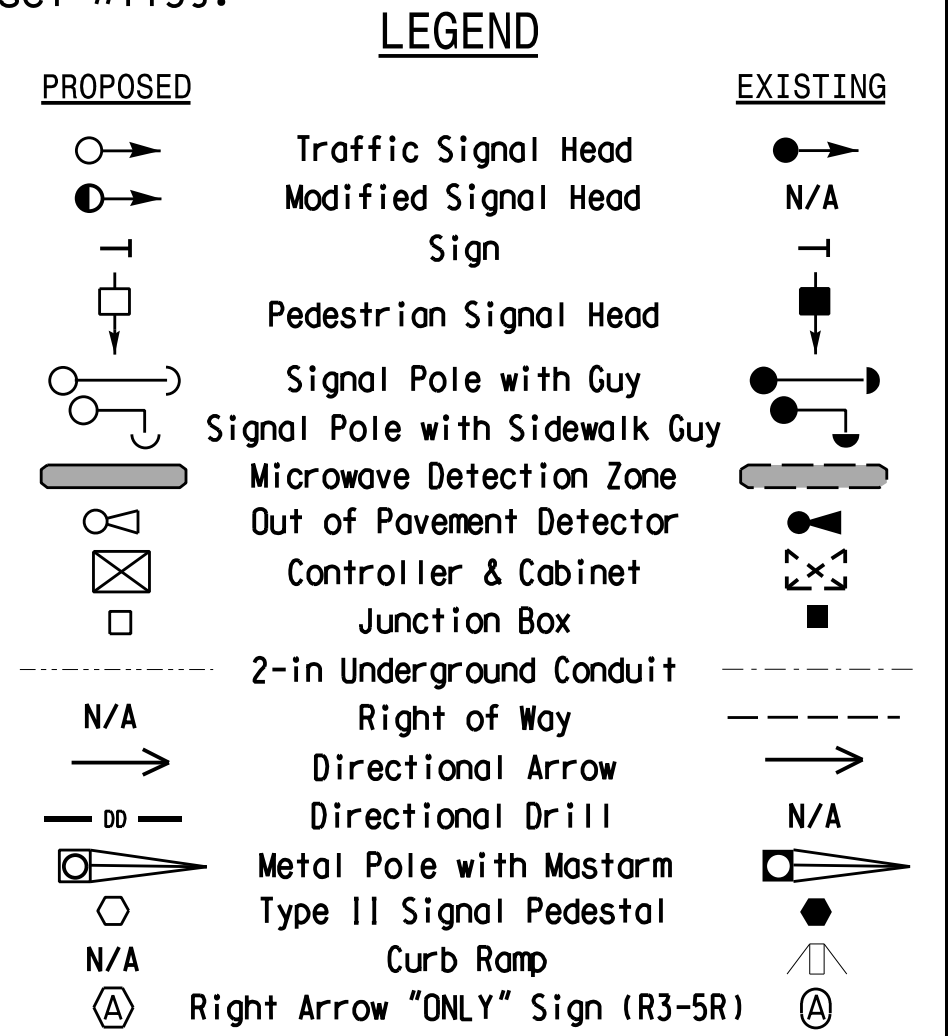


Signal Upgrade - Final Design

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

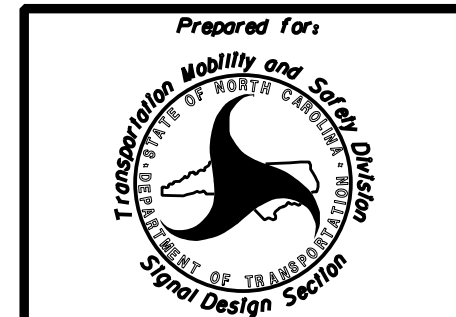

SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave
Division 3 New Hanover County Wilmington
PLAN DATE: May 2022 REVIEWED BY: N.K. Vlanich
PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons

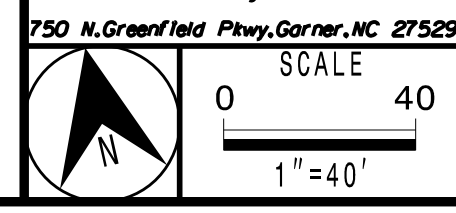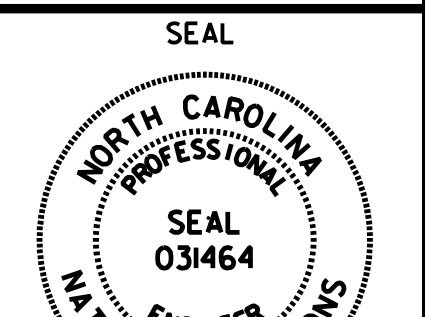


REVISIONS table with columns for REVISIONS, INITI, and DATE.

\* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.



### 18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL



(remove jumpers and set switches as shown)  
REMOVE DIODE JUMPERS 1-5, 1-6, 1-9, 1-11, 1-15, 1-17, 2-5, 2-6, 2-9, 2-11, 2-13, 2-15, 2-17, 2-18, 4-8, 4-10, 4-12, 4-14, 4-16, 5-9, 5-11, 5-13, 5-18, 6-9, 6-11, 6-13, 6-15, 6-17, 6-18, 8-10, 8-12, 8-14, 8-16, 9-11, 9-13, 9-15, 9-17, 9-18, 10-12, 10-14, 10-16, 11-13, 11-15, 11-17, 11-18, 12-14, 12-16, 13-15, 13-17, 13-18, 14-16, 15-17, 15-18, AND 17-18.

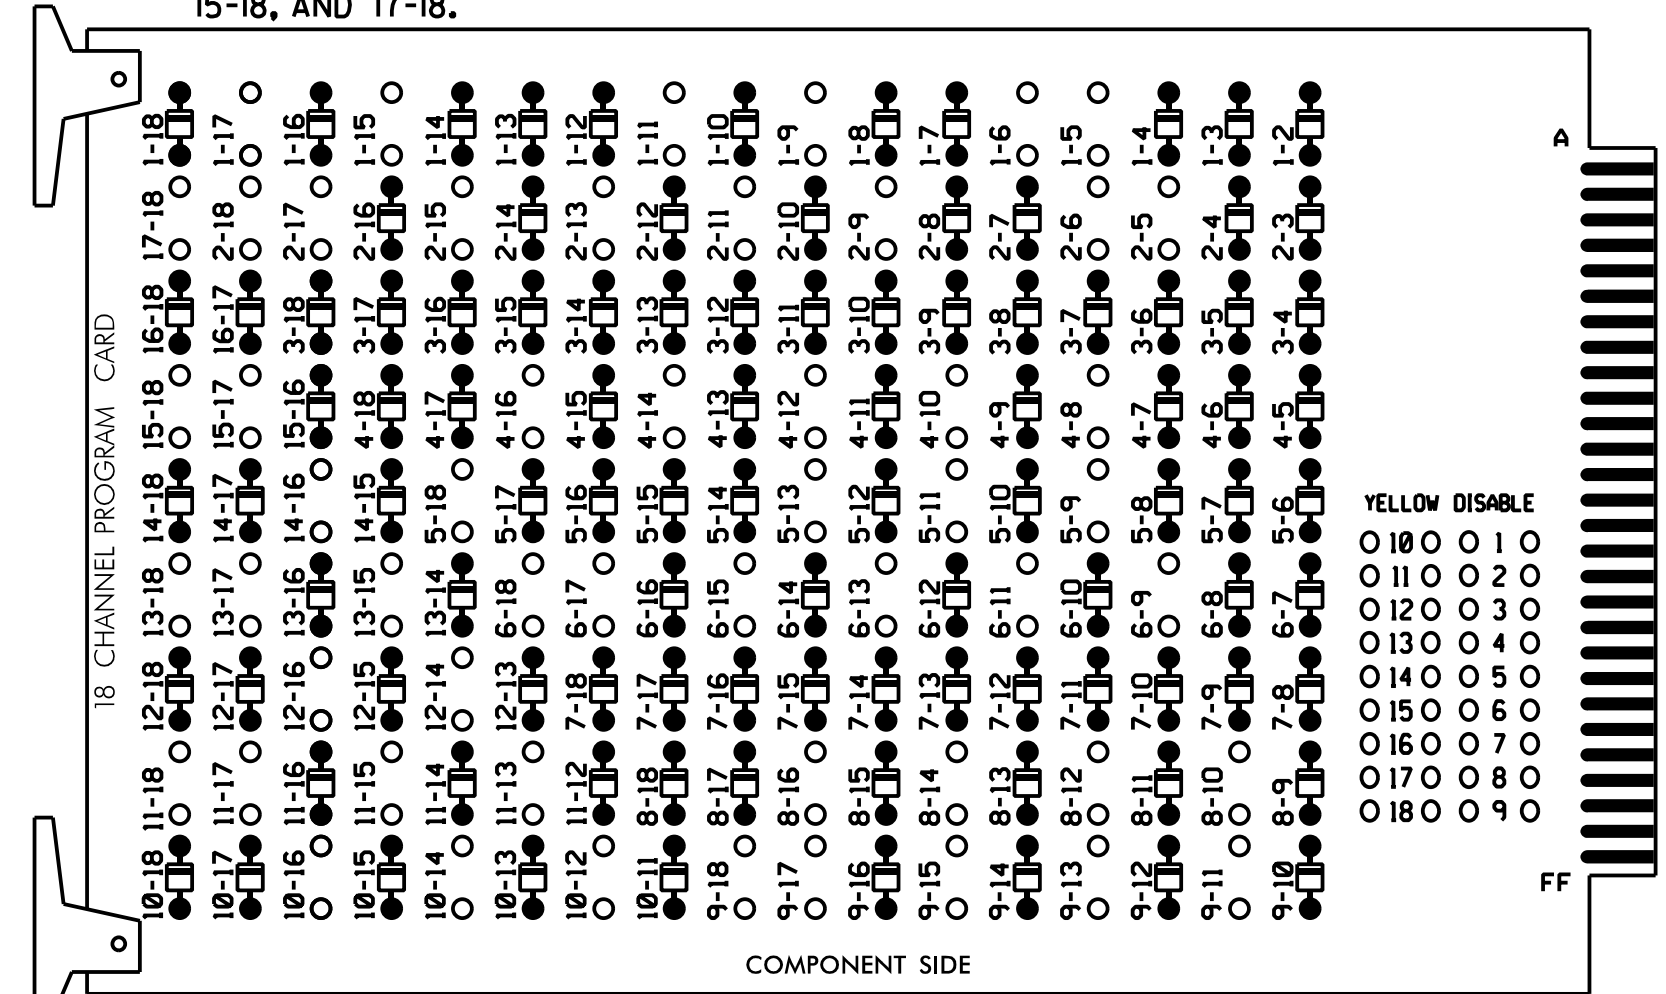

REMOVE JUMPERS AS SHOWN

#### NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 are present on the monitor board.
- Ensure that Red Enable is active at all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

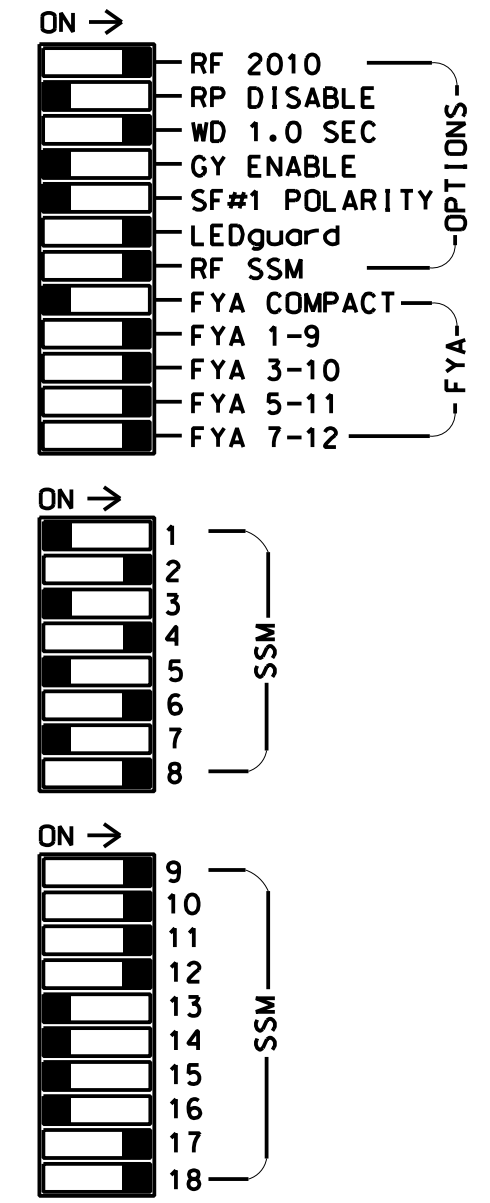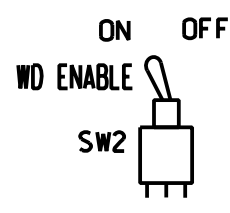

### NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Startup In Green.
- Program phases 2 and 6 for Yellow Flash, and overlaps 1, 2 and 5 as Wag Overlaps.
- The cabinet and controller are part of the Wilmington Signal System.

### EQUIPMENT INFORMATION

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S1,S2,S3,S5,S6,S7,S8,S9,S11,S12,  
 AUX S1,AUX S2,AUX S3,AUX S4,AUX S5,  
 AUX S6  
 PHASES USED.....1,2,2 PED,4,4 PED,5,6,6 PED,8,  
 8 PED  
 OVERLAP "A".....1+2  
 OVERLAP "B".....4  
 OVERLAP "C".....5+6  
 OVERLAP "D".....8  
 OVERLAP "E".....6  
 OVERLAP "F".....2

### INPUT FILE POSITION LAYOUT

(front view)

FILE	U	1	2	3	4	5	6	7	8	9	10	11	12	13	14
"I"	U	∅ 1	∅ 5	∅ 6	∅ 7	∅ 8	∅ 9	∅ 10	∅ 11	∅ 12	∅ 13	∅ 14	∅ 2PED	∅ 6PED	FS
	L	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	DC ISOLATOR	DC ISOLATOR	DC ISOLATOR
"J"	U	∅ 5	∅ 6	∅ 7	∅ 8	∅ 9	∅ 10	∅ 11	∅ 12	∅ 13	∅ 14	∅ 15	∅ 4PED	∅ 8PED	ST
	L	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	NOT USED	DC ISOLATOR	DC ISOLATOR	DC ISOLATOR

EX.: 1A, 2A, ETC. = LOOP NO.'S

FS = FLASH SENSE  
ST = STOP TIME

### SPECIAL DETECTOR NOTE

Install a multizone microwave detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish detection schemes shown on the Signal Design Plans.


### INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10★	26	6	Y	Y			
5A	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	I4U	47	9★	22	2	Y	Y			
-	-	J1U	55	17★	55	5	Y	Y			
PED PUSH BUTTONS											
P21,P22	TB8-4,6	I12U	67	29	PED 2	2 PED					
P41,P42	TB8-5,6	I12L	69	31	PED 4	4 PED					
P61,P62	TB8-7,9	I13U	68	30	PED 6	6 PED					
P81,P82	TB8-8,9	I13L	70	32	PED 8	8 PED					

NOTE:  
INSTALL DC ISOLATORS IN INPUT FILE SLOTS 112 AND 113.

\* See Input Page Assignment programming details on sheets 3 and 4.

#### INPUT FILE POSITION LEGEND: J2L

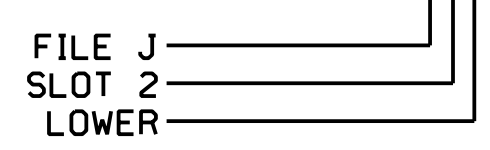

### COUNTDOWN PEDESTRIAN SIGNAL OPERATION

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

### SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	OLE	OLC	OLD	OLF
SIGNAL HEAD NO.	11★	21,22	P21, P22	NU	42,43	P41, P42	51★	61,62	P61, P62	NU	82,83	P81, P82	11★	81★	63★	51★	41★	23★
RED		128			101			134			107					A111		A104
YELLOW	*	129			102		*	135			108							
GREEN		130			103			136			109							
RED ARROW															A121	A124	A114	A101
YELLOW ARROW															A122	A125	A112	A102
FLASHING YELLOW ARROW															A123	A126	A113	A103
GREEN ARROW	127							133										
Hand				113		104			119		110							
Walking				115		106			121		112							

NU = Not Used


\* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail this sheet.

NOTE: Load switches AUX S4 and AUX S6 require output remapping. See sheets 6 and 7 of this electrical detail for instructions.

### FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

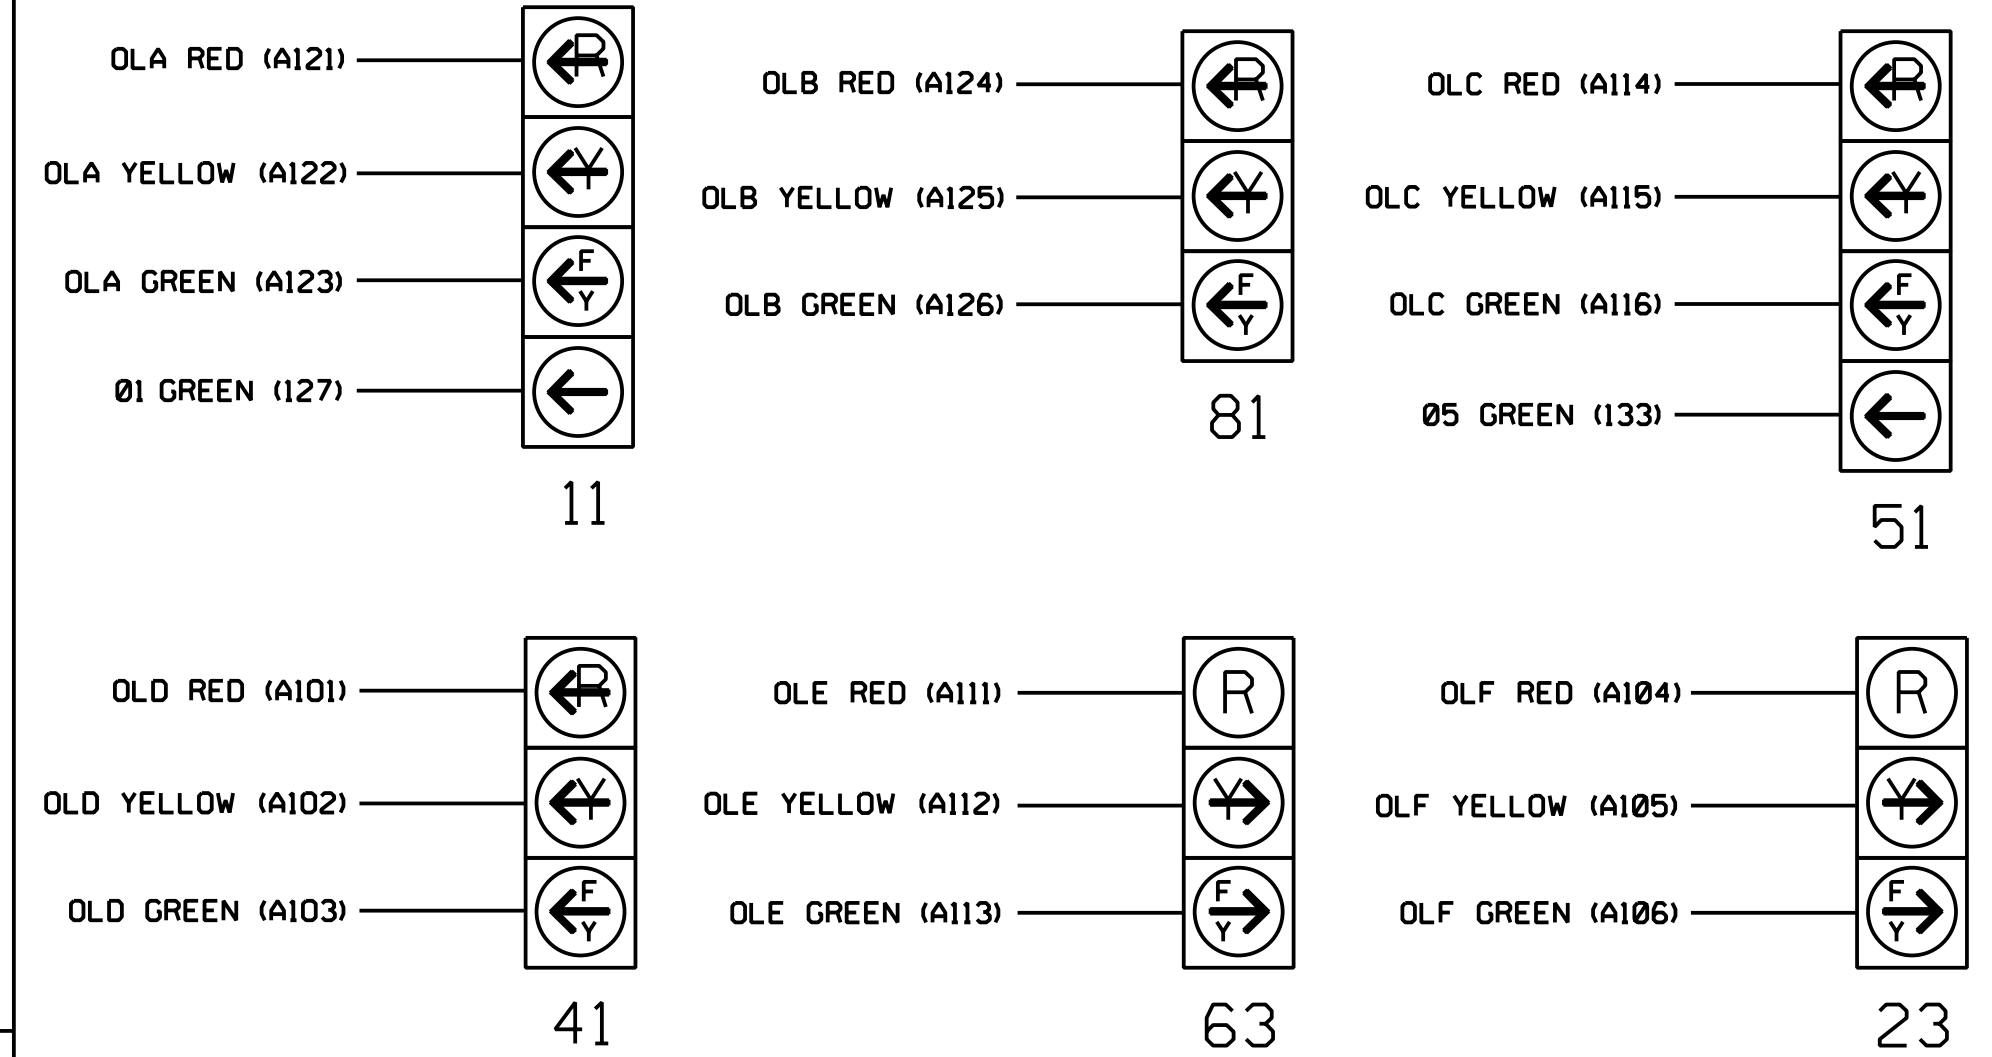


#### NOTE

The sequence display for signal heads 11 and 51 requires special logic programming. See sheet 2 for programming instructions.


### LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

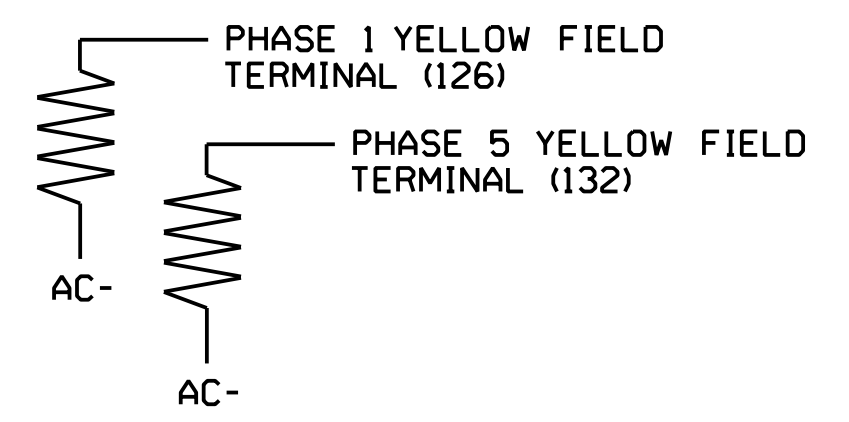

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

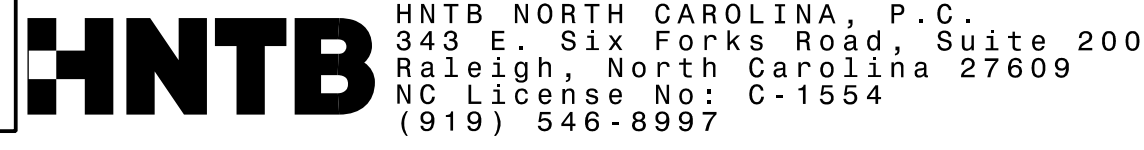

Signal Upgrade - Final Design  
Electrical Detail - Sheet 1 of 7  
DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Prepared in the Office of:  
  
 750 N. Greenfield Pkwy, Garner, NC 27529

SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave

Division 3 New Hanover County Wilmington

PLAN DATE: August 2023 REVIEWED BY: N.K. Vianich  
 PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons

REVISIONS	INIT.	DATE

DocuSigned by:  
  
 5/17/2024

SEAL  
 NORTH CAROLINA PROFESSIONAL ENGINEER  
 SEAL 031464  
 MELISSA R. SIMMONS

SIG. INVENTORY NO. 03-1139



### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5, AND 6.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON  
AND RED CLEAR ON PHASE #1 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #50 ON  
SET OUTPUT ASSIGNMENT #51 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

LOGICAL I/O COMMAND #2 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #52 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #3 (+/-COMMAND#)  
IF YELLOW ON PHASE #1 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #51 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #4 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON  
AND RED CLEAR ON PHASE #5 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #42 ON  
SET OUTPUT ASSIGNMENT #43 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

LOGICAL I/O COMMAND #5 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #44 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

LOGICAL I/O COMMAND #6 (+/-COMMAND#)  
IF YELLOW ON PHASE #5 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #43 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'B' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'D' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'E' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'F' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE PAGE 2

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'B' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE PAGE 2

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'D' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC)...0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'E' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'F' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE


**OUTPUT REFERENCE SCHEDULE**  
USE TO INTERPRET LOGIC PROCESSOR

OUTPUT 42 = Overlap C Red
OUTPUT 43 = Overlap C Yellow
OUTPUT 44 = Overlap C Green
OUTPUT 50 = Overlap A Red
OUTPUT 51 = Overlap A Yellow
OUTPUT 52 = Overlap A Green


THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade - Final Design  
Electrical Detail - Sheet 2 of 7

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

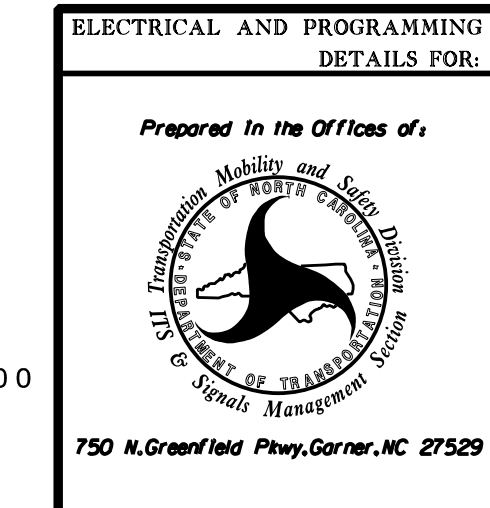

SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave		
Division 3	New Hanover County	Wilmington
PLAN DATE: August 2023	REVIEWED BY: N.K. Vlanich	
PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons	
REVISIONS	INIT.	DATE

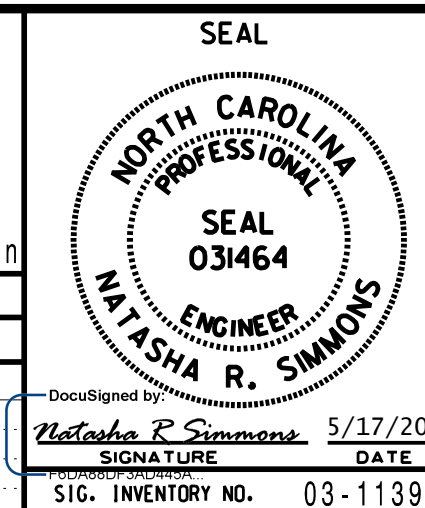

**HNTB**  
HNTB NORTH CAROLINA, P.C.  
343 E. Six Forks Road, Suite 200  
Raleigh, North Carolina 27609  
NC License No: C-1554  
(919) 546-8997

750 N. Greenfield Pkwy, Garner, NC 27529

DocuSigned by:  
Natalia R. Simmons  
5/17/2024  
DATE  
SIG. INVENTORY NO. 03-1139



INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION. 2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS). THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

PAGE: 2 C1 PIN:48 VEHICLE DETECTOR INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....26 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED  
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 1A - PHASE 6)

PAGE: 2 C1 PIN:48 NOT ENABLED INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....- PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 18

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....1 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '51' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 1A - PHASE 1)

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....51 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS). THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '1' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED :X SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade - Final Design Electrical Detail - Sheet 3 of 7

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared in the Office of: HNTB NORTH CAROLINA, P.C. 343 E. Six Forks Road, Suite 200 Raleigh, North Carolina 27609 NC License No: C-1554 (919) 546-8997

SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons

SEAL NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 031464 NASHA R. SIMMONS



### INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

```

PAGE: 2 C1 PIN:47 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....22
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER A 'Y' FOR NOT ENABLED

DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL "NOT ENABLED" IS ENTERED.

(LOOP 5A - PHASE 2)

```

PAGE: 2 C1 PIN:47 NOT ENABLED
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PRESS '+' TO ADVANCE TO INPUT 17

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....5
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER '55' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 5A - PHASE 5)

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....55
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PROGRAMMING COMPLETE

### SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....N
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED :
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '5' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....Y
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED : X
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```


DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.


THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade - Final Design  
Electrical Detail - Sheet 4 of 7

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

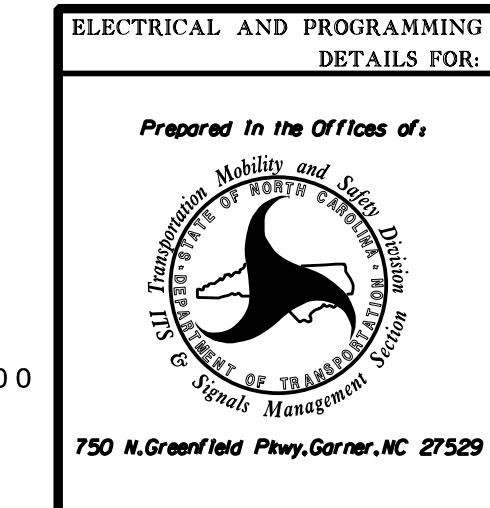

SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave		
Division 3	New Hanover County	Wilmington
PLAN DATE: August 2023	REVIEWED BY: N.K. Vianich	
PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons	
REVISIONS	INIT.	DATE

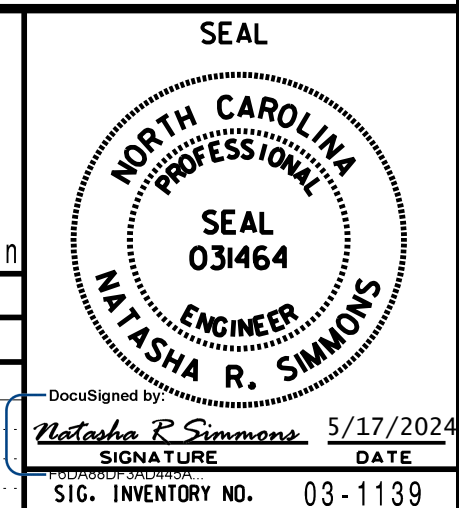



### ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAPS PAGE 2: Modifies overlap parent phases for heads 11 and 51 to run protected turns only.

INPUTS PAGE 2: Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 0 seconds.

Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 0 seconds.

### FLASHER CIRCUIT MODIFICATION DETAIL

IN ORDER TO ENSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:

- ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
- ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
- REMOVE FLASHER UNIT 2.



THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

THIS ELECTRICAL DETAIL IS FOR  
 THE SIGNAL DESIGN: 03-1139  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

Signal Upgrade - Final Design  
Electrical Detail - Sheet 5 of 7

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

**HNTB**  
 HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

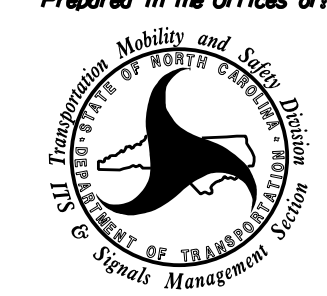ELECTRICAL AND PROGRAMMING DETAILS FOR:  Prepared in the Offices of:  750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave	SEAL  SEAL 031464 ENGINEER NATASHA R. SIMMONS
	Division 3    New Hanover County    Wilmington PLAN DATE: August 2023    REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller    REVIEWED BY: N.R. Simmons	



**OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL  
TO ASSIGN LOADSWITCH AUX S3 TO OVERLAP 'E'  
(FOR SIGNAL HEAD 63)  
(program controller as shown below)**

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS). WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "45"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:91 NOT ENABLED
OUTPUT ASSIGNMENT #.....45
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

OVERLAP "E" RED

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:91 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...5
SELECT COLOR(0=RED,1=YEL,2=GRN)...0
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

```
PAGE:1 C1 PIN:91 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....45
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

PRESS '\*' KEY FOR OUTPUT 46

```
PAGE:1 C1 PIN:93 NOT ENABLED
OUTPUT ASSIGNMENT #.....46
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....Y
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

OVERLAP "E" GREEN

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:93 NOT ENABLED
SELECT VEHICLE OVERLAP (A=1,P=16)...5
SELECT COLOR(0=RED,1=YEL,2=GRN)...2
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:93 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....46
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

PRESS '\*' KEY FOR OUTPUT 54

```
PAGE:1 C1 PIN:101 CONTROLLER FLASH
OUTPUT ASSIGNMENT #.....54
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....Y
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```

OVERLAP "E" YELLOW

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

```
PAGE:1 C1 PIN:101 CONTROLLER FLASH
SELECT VEHICLE OVERLAP (A=1,P=16)...5
SELECT COLOR(0=RED,1=YEL,2=GRN)...1
```

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

```
PAGE:1 C1 PIN:101 VEHICLE OVERLAP
OUTPUT ASSIGNMENT #.....54
FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0
DUTY CYCLE (0=DEFAULT) (0 - 100%)...0
MODE (0=SOLID,1=FLASH)...0
SELECT ASSIGNMENT:
NOT ENABLED.....
VEHICLE PHASE.....
PEDESTRIAN PHASE.....Y
VEHICLE OVERLAP.....Y
PEDESTRIAN OVERLAP.....
WATCHDOG.....
DETECTOR RESET.....
ADVANCE BEACON.....
OUT OF PHASE FLASHER.....
CONTROLLER FLASH.....
RUN FREE.....
RESERVED.....
PREEMPT.....
SOFT PREEMPT.....
ANY PREEMPT.....
COORDINATION PLAN.....
OFFSET.....
PHASE CHECK.....
PHASE ON.....
PHASE NEXT.....
```


THE OUTPUT IS SET AS CONTROLLER FLASH BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade - Final Design  
Electrical Detail - Sheet 6 of 7

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

**HNTB** HNTB NORTH CAROLINA, P.C.  
343 E. Six Forks Road, Suite 200  
Raleigh, North Carolina 27609  
NC License No: C-1554  
(919) 546-8997

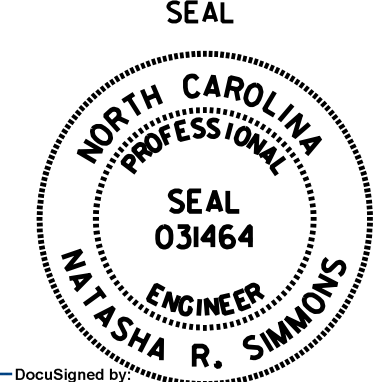 SEAL 031464 N. R. SIMMONS ENGINEER	Division 3 New Hanover County Wilmington SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave
	PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons
REVISIONS INIT. DATE	DocuSigned by: Natasha R. Simmons 5/17/2024 SIGNATURE DATE SIG. INVENTORY NO. 03-1139



OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL TO ASSIGN LOADSWITCH AUX S6 TO OVERLAP 'F' (FOR SIGNAL HEAD 23) (program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS), WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "37"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

PAGE:1 C1 PIN:83 NOT ENABLED OUTPUT ASSIGNMENT #...37 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0 SELECT ASSIGNMENT: NOT ENABLED...Y VEHICLE PHASE... PEDESTRIAN PHASE... VEHICLE OVERLAP...Y PEDESTRIAN OVERLAP... WATCHDOG... DETECTOR RESET... ADVANCE BEACON... OUT OF PHASE FLASHER... CONTROLLER FLASH... RUN FREE... RESERVED... PREEMPT... SOFT PREEMPT... ANY PREEMPT... COORDINATION PLAN... OFFSET... PHASE CHECK... PHASE ON... PHASE NEXT...

OVERLAP "F" RED

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

PAGE:1 C1 PIN:83 NOT ENABLED SELECT VEHICLE OVERLAP (A=1,P=16)...6 SELECT COLOR(0=RED,1=YEL,2=GRN)...0

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

PAGE:1 C1 PIN:83 VEHICLE OVERLAP OUTPUT ASSIGNMENT #...37 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0 SELECT ASSIGNMENT: NOT ENABLED...Y VEHICLE PHASE... PEDESTRIAN PHASE... VEHICLE OVERLAP...Y PEDESTRIAN OVERLAP... WATCHDOG... DETECTOR RESET... ADVANCE BEACON... OUT OF PHASE FLASHER... CONTROLLER FLASH... RUN FREE... RESERVED... PREEMPT... SOFT PREEMPT... ANY PREEMPT... COORDINATION PLAN... OFFSET... PHASE CHECK... PHASE ON... PHASE NEXT...

PRESS '+' KEY FOR OUTPUT 38

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

PAGE:1 C1 PIN:84 NOT ENABLED OUTPUT ASSIGNMENT #...38 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0 SELECT ASSIGNMENT: NOT ENABLED...Y VEHICLE PHASE... PEDESTRIAN PHASE... VEHICLE OVERLAP...Y PEDESTRIAN OVERLAP... WATCHDOG... DETECTOR RESET... ADVANCE BEACON... OUT OF PHASE FLASHER... CONTROLLER FLASH... RUN FREE... RESERVED... PREEMPT... SOFT PREEMPT... ANY PREEMPT... COORDINATION PLAN... OFFSET... PHASE CHECK... PHASE ON... PHASE NEXT...

OVERLAP "F" GREEN

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

PAGE:1 C1 PIN:84 NOT ENABLED SELECT VEHICLE OVERLAP (A=1,P=16)...6 SELECT COLOR(0=RED,1=YEL,2=GRN)...2

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

PAGE:1 C1 PIN:84 VEHICLE OVERLAP OUTPUT ASSIGNMENT #...38 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0 SELECT ASSIGNMENT: NOT ENABLED...Y VEHICLE PHASE... PEDESTRIAN PHASE... VEHICLE OVERLAP...Y PEDESTRIAN OVERLAP... WATCHDOG... DETECTOR RESET... ADVANCE BEACON... OUT OF PHASE FLASHER... CONTROLLER FLASH... RUN FREE... RESERVED... PREEMPT... SOFT PREEMPT... ANY PREEMPT... COORDINATION PLAN... OFFSET... PHASE CHECK... PHASE ON... PHASE NEXT...

PRESS '+' KEY FOR OUTPUT 53

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

PAGE:1 C1 PIN:100 NOT ENABLED OUTPUT ASSIGNMENT #...53 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0 SELECT ASSIGNMENT: NOT ENABLED...Y VEHICLE PHASE... PEDESTRIAN PHASE... VEHICLE OVERLAP...Y PEDESTRIAN OVERLAP... WATCHDOG... DETECTOR RESET... ADVANCE BEACON... OUT OF PHASE FLASHER... CONTROLLER FLASH... RUN FREE... RESERVED... PREEMPT... SOFT PREEMPT... ANY PREEMPT... COORDINATION PLAN... OFFSET... PHASE CHECK... PHASE ON... PHASE NEXT...

OVERLAP "F" YELLOW

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

ENTER A "Y" FOR VEHICLE OVERLAP.

PAGE:1 C1 PIN:100 NOT ENABLED SELECT VEHICLE OVERLAP (A=1,P=16)...6 SELECT COLOR(0=RED,1=YEL,2=GRN)...1

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

PAGE:1 C1 PIN:100 VEHICLE OVERLAP OUTPUT ASSIGNMENT #...53 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0 SELECT ASSIGNMENT: NOT ENABLED...Y VEHICLE PHASE... PEDESTRIAN PHASE... VEHICLE OVERLAP...Y PEDESTRIAN OVERLAP... WATCHDOG... DETECTOR RESET... ADVANCE BEACON... OUT OF PHASE FLASHER... CONTROLLER FLASH... RUN FREE... RESERVED... PREEMPT... SOFT PREEMPT... ANY PREEMPT... COORDINATION PLAN... OFFSET... PHASE CHECK... PHASE ON... PHASE NEXT...

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1139 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade - Final Design Electrical Detail - Sheet 7 of 7

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

HNTB HNTB NORTH CAROLINA, P.C. 343 E. Six Forks Road, Suite 200 Raleigh, North Carolina 27609 NC License No: C-1554 (919) 546-8997


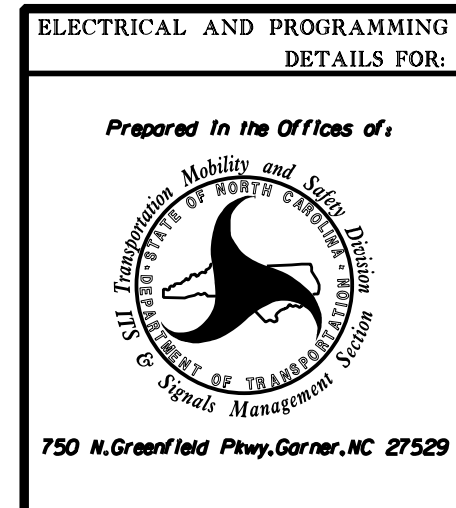



Table with project details: SR 2048 (Gordon Rd) at SR 2135 (Blount Dr)/ Lewis Landing Ave. Includes fields for Plan Date (August 2023), Prepared By (E.E. Tiller), Reviewed By (N.K. Vlanich, N.R. Simmons), and a Revisions table.



DocuSigned by: Natasha R. Simmons 5/17/2024

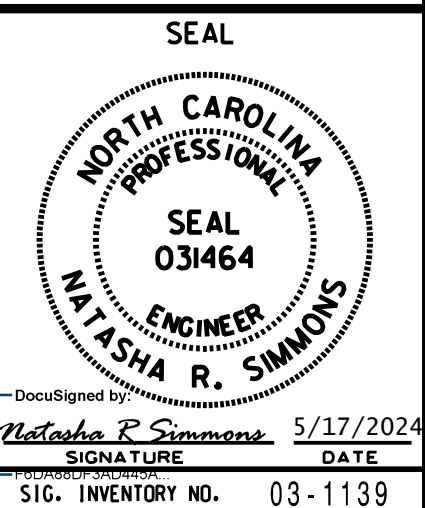

**Design Loading for METAL POLE NO. 1**

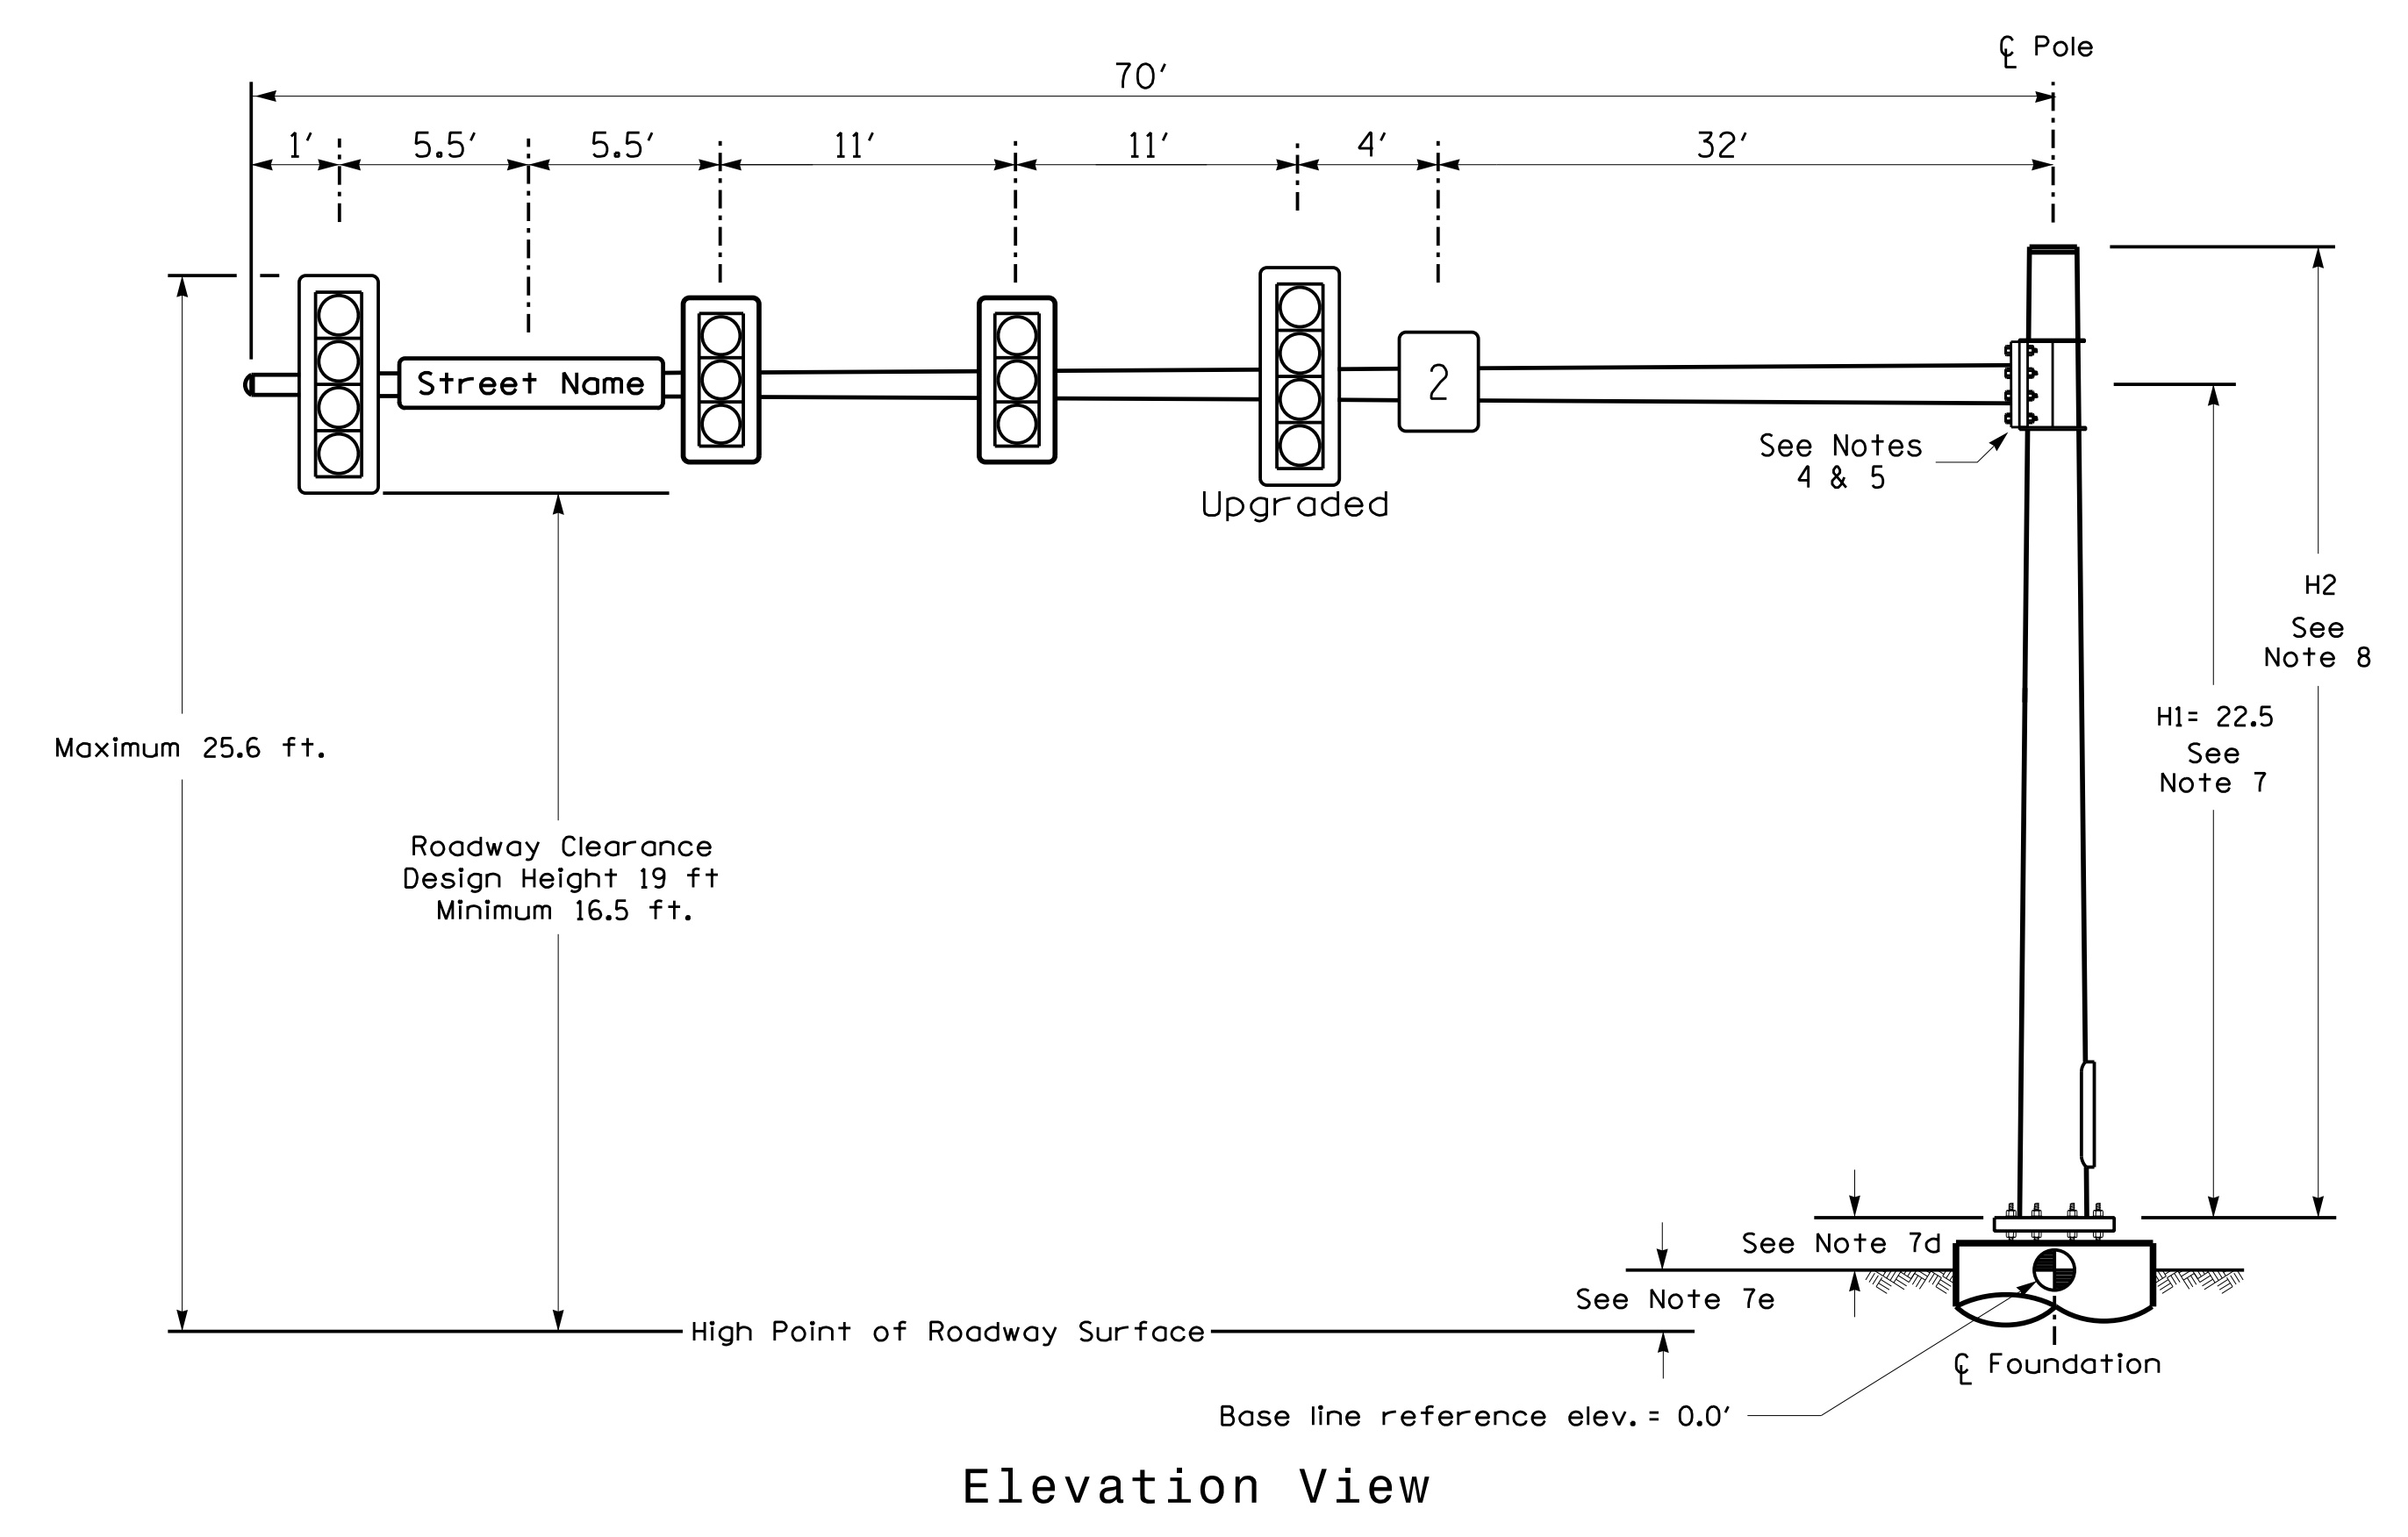


Elevation View

**SPECIAL NOTE**  
 The contractor is responsible for verifying that the mast arm attachment height (H1) will provide the "Design Height" clearance from the roadway before submitting final shop drawings for approval. Verify elevation data below which was obtained by field measurement or from available project survey data.


**Elevation Data for Mast Arm Attachment (H1)**

Elevation Differences for:	Pole 1	Pole 2
Baseline reference point at $\phi$ Foundation @ ground level	0.0 ft.	0.0 ft.
Elevation difference at High point of roadway surface	1.52 ft.	0.06 ft.
Elevation difference at Edge of travelway or face of curb	0.35 ft.	-0.12 ft.

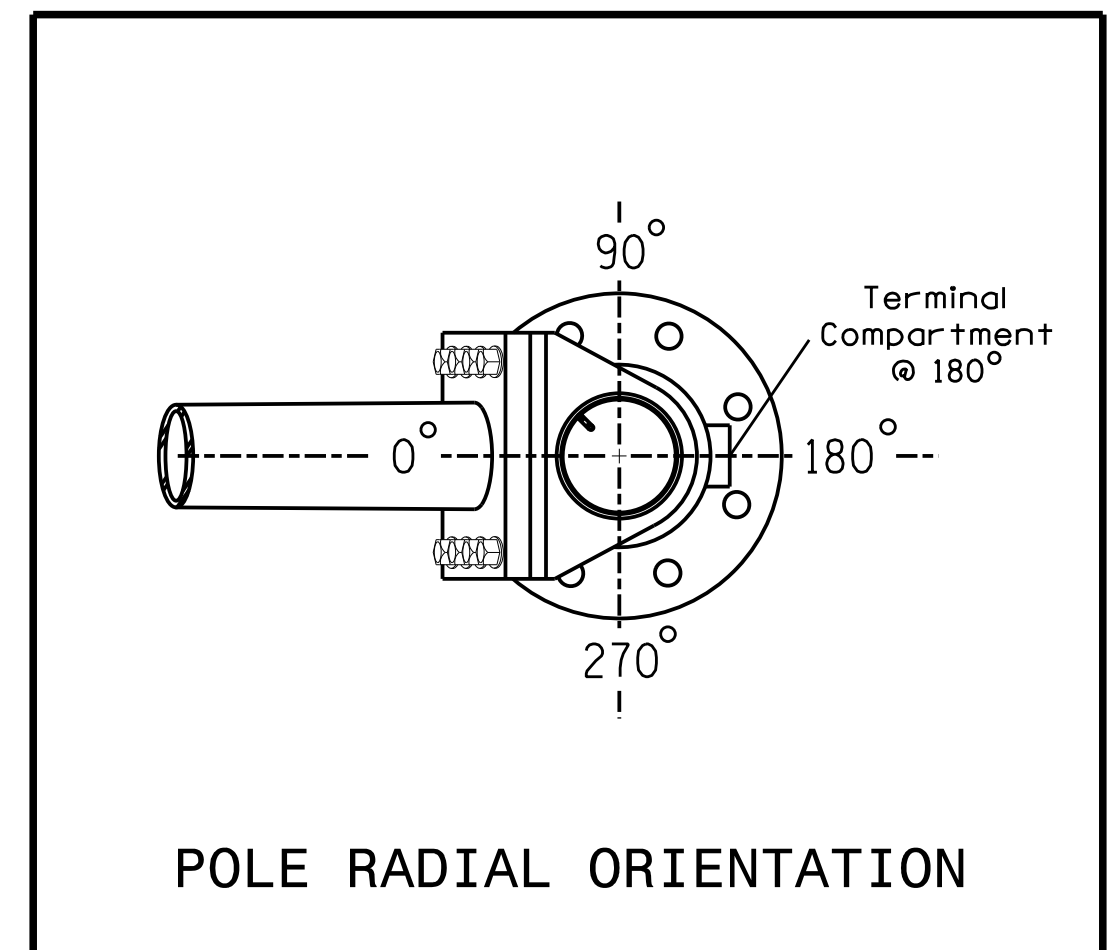


POLE RADIAL ORIENTATION


**Design Loading for METAL POLE NO. 2**

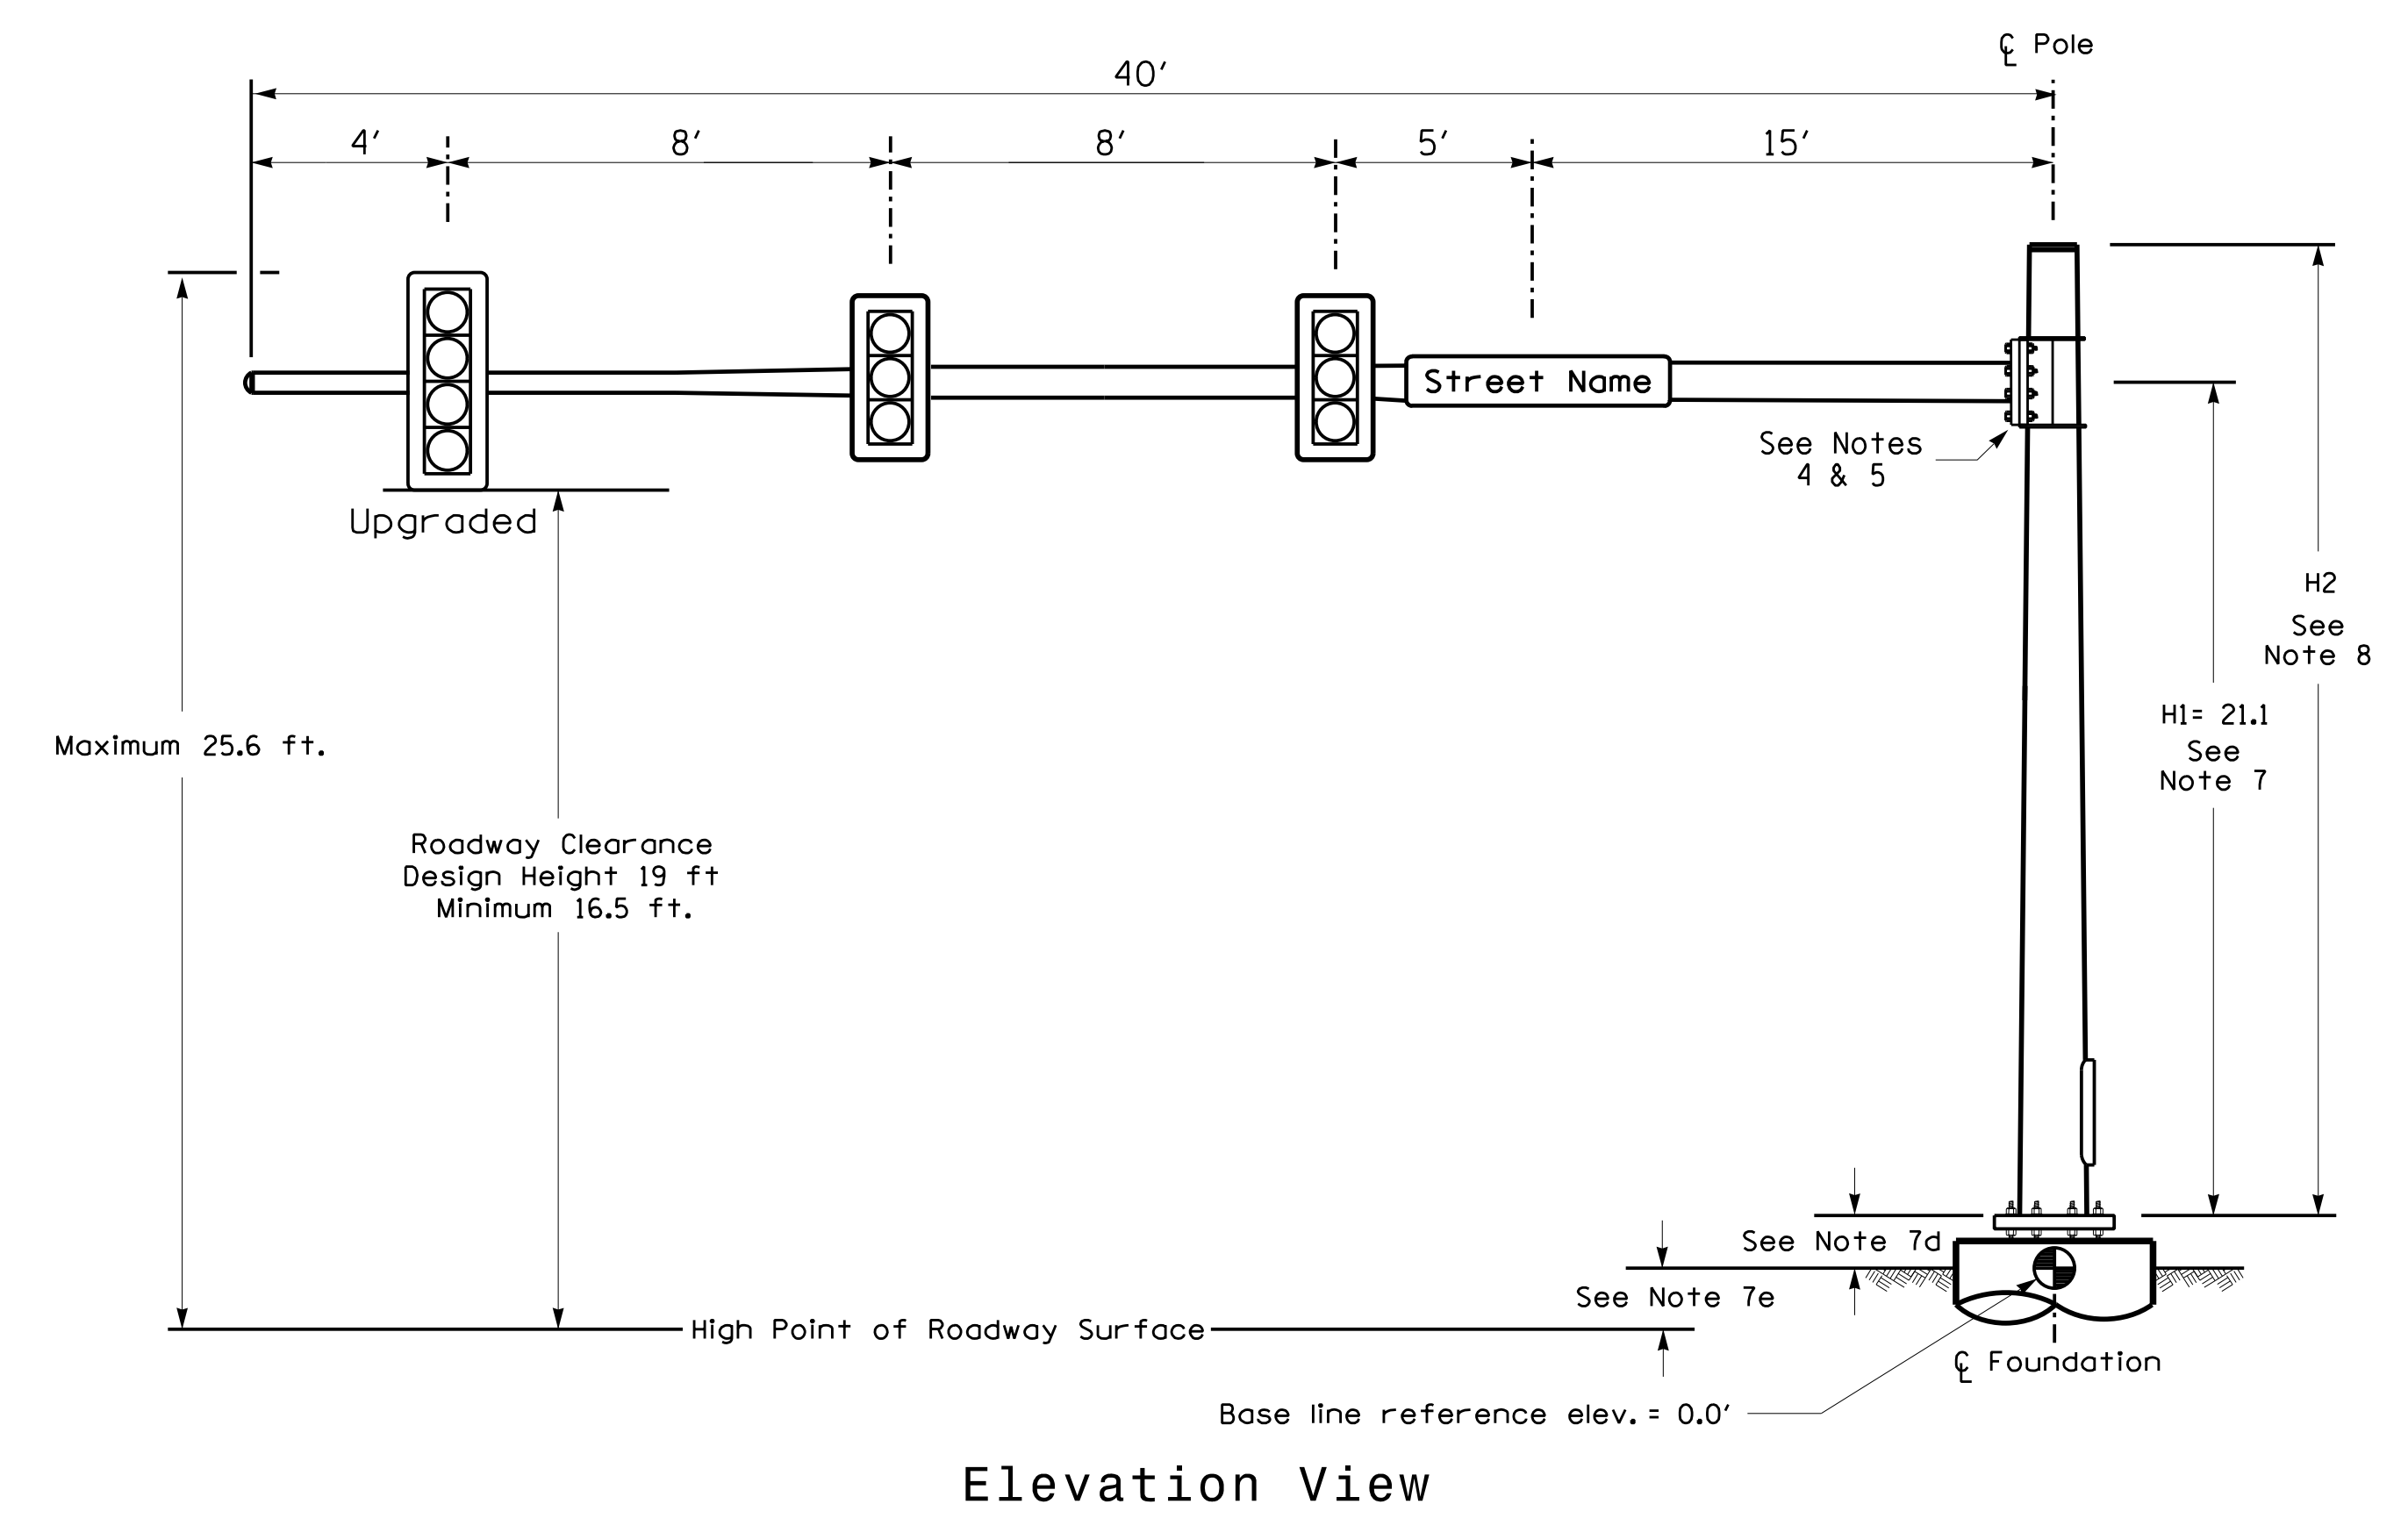

Elevation View

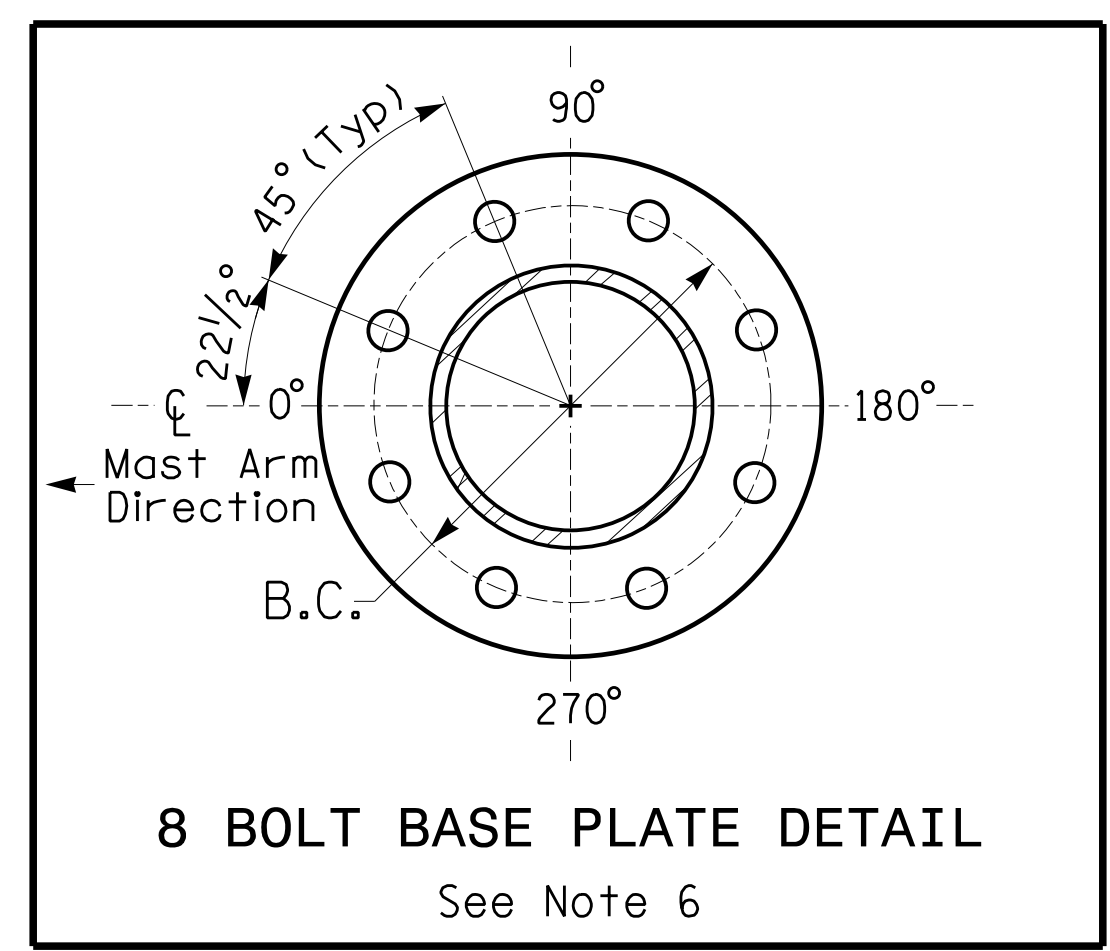

8 BOLT BASE PLATE DETAIL

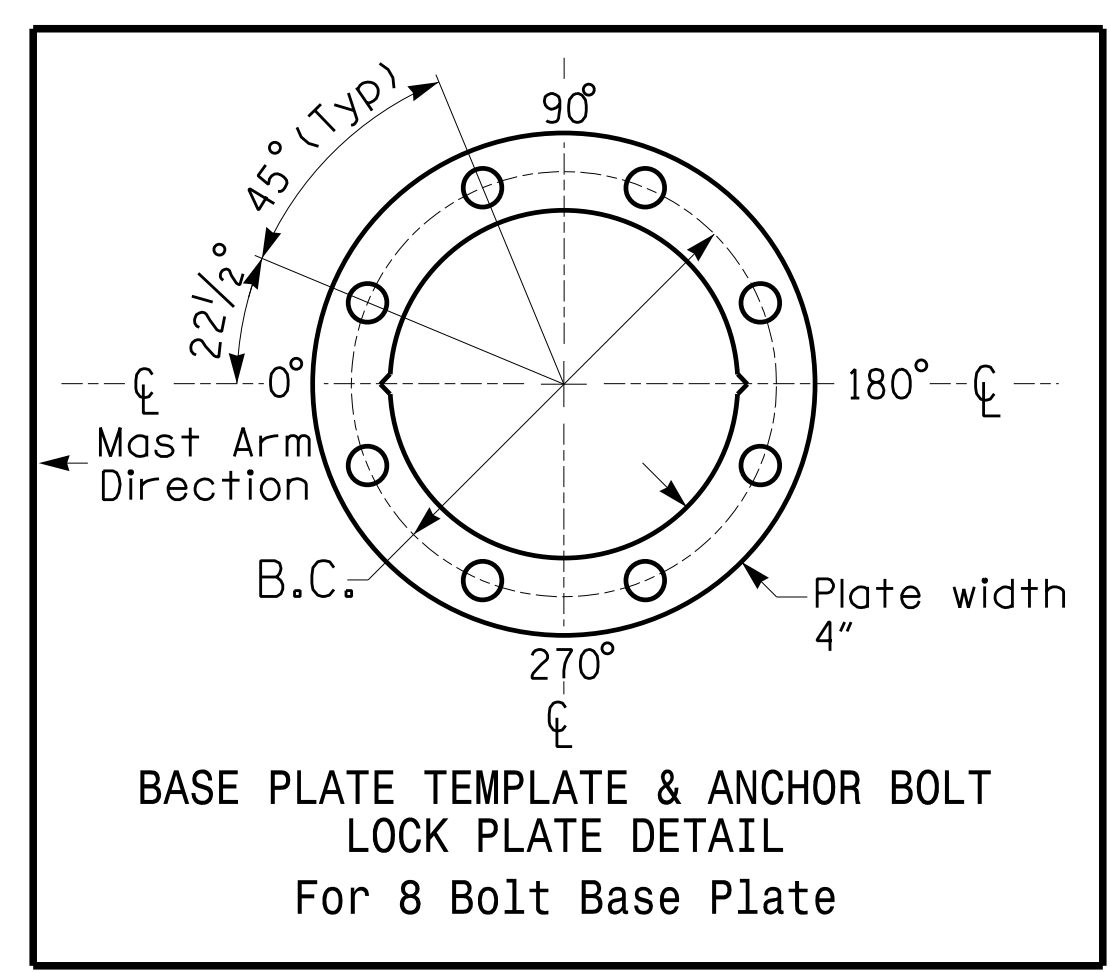

BASE PLATE TEMPLATE & ANCHOR BOLT LOCK PLATE DETAIL For 8 Bolt Base Plate

**MAST ARM LOADING SCHEDULE**

LOADING SYMBOL	DESCRIPTION	AREA	SIZE	WEIGHT
	RIGID MOUNTED SIGNAL HEAD 12"-3 SECTION-WITH BACKPLATE	9.3 S.F.	25.5" W X 52.5" L	60 LBS
	RIGID MOUNTED SIGNAL HEAD 12"-4 SECTION-WITH BACKPLATE	11.5 S.F.	25.5" W X 66.0" L	74 LBS
	SIGN RIGID MOUNTED	7.5 S.F.	30.0" W X 36.0" L	14 LBS
	STREET NAME SIGN RIGID MOUNTED	16.0 S.F.	24.0" W X 96.0" L	36 LBS

**NOTES**

**DESIGN REFERENCE MATERIAL**

- Design the traffic signal structure and foundation in accordance with:
  - The 1st Edition 2015 AASHTO LRFD "Standard Specifications for Structural Supports for Highway Signs, Luminaires, and Traffic Signals, including all of the latest interim revisions.
  - The 2024 NCDOT "Standard Specifications for Roads and Structures." The latest addenda to the specifications can be found in the traffic signal project special provisions.
  - The 2024 NCDOT Roadway Standard Drawings.
  - The traffic signal project plans and special provisions.
  - The NCDOT "Metal Pole Standards" located at the following NCDOT website: <https://connect.ncdot.gov/resources/safety/Pages/ITS-Design-Resources.aspx>

**DESIGN REQUIREMENTS**

- Design the traffic signal structure using the loading conditions shown in the elevation views. These are anticipated worst case "design loads" and may not represent the actual loads that will be applied at the time of the installation. The contractor should refer to the traffic signal plans for the actual loads that will be applied at the time of the installation.
- Design all signal supports using force ratios that do not exceed 0.9.
- The camber design for the mast arm deflection should provide an appearance of a low pitched arch where the tip or the free end of the mast arm does not deflect below horizontal when fully loaded.
- A clamp-type bolted mast arm-to-pole connection may be used instead of the welded ring stiffened box connection shown as long as the connection meets all of the design requirements. This requires staggering the connections. Use elevation data for each arm to determine appropriate arm connection points.
- Design base plate with 8 anchor bolt holes. Provide 2 inch x 60 inch anchor bolts.
- The mast arm attachment height (H1) shown is based on the following design assumptions:
  - Mast arm slope and deflection are not considered in determining the arm attachment height as they are assumed to offset each other.
  - Signal heads are rigidly mounted and vertically centered on the mast arm.
  - The roadway clearance height for design is as shown in the elevation views.
  - The top of the pole base plate is 0.75 feet above the ground elevation.
  - Refer to the Elevation Data Chart for the elevation differences between the proposed foundation ground level and the high point of the roadway.
- The pole manufacturer will determine the total height (H2) of each pole using the greater of the following:
  - Mast arm attachment height (H1) plus 2 feet, or
  - H1 plus 1/2 of the total height of the mast arm attachment assembly plus 1 foot.
- If pole location adjustments are required, the contractor must gain approval from the Engineer as this may affect the mast arm lengths and arm attachment heights. The contractor may contact the Signal Design Section Senior Structural Engineer for assistance at (919) 814-5000.
- The contractor is responsible for verifying that the mast arm length shown will allow proper positioning of the signal heads over the roadway.
- The contractor is responsible for providing soil penetration testing data (SPT) to the pole manufacturer so site specific foundations can be designed.


NCDOT Wind Zone 1 (150 mph)

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

	SR 2048 (Gordon Rd) at SR 2135 (Blount Dr) / Lewis Landing Ave		
	Division 3 New Hanover County PLAN DATE: May 2022 PREPARED BY: E.E. Tiller	Wilmington REVIEWED BY: N.K. Vlanich REVIEWED BY: N.R. Simmons	
SCALE: 0 N/A N/A	REVISIONS:	INITI. DATE	DocuSigned by: Natasha R. Simmons 5/17/2024 DATE SIG. INVENTORY NO. 03-1139



**Design Loading for METAL POLE NO. 3**

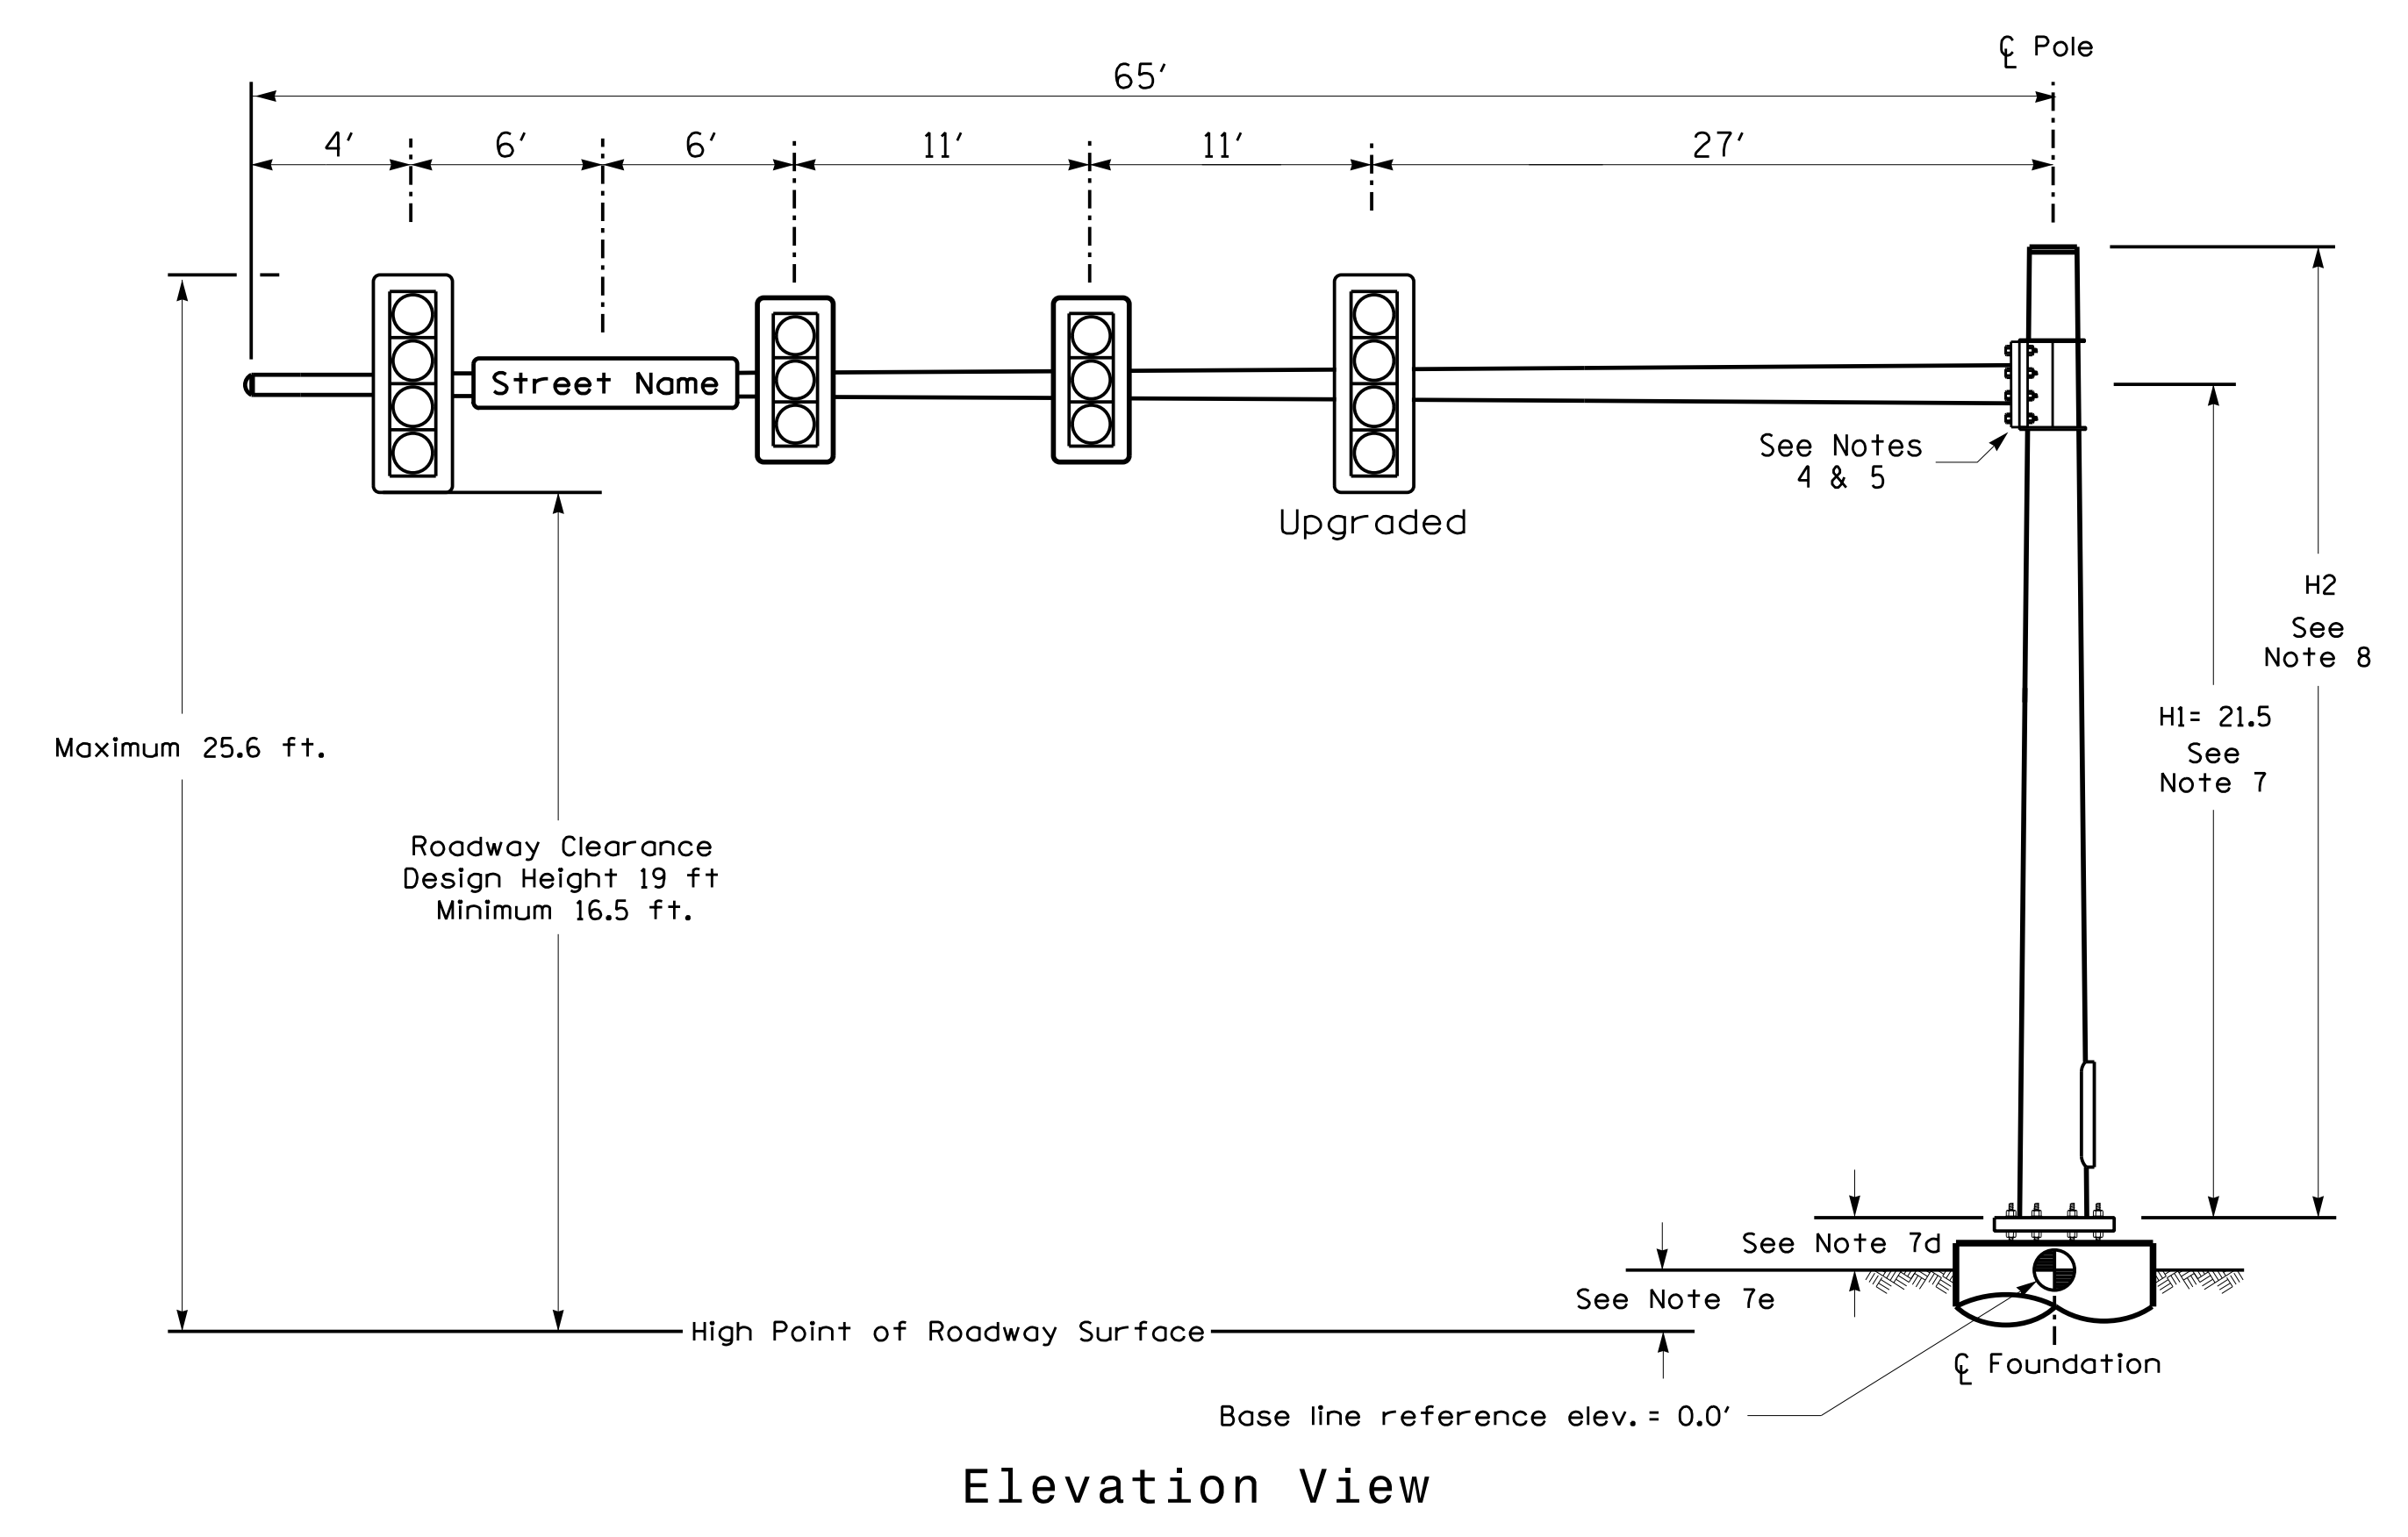

Elevation View

**SPECIAL NOTE**  
 The contractor is responsible for verifying that the mast arm attachment height (H1) will provide the "Design Height" clearance from the roadway before submitting final shop drawings for approval. Verify elevation data below which was obtained by field measurement or from available project survey data.

**Elevation Data for Mast Arm Attachment (H1)**

Elevation Differences for:	Pole 3	Pole 4
Baseline reference point at Foundation @ ground level	0.0 ft.	0.0 ft.
Elevation difference at High point of roadway surface	0.50 ft.	0.05 ft.
Elevation difference at Edge of travelway or face of curb	-0.54 ft.	-0.19 ft.

**MAST ARM LOADING SCHEDULE**

LOADING SYMBOL	DESCRIPTION	AREA	SIZE	WEIGHT
	RIGID MOUNTED SIGNAL HEAD 12"-3 SECTION-WITH BACKPLATE	9.3 S.F.	25.5" W X 52.5" L	60 LBS
	RIGID MOUNTED SIGNAL HEAD 12"-4 SECTION-WITH BACKPLATE	11.5 S.F.	25.5" W X 66.0" L	74 LBS
	STREET NAME SIGN RIGID MOUNTED	16.0 S.F.	24.0" W X 96.0" L	36 LBS


**NOTES**

**DESIGN REFERENCE MATERIAL**

- Design the traffic signal structure and foundation in accordance with:
  - The 1st Edition 2015 AASHTO LRFD "Standard Specifications for Structural Supports for Highway Signs, Luminaires, and Traffic Signals, including all of the latest interim revisions.
  - The 2024 NCDOT "Standard Specifications for Roads and Structures." The latest addenda to the specifications can be found in the traffic signal project special provisions.
  - The 2024 NCDOT Roadway Standard Drawings.
  - The traffic signal project plans and special provisions.
  - The NCDOT "Metal Pole Standards" located at the following NCDOT website: <https://connect.ncdot.gov/resources/safety/Pages/ITS-Design-Resources.aspx>


**DESIGN REQUIREMENTS**

- Design the traffic signal structure using the loading conditions shown in the elevation views. These are anticipated worst case "design loads" and may not represent the actual loads that will be applied at the time of the installation. The contractor should refer to the traffic signal plans for the actual loads that will be applied at the time of the installation.
- Design all signal supports using force ratios that do not exceed 0.9.
- The camber design for the mast arm deflection should provide an appearance of a low pitched arch where the tip or the free end of the mast arm does not deflect below horizontal when fully loaded.
- A clamp-type bolted mast arm-to-pole connection may be used instead of the welded ring stiffened box connection shown as long as the connection meets all of the design requirements. This requires staggering the connections. Use elevation data for each arm to determine appropriate arm connection points.
- Design base plate with 8 anchor bolt holes. Provide 2 inch x 60 inch anchor bolts.
- The mast arm attachment height (H1) shown is based on the following design assumptions:
  - Mast arm slope and deflection are not considered in determining the arm attachment height as they are assumed to offset each other.
  - Signal heads are rigidly mounted and vertically centered on the mast arm.
  - The roadway clearance height for design is as shown in the elevation views.
  - The top of the pole base plate is 0.75 feet above the ground elevation.
  - Refer to the Elevation Data Chart for the elevation differences between the proposed foundation ground level and the high point of the roadway.
- The pole manufacturer will determine the total height (H2) of each pole using the greater of the following:
  - Mast arm attachment height (H1) plus 2 feet, or
  - H1 plus 1/2 of the total height of the mast arm attachment assembly plus 1 foot.
- If pole location adjustments are required, the contractor must gain approval from the Engineer as this may affect the mast arm lengths and arm attachment heights. The contractor may contact the Signal Design Section Senior Structural Engineer for assistance at (919) 814-5000.
- The contractor is responsible for verifying that the mast arm length shown will allow proper positioning of the signal heads over the roadway.
- The contractor is responsible for providing soil penetration testing data (SPT) to the pole manufacturer so site specific foundations can be designed.

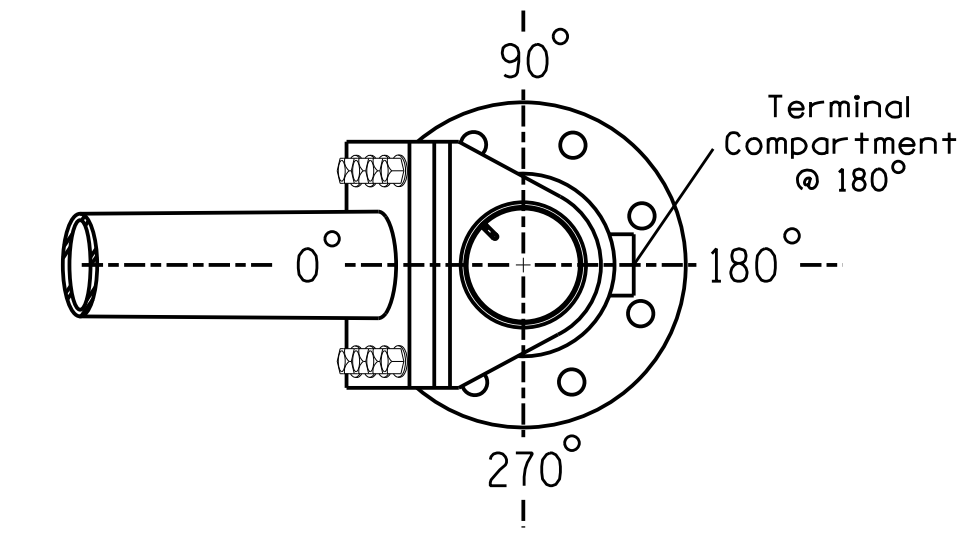


POLE RADIAL ORIENTATION


**Design Loading for METAL POLE NO. 4**

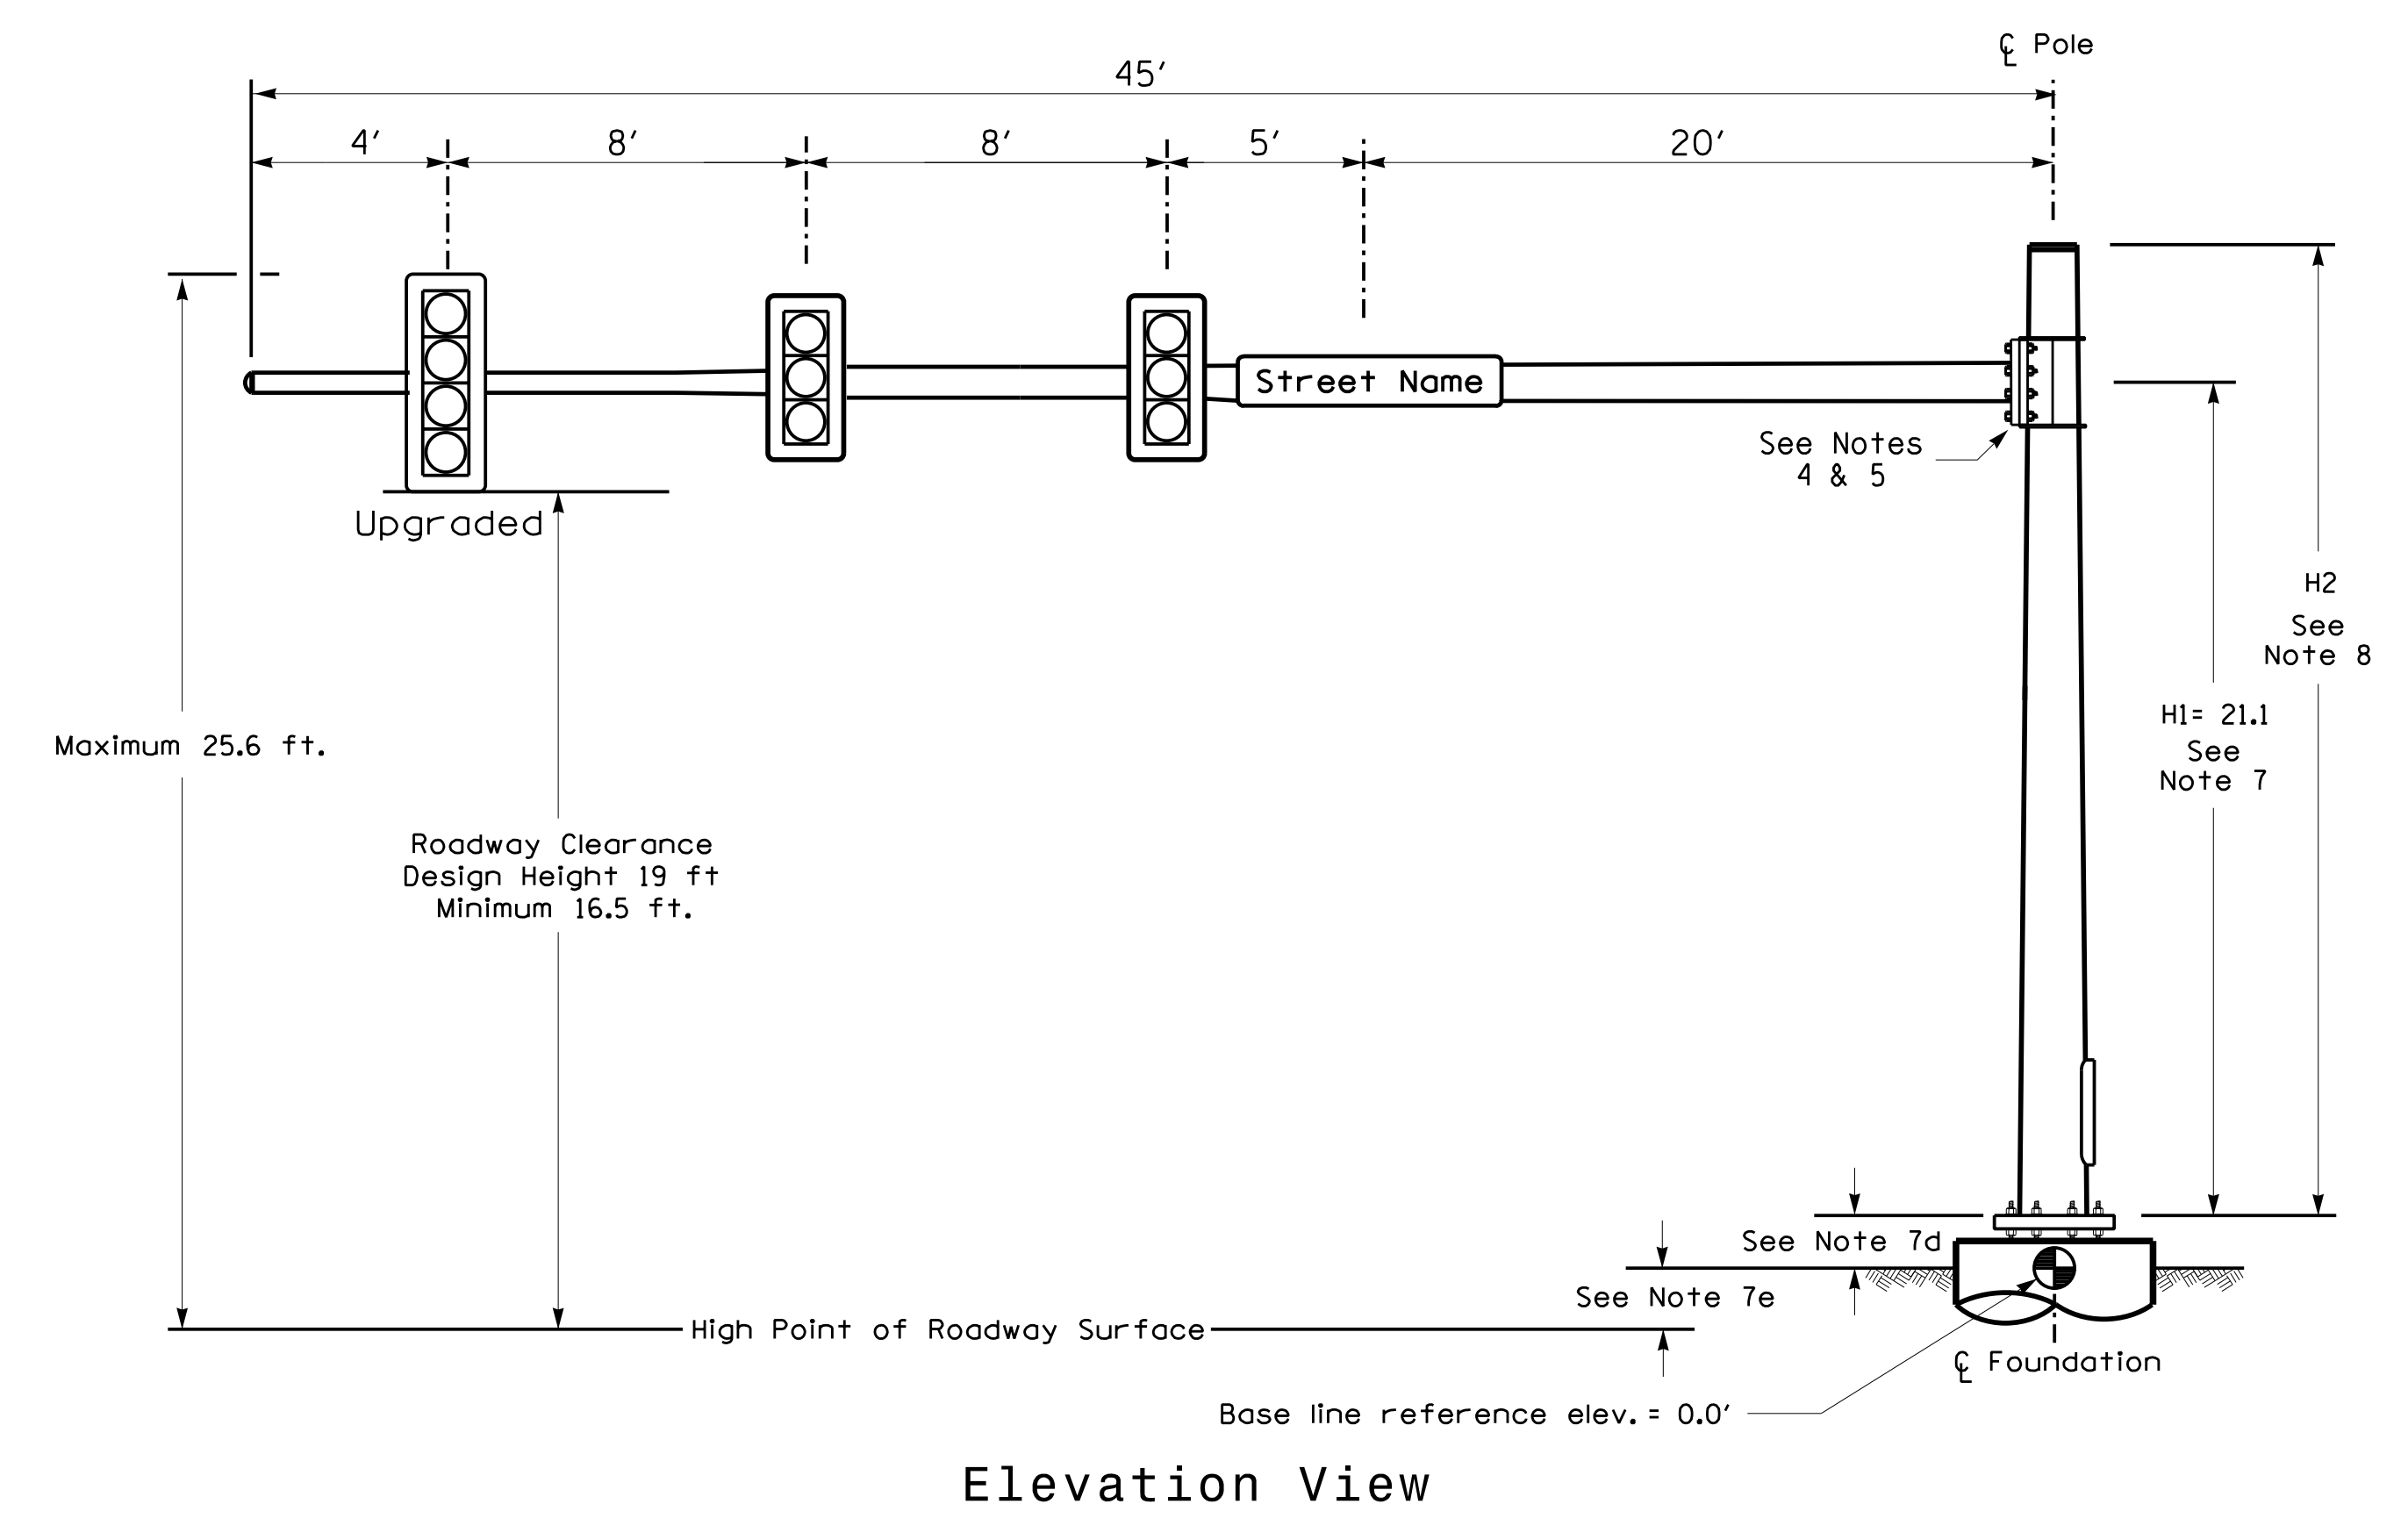

Elevation View

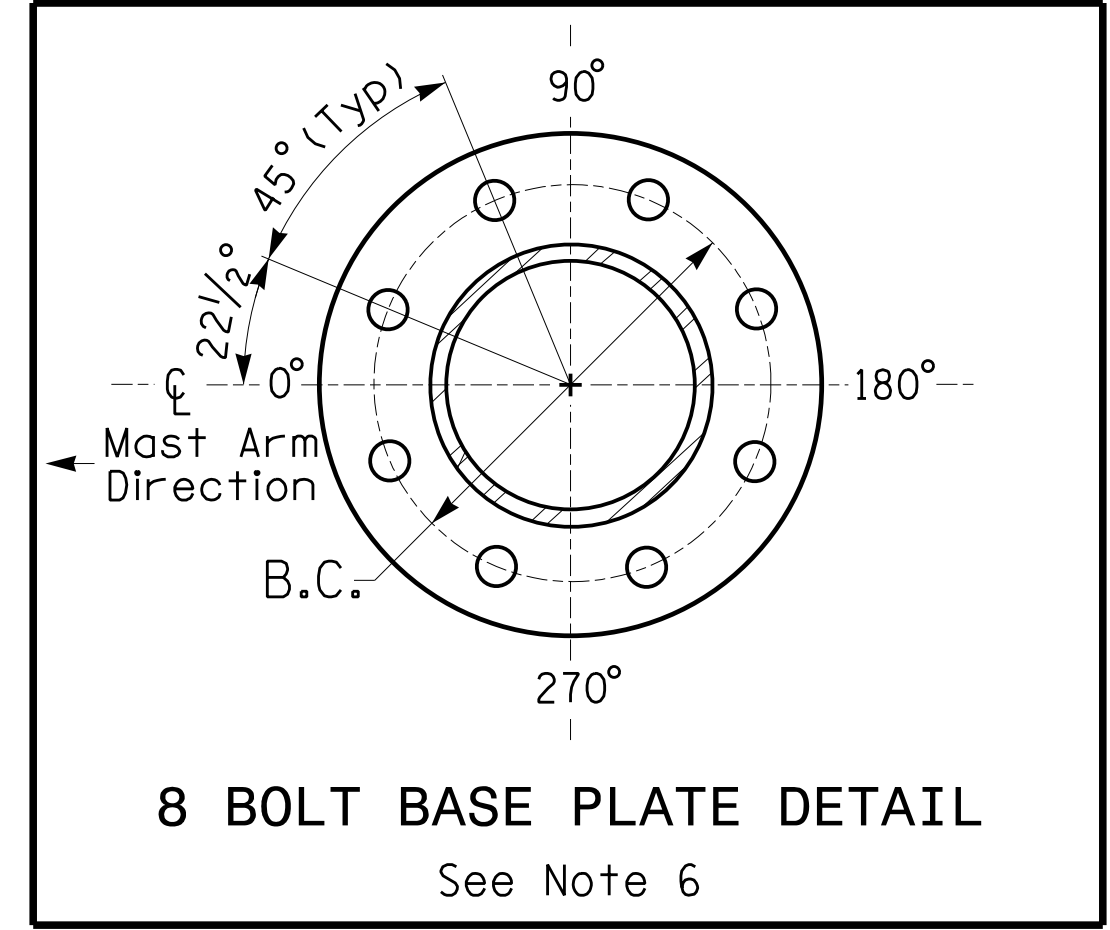

8 BOLT BASE PLATE DETAIL

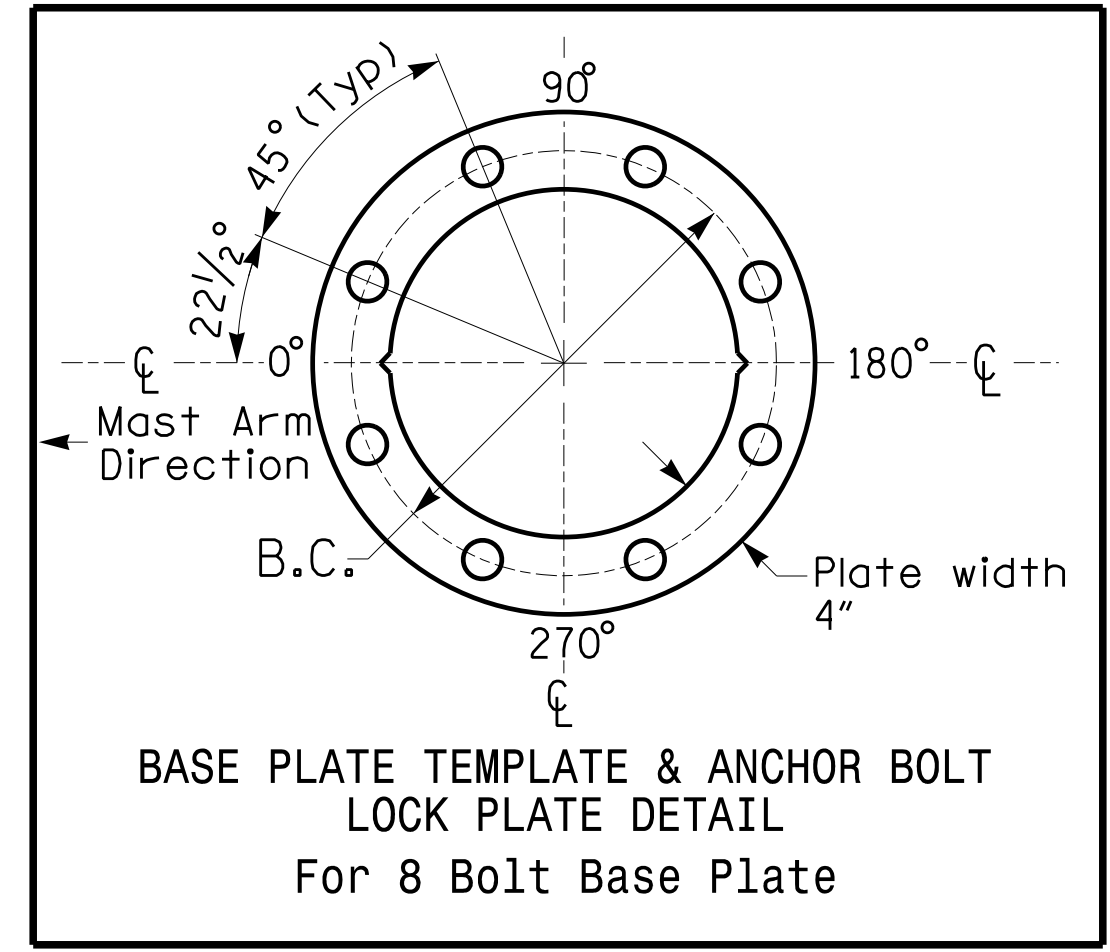

BASE PLATE TEMPLATE & ANCHOR BOLT LOCK PLATE DETAIL For 8 Bolt Base Plate


NCDOT Wind Zone 1 (150 mph)

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**


	SR 2048 (Gordon Rd) at SR 2135 (Blount Dr) / Lewis Landing Ave		
	Division 3 New Hanover County PLAN DATE: May 2022 PREPARED BY: E.E. Tiller	Wilmington REVIEWED BY: N.K. Vlanich REVIEWED BY: N.R. Simmons	



**DEFAULT PHASING DIAGRAM**

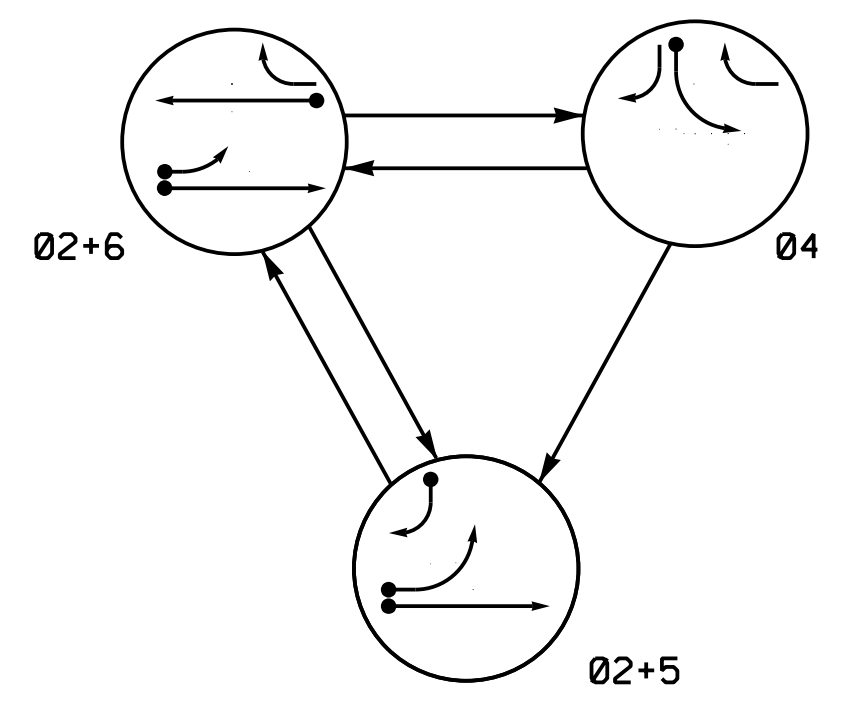

**ALTERNATE PHASING DIAGRAM**

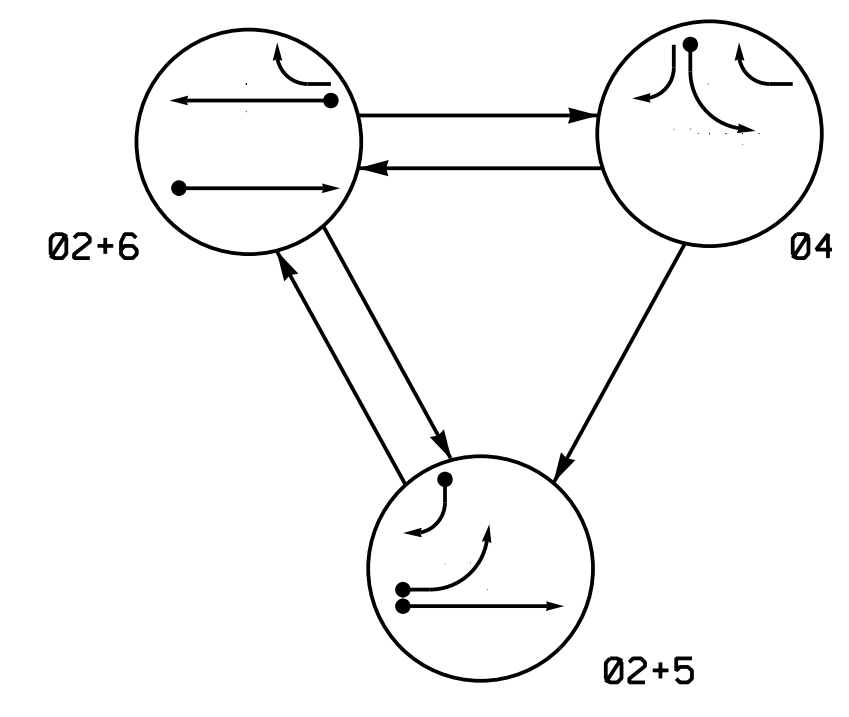

**PHASING DIAGRAM DETECTION LEGEND**

- ◄●► DETECTED MOVEMENT
- ◄◄◄ UNDETECTED MOVEMENT (OVERLAP)
- ◄◄◄◄ UNSIGNALIZED MOVEMENT
- ◄◄◄◄◄ PEDESTRIAN MOVEMENT

**DEFAULT PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE			
	02+5	02+6	04	F L C
21,22	G	G	R	Y
41,43	R	R	G	R
42	R	R	G	R
51	-	Y	R	Y
61	R	G	R	Y
62	R	G	R	Y

**ALTERNATE PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE			
	02+5	02+6	04	F L C
21,22	G	G	R	Y
41,43	R	R	G	R
42	R	R	G	R
51	-	R	R	Y
61	R	G	R	Y
62	R	G	R	Y

**OASIS 2070 LOOP & DETECTOR INSTALLATION CHART**

ZONE	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	DETECTOR PROGRAMMING				STRETCH TIME	DELAY TIME	SYSTEM LOOP	NEW CARD
					PHASE	CALLING	EXTENSION	FULL TIME DELAY				
4A	6X40	0	*	*	4	Y	Y	-	-	3	-	Y
5A	6X40	0	*	*	5	Y	Y	-	-	15**	-	Y
5B	6X40	0	*	*	5	Y	Y	-	-	15	-	Y



- \* Multizone Microwave Detection
- \*\* Disable Delay During Alternate Phasing Operation.
- # Disable phase call for loop(s) during alternate phasing.

**3 Phase Fully Actuated Wilmington Signal System**

**NOTES**

1. Refer to "Roadway Standard Drawings NCDOT" dated January 2024 and "Standard Specifications for Roads and Structures" dated January 2024.
2. Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
3. Phase 5 may be lagged.
4. Set all detector units to presence mode.
5. Locate new cabinet so as to not obstruct sight distance of vehicles turning right on red.
6. The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
7. This intersection uses multi-zone microwave detection. Install the detectors according to the manufacturer's instructions to achieve the desired detection.
8. Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
9. Signal system data: Controller Asset #0840.

**SIGNAL FACE I.D.**

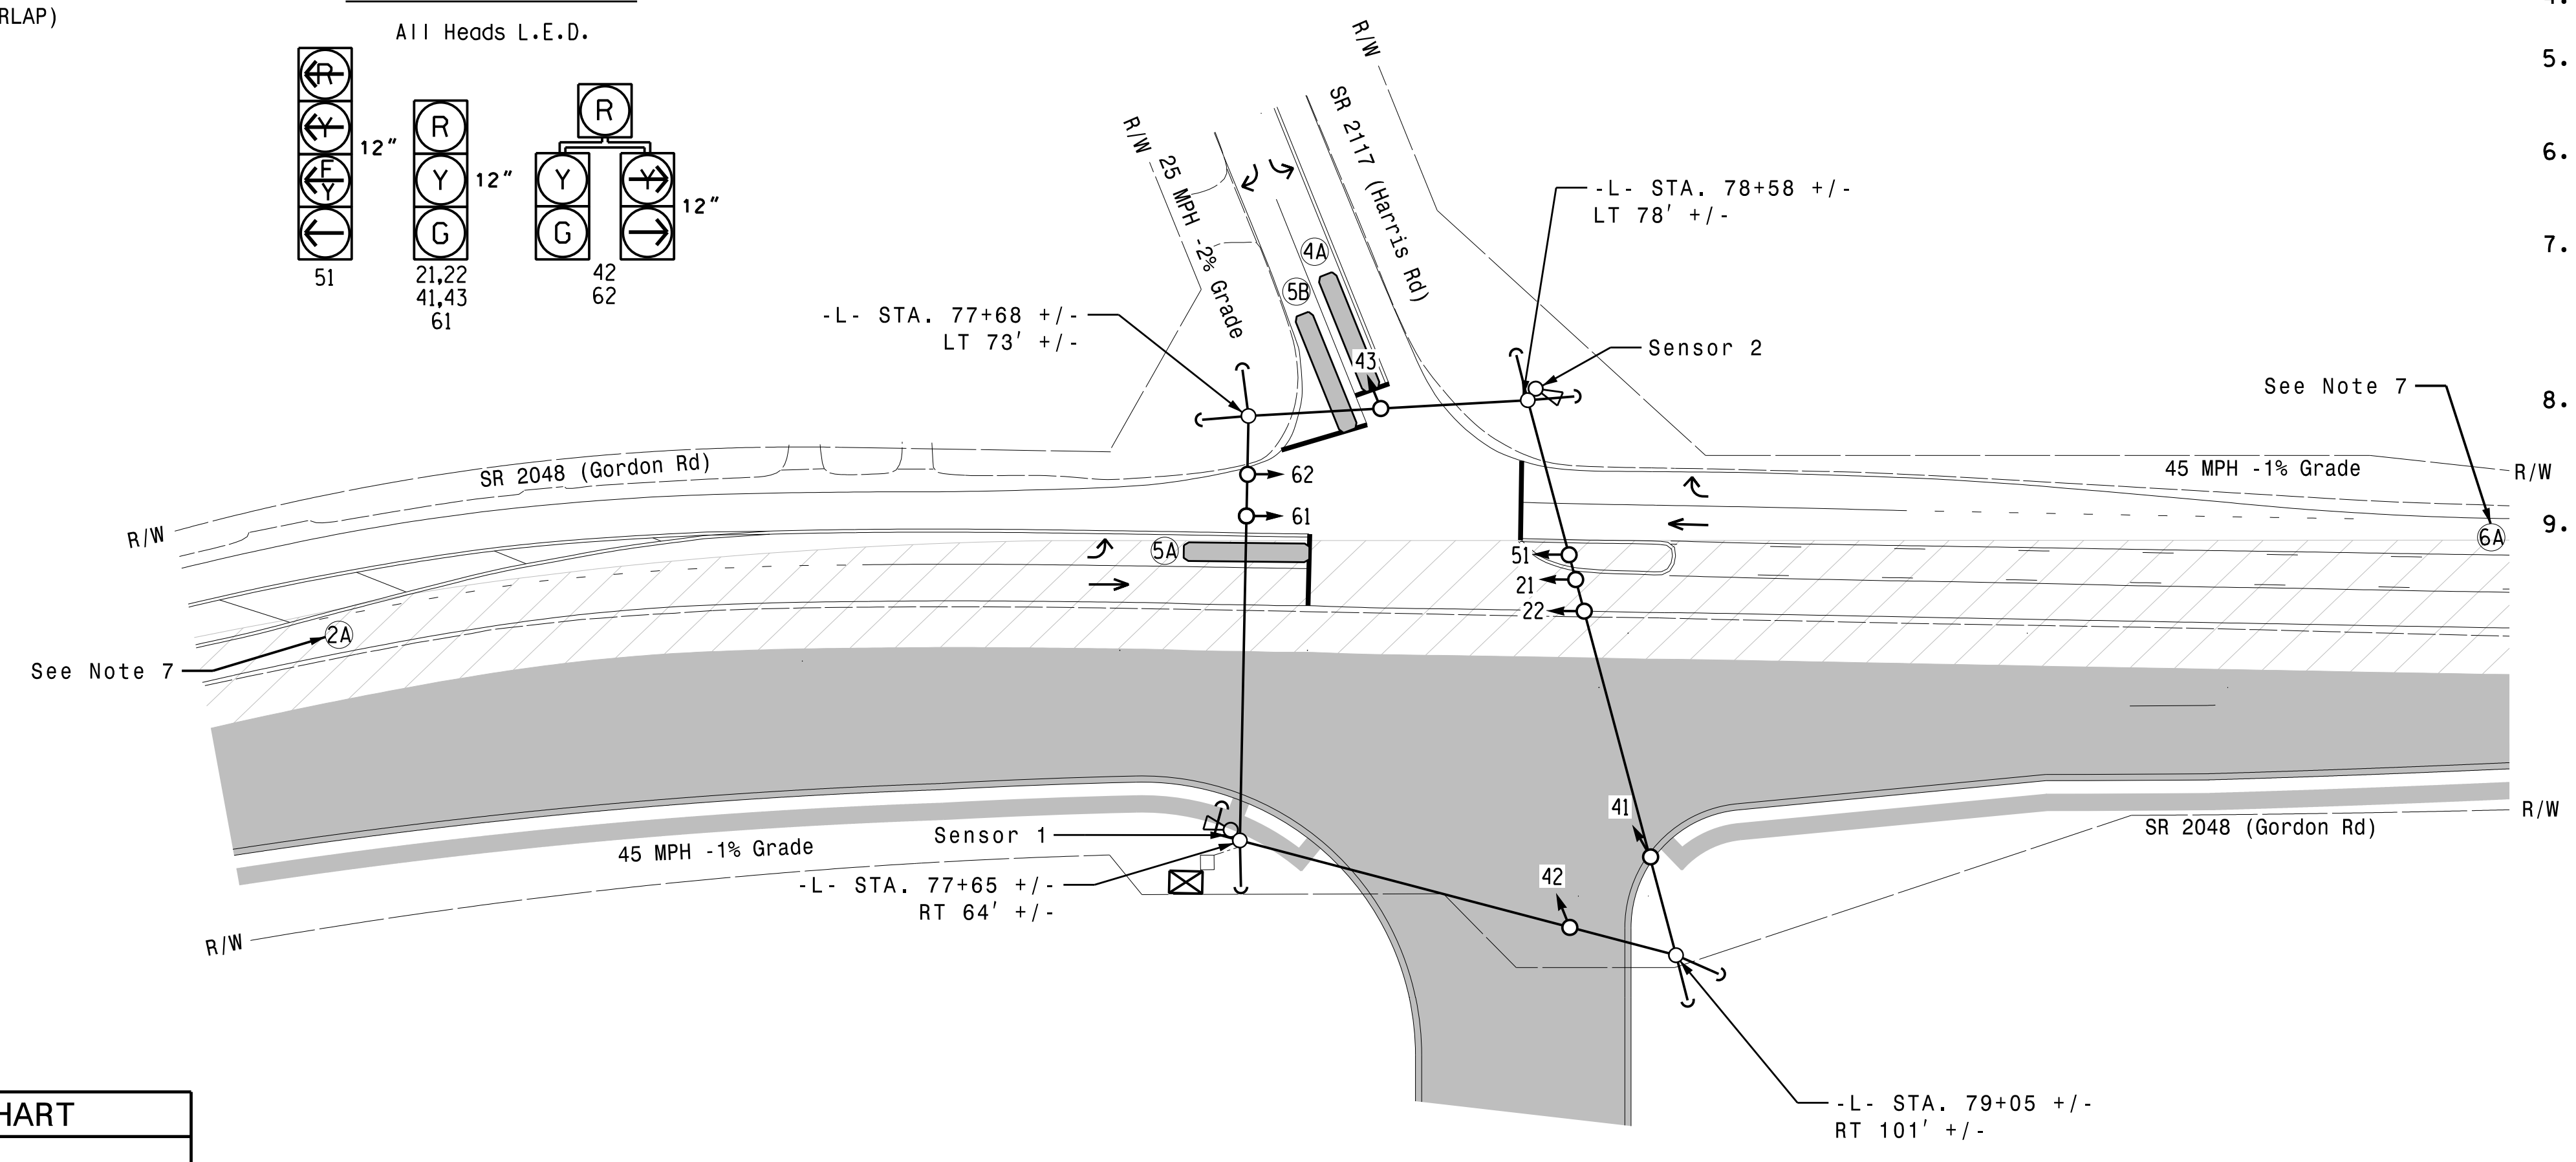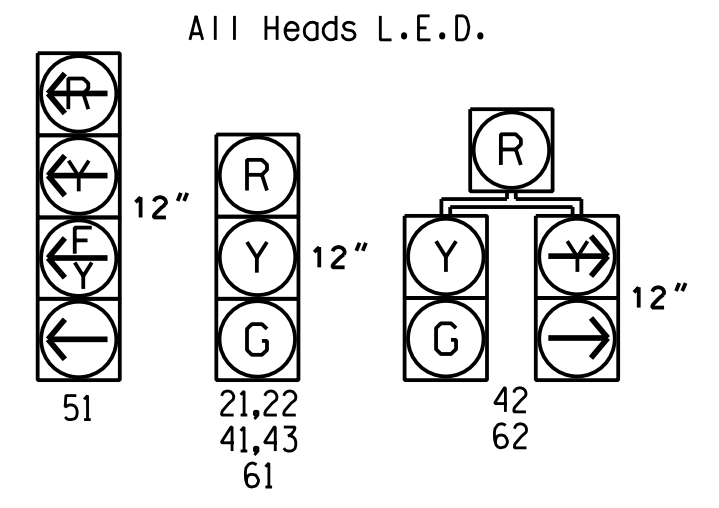

**OASIS 2070 TIMING CHART**

FEATURE	PHASE			
	2	4	5	6
Min Green 1 *	12	5	5	12
Extension 1 *	2.0	2.0	2.0	2.0
Max Green 1 *	60	30	20	60
Yellow Clearance	4.6	3.0	3.0	4.6
Red Clearance	1.1	2.6	1.8	1.1
Red Revert	2.0	2.0	2.0	2.0
Walk 1 *	-	-	-	-
Don't Walk 1	-	-	-	-
Seconds Per Actuation *	-	-	-	-
Max Variable Initial *	-	-	-	-
Time Before Reduction *	-	-	-	-
Time To Reduce *	-	-	-	-
Minimum Gap	-	-	-	-
Recall Mode	MIN RECALL	-	-	MIN RECALL
Vehicle Call Memory	YELLOW	-	-	YELLOW
Dual Entry	-	-	-	-
Simultaneous Gap	ON	ON	ON	ON

**RADAR DETECTION SYSTEM**

FUNCTION	Sensor 1	Sensor 2
Channel	1	1
Phase	2	6
Direction of Travel	EB	WB
Detection Zone (ft)	100-600	100-600
Enable Speed	Y	Y
Speed Range (mph)	35-100	35-100
Enable Estimated Time of Arrival	Y	Y
Estimated Time of Arrival (sec)	2.5-6.5	2.5-6.5

**LEGEND**


	PROPOSED Traffic Signal Head		EXISTING Traffic Signal Head
	PROPOSED Modified Signal Head		EXISTING Modified Signal Head
	PROPOSED Pedestrian Signal Head		EXISTING Pedestrian Signal Head
	PROPOSED Signal Pole with Guy		EXISTING Signal Pole with Guy
	PROPOSED Signal Pole with Sidewalk Guy		EXISTING Signal Pole with Sidewalk Guy
	PROPOSED Microwave Detection Zone		EXISTING Microwave Detection Zone
	PROPOSED Out of Pavement Detector		EXISTING Out of Pavement Detector
	PROPOSED Controller & Cabinet		EXISTING Controller & Cabinet
	PROPOSED Junction Box		EXISTING Junction Box
	PROPOSED 2-in Underground Conduit		EXISTING 2-in Underground Conduit
	PROPOSED Right of Way		EXISTING Right of Way
	PROPOSED Permanent Utility Easement		EXISTING Permanent Utility Easement
	PROPOSED Construction Easement		EXISTING Construction Easement
	PROPOSED Directional Arrow		EXISTING Directional Arrow
	PROPOSED Construction Zone		EXISTING Construction Zone
	PROPOSED Wedge/Widen		EXISTING Wedge/Widen

Signal Upgrade-  
Temporary Design 1  
(Construction Phase 1)

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)		
	Division 3	New Hanover County	
	PLAN DATE: May 2022	REVIEWED BY: N.K. Vlanich	
	PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons	
	REVISIONS	INIT. DATE	
	DocuSigned by: Natasha R. Simmons 5/17/2024 SIGNATURE DATE SIG. INVENTORY NO. 03-0840T1		


**HNTB** HNTB NORTH CAROLINA, P.C.  
343 E. Six Forks Road, Suite 200  
Raleigh, North Carolina 27609  
NC License No: C-1554  
(919) 546-8997

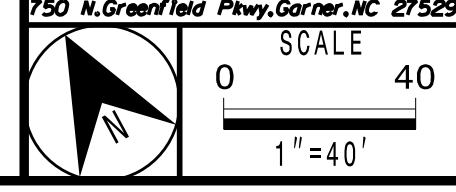



### 18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

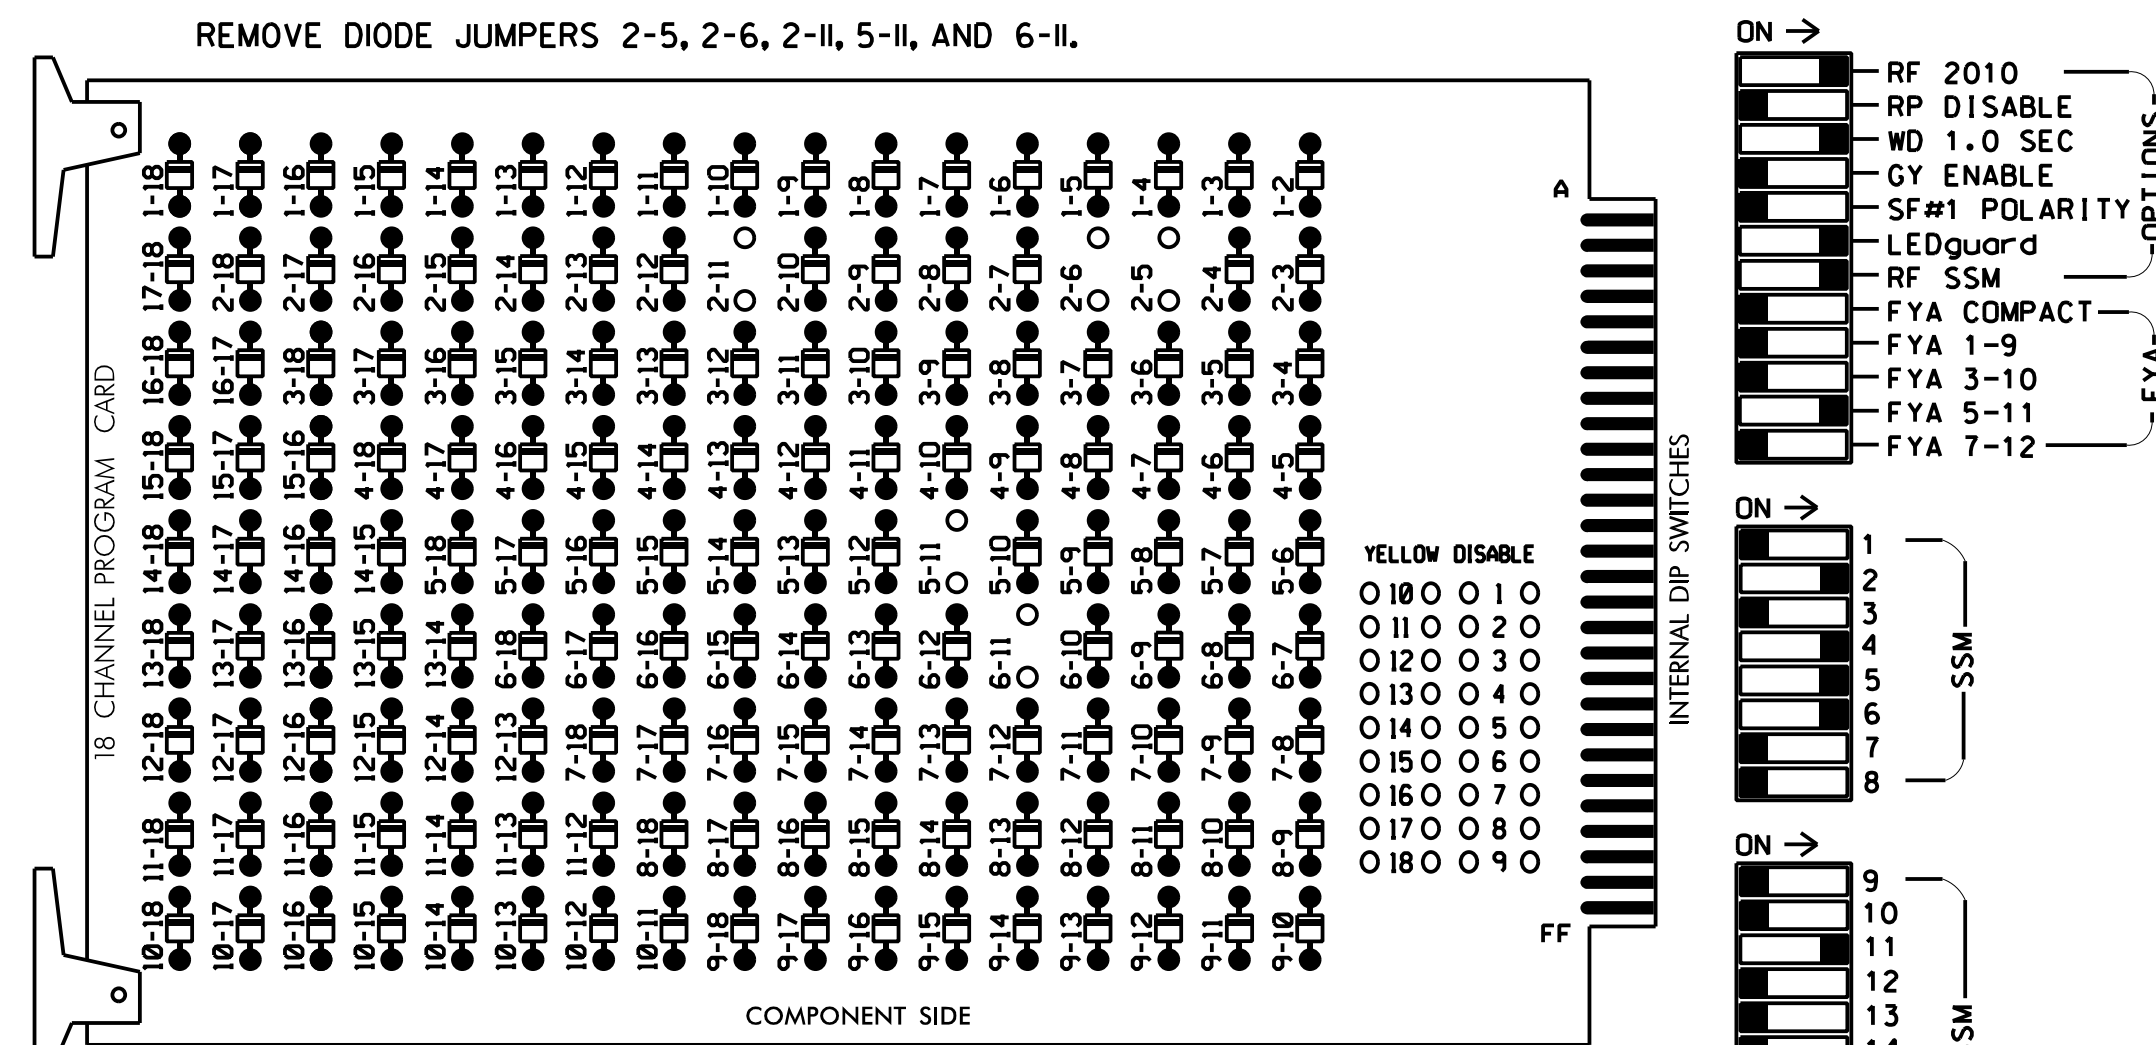

REMOVE JUMPERS AS SHOWN

**NOTES:**

1. Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
2. Ensure jumpers SEL2-SEL5 are present on the monitor board.
3. Ensure th Red Enable is active all times during normal operation.
4. Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

■ = DENOTES POSITION OF SWITCH

### NOTES

1. To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
2. Enable Simultaneous Gap-Out for all Phases.
3. Program phases 2 and 6 for Startup in Green.
4. Program phases 2 and 6 for Yellow Flash.
6. The cabinet and controller are part of the Wilmington Signal System.

### EQUIPMENT INFORMATION

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S2,S5,S7,S8,AUX S4  
 PHASES USED.....2,4,5,6  
 OVERLAP "A".....NOT USED  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....5+6  
 OVERLAP "D".....NOT USED

### SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6	
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18	
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE	
SIGNAL HEAD NO.	NU	21,22	NU	NU	41, 42, 43	62	NU	42	51	61,62	NU	NU	NU	NU	NU	51	NU	NU	
RED		128			101			*		134									
YELLOW		129			102					135									
GREEN		130			103					136									
RED ARROW																		A114	
YELLOW ARROW						102		132											A115
FLASHING YELLOW ARROW																			A116
GREEN ARROW						103		133	133										
Hand icon																			
Person icon																			


NU = Not Used

\* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail this sheet.

### INPUT FILE POSITION LAYOUT

(front view)

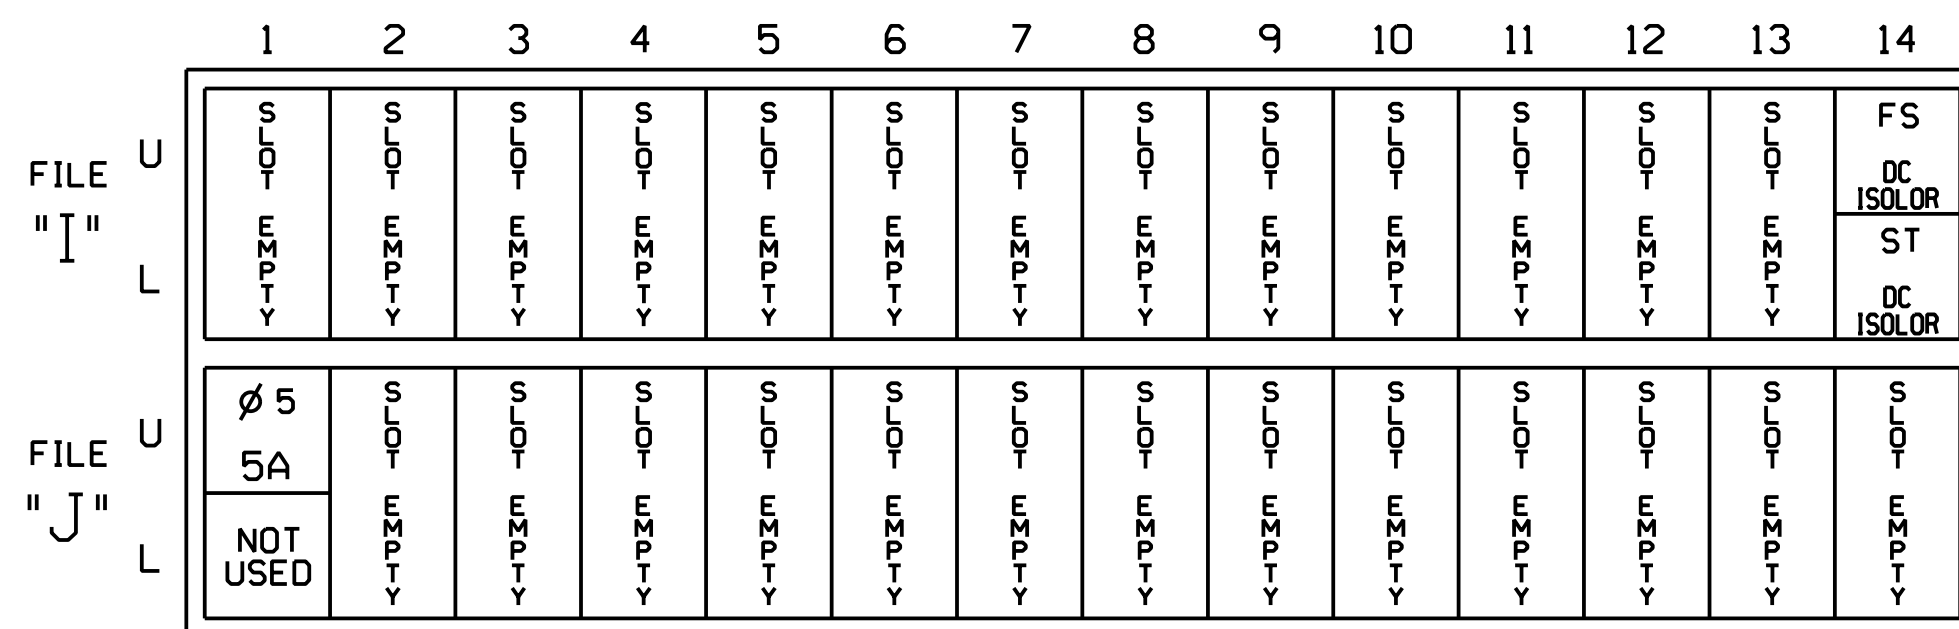

EX.: 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE  
 ST = STOP TIME

### INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
5A	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	14U	47	9 ★	22	2	Y	Y			
	-	J1U	55	17 ★	55	5	Y	Y			


\* See Input Page Assignment programming details on sheet 3.

### INPUT FILE POSITION LEGEND: J2L

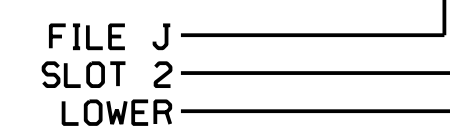

### FYA SIGNAL WIRING DETAIL

(wire signal head as shown)

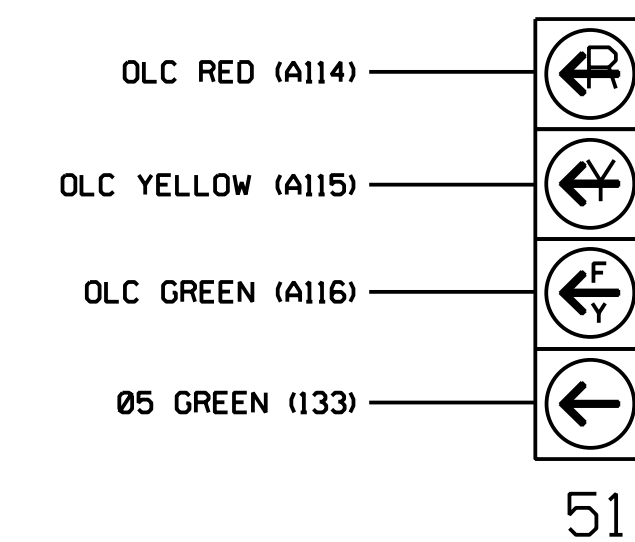


### NOTE

The sequence display for signal head 51 requires special logic programming. See sheet 2 for programming instructions.

### LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown below)

VALUE (ohms)	WTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

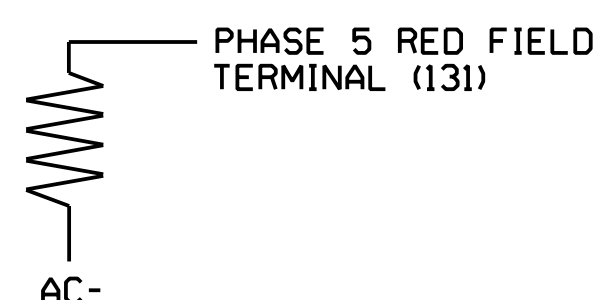

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T1  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

This plan supersedes the plan signed and sealed on 5/17/2024.



HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

Signal Upgrade-  
 Electrical Detail - Sheet 1 of 4  
 (Construction Phase 1)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED


ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared in the Office of: 750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)	SEAL ENGINEER NATASHA R. SIMMONS
	Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	REVISIONS INIT. DATE



### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, AND 3.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

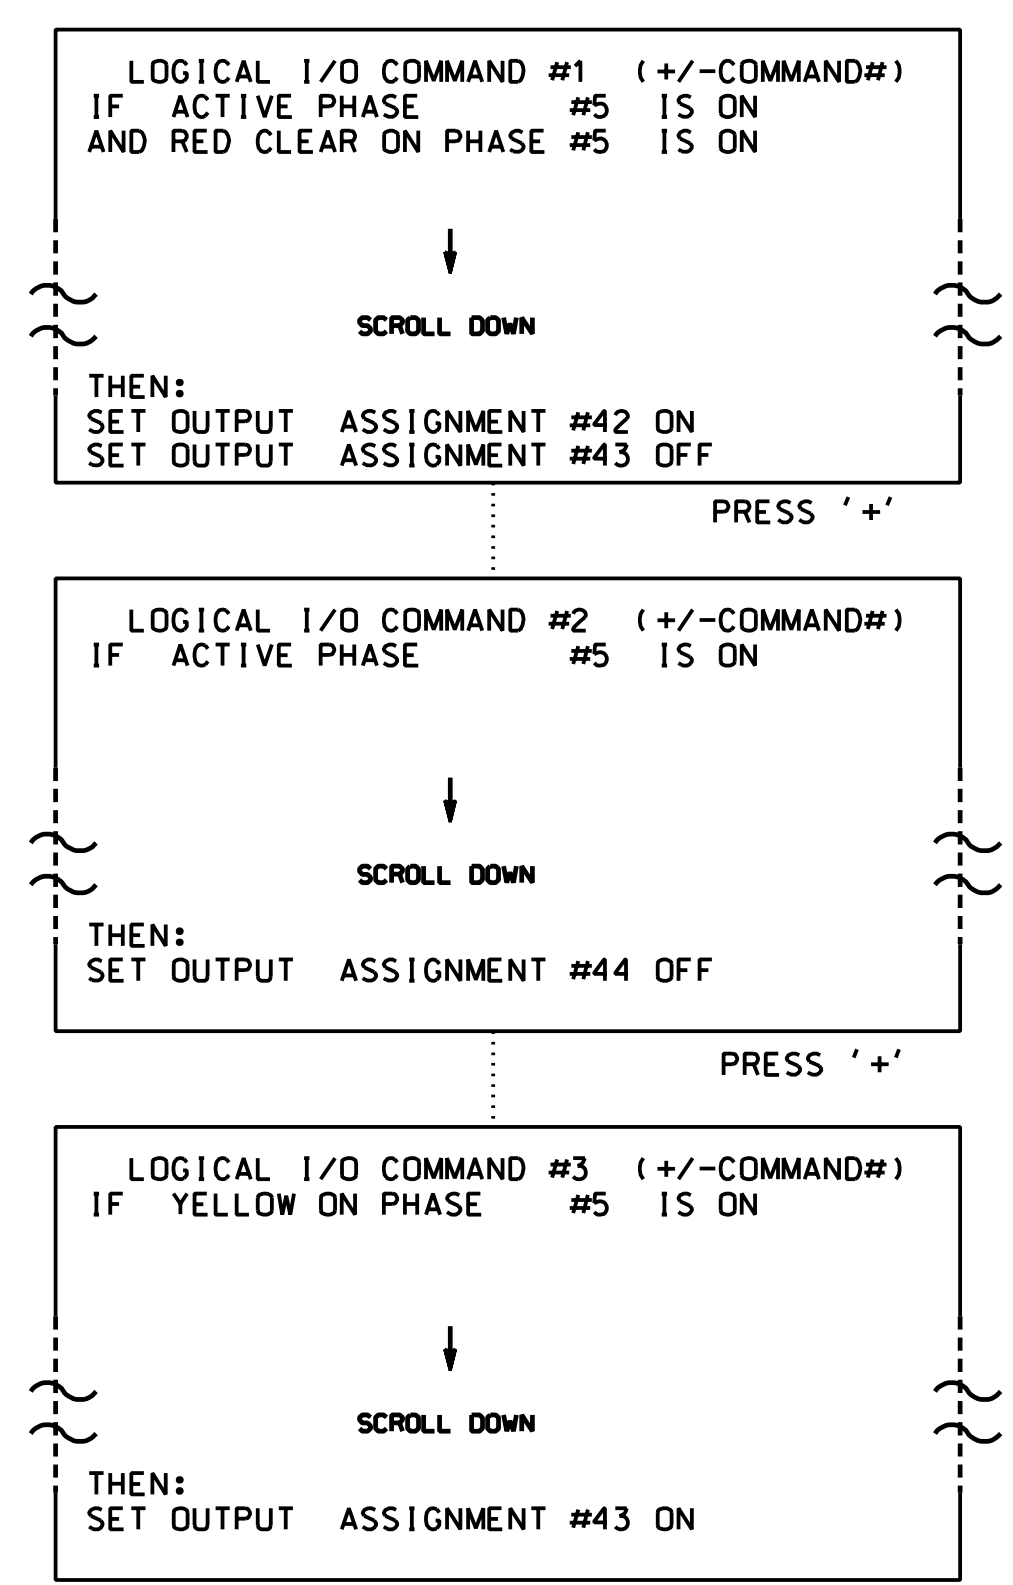

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

OUTPUT REFERENCE SCHEDULE	
USE TO INTERPRET LOGIC PROCESSOR	
OUTPUT 42 =	Overlap C Red
OUTPUT 43 =	Overlap C Yellow
OUTPUT 44 =	Overlap C Green

LOGICAL I/O PROCESSOR PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PRESS '+' TWICE

```

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS
PHASE:          12345678910111213141516
VEH OVL PARENTS:  XX
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR:  - RED - YELLOW - GREEN
FLASH COLORS:   - RED - YELLOW X GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

← NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS), PRESS 'NEXT' TO ADVANCE TO PAGE 2.

PRESS '+' TWICE

NOTICE PAGE 2 →

```


PAGE 2: VEHICLE OVERLAP 'C' SETTINGS
PHASE:          12345678910111213141516
VEH OVL PARENTS:  X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR:   - RED - YELLOW - GREEN
FLASH COLORS:    - RED - YELLOW - GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```



OVERLAP PROGRAMMING COMPLETE


THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T1  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade-  
Electrical Detail - Sheet 2 of 4  
(Construction Phase 1)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

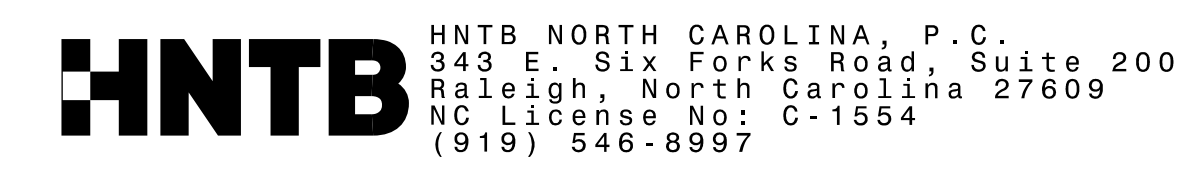

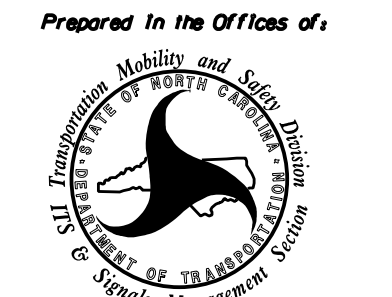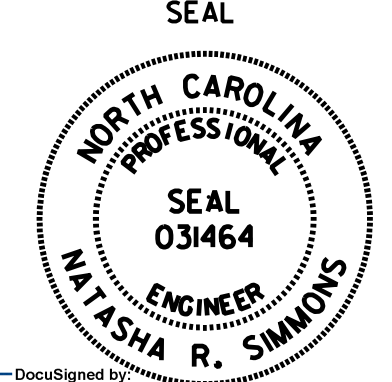ELECTRICAL AND PROGRAMMING DETAILS FOR:  Prepared in the Office of:  750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)	SEAL  NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 031464 NATASHA R. SIMMONS
	Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vianich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	

DocuSigned by:  5/17/2024  
SIG. INVENTORY NO. 03-0840T1



INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

PAGE: 2 C1 PIN:47 VEHICLE DETECTOR INPUT ASSIGNMENT #.....9 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....22 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED  
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 5A - PHASE 2)

PAGE: 2 C1 PIN:47 NOT ENABLED INPUT ASSIGNMENT #.....9 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64)..... PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 17

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR INPUT ASSIGNMENT #.....17 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....5 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '55' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 5A - PHASE 5)

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR INPUT ASSIGNMENT #.....17 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....55 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE: LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '5' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : X SWITCH/DUPLICATE: LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T1 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade- Electrical Detail - Sheet 3 of 4 (Construction Phase 1)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with columns for PLAN DATE, PREPARED BY, REVISIONS, INITI, DATE, and SIGNATURE. Includes HNTB logo and project details for SR 2048 and SR 2117.



## ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

**OVERLAPS PAGE 2:** Modifies overlap parent phases for head 51 to run protected turns only.




**INPUTS PAGE 2:** Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 0 seconds.

THIS ELECTRICAL DETAIL IS FOR  
 THE SIGNAL DESIGN: 03-0840T1  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

Signal Upgrade-  
 Electrical Detail - Sheet 4 of 4  
 (Construction Phase 1)


**DOCUMENT NOT CONSIDERED FINAL  
 UNLESS ALL SIGNATURES COMPLETED**

**HNTB** HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

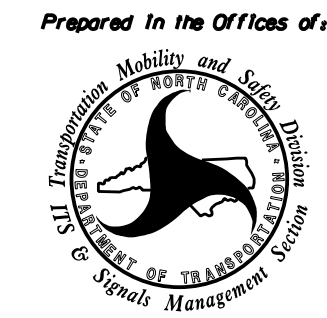
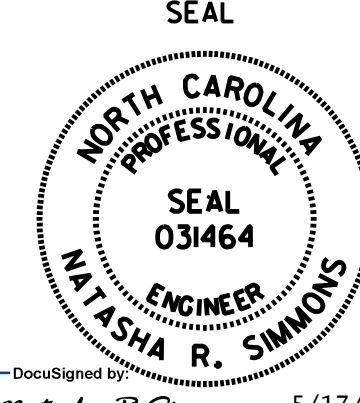
<p>ELECTRICAL AND PROGRAMMING                  DETAILS FOR:</p> <p style="text-align: center;"><i>Prepared in the Offices of:</i></p>  <p style="text-align: center; font-size: small;">750 N. Greenfield Pkwy, Garner, NC 27529</p>	<p>SR 2048 (Gordon Rd)                      at                      SR 2117 (Harris Rd)</p> <p>Division 3    New Hanover County    Wilmington</p> <p>PLAN DATE: August 2023    REVIEWED BY: N.K. Vlanich</p> <p>PREPARED BY: E.E. Tiller    REVIEWED BY: N.R. Simmons</p>	<p>SEAL</p>  <p>SEAL 031464 ENGINEER NATASHA R. SIMMONS</p>						
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">REVISIONS</th> <th style="text-align: left;">INIT.</th> <th style="text-align: left;">DATE</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>		REVISIONS	INIT.	DATE				<p>DocuSigned by:   5/17/2024                  SIGNATURE    DATE</p> <p style="font-size: x-small;">SIG. INVENTORY NO. 03-0840T1</p>
REVISIONS	INIT.	DATE						



**DEFAULT PHASING DIAGRAM**

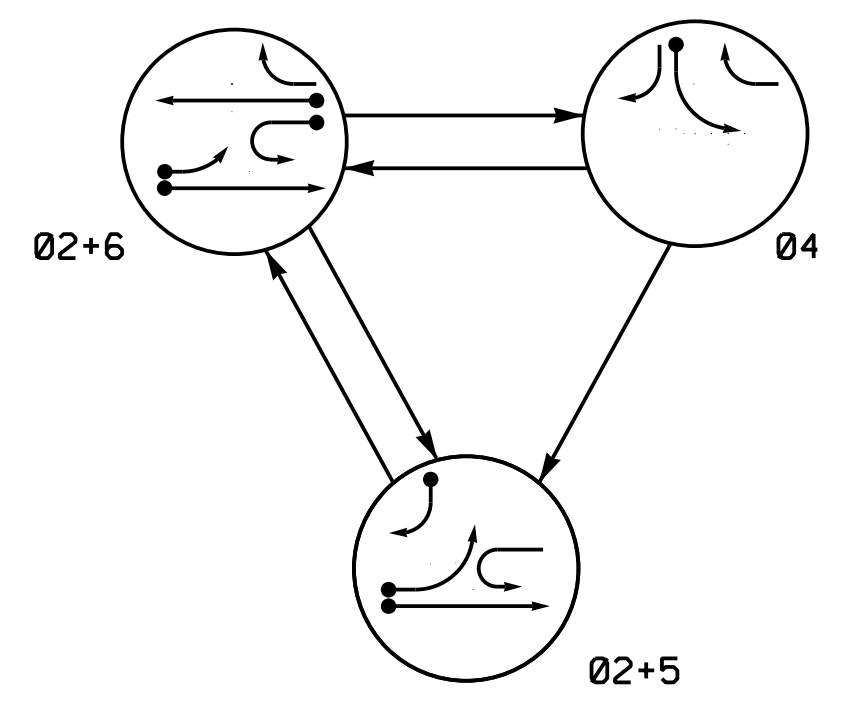

**ALTERNATE PHASING DIAGRAM**

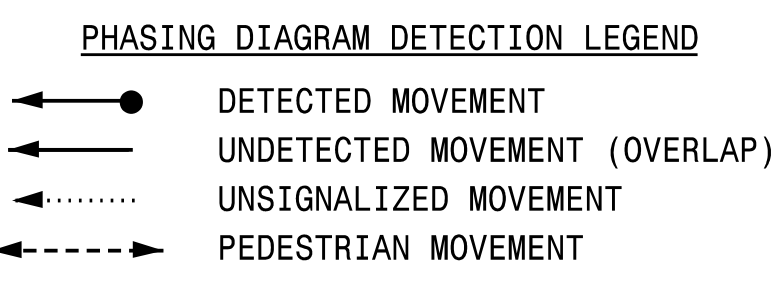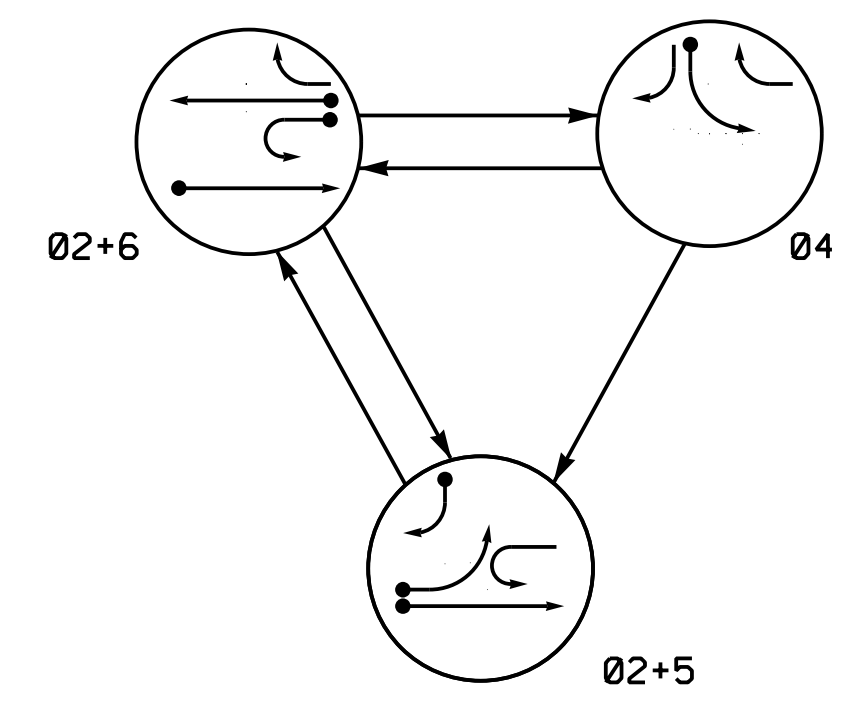

**DEFAULT PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE			
	02+5	02+6	04	F L C B I
21,22	G	G	R	Y
41,43	R	R	G	R
42	R	R	G	R
51	---	---	---	---
61	(Y)	(Y)	(R)	(Y)
62	R	G	R	Y
63	R	G	R	Y

**ALTERNATE PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE			
	02+5	02+6	04	F L C B I
21,22	G	G	R	Y
41,43	R	R	G	R
42	R	R	G	R
51	---	---	---	---
61	(Y)	(Y)	(R)	(Y)
62	R	G	R	Y
63	R	G	R	Y

**OASIS 2070 LOOP & DETECTOR INSTALLATION CHART**



ZONE	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	DETECTOR PROGRAMMING				SYSTEM LOOP	NEW CARD
					PHASE	CALLING	EXTENSION	FULL TIME DELAY		
4A	6X40	0	*	*	4	Y	Y	-	-	-
5A	6X40	0	*	*	5	Y	Y	-	-	15**
5B	6X40	0	*	*	5	Y	Y	-	-	15
6B	6X40	0	*	*	6	Y	Y	-	-	-

\* Multizone Microwave Detection  
 \*\* Disable Delay During Alternate Phasing Operation.  
 # Disable phase call for loop(s) during alternate phasing.

**3 Phase Fully Actuated Wilmington Signal System**

**NOTES**

- Refer to "Roadway Standard Drawings NCDOT" dated January 2024 and "Standard Specifications for Roads and Structures" dated January 2024.
- Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
- Phase 5 may be lagged.
- Renumber existing signal head 61 to 62 and 62 to 63.
- Reposition existing signal heads numbered 21, 22, 62, and 63.
- Set all detector units to presence mode.
- The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
- This intersection uses multi-zone microwave detection. Install the detectors according to the manufacturer's instructions to achieve the desired detection.
- Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
- Signal system data: Controller Asset #0840.

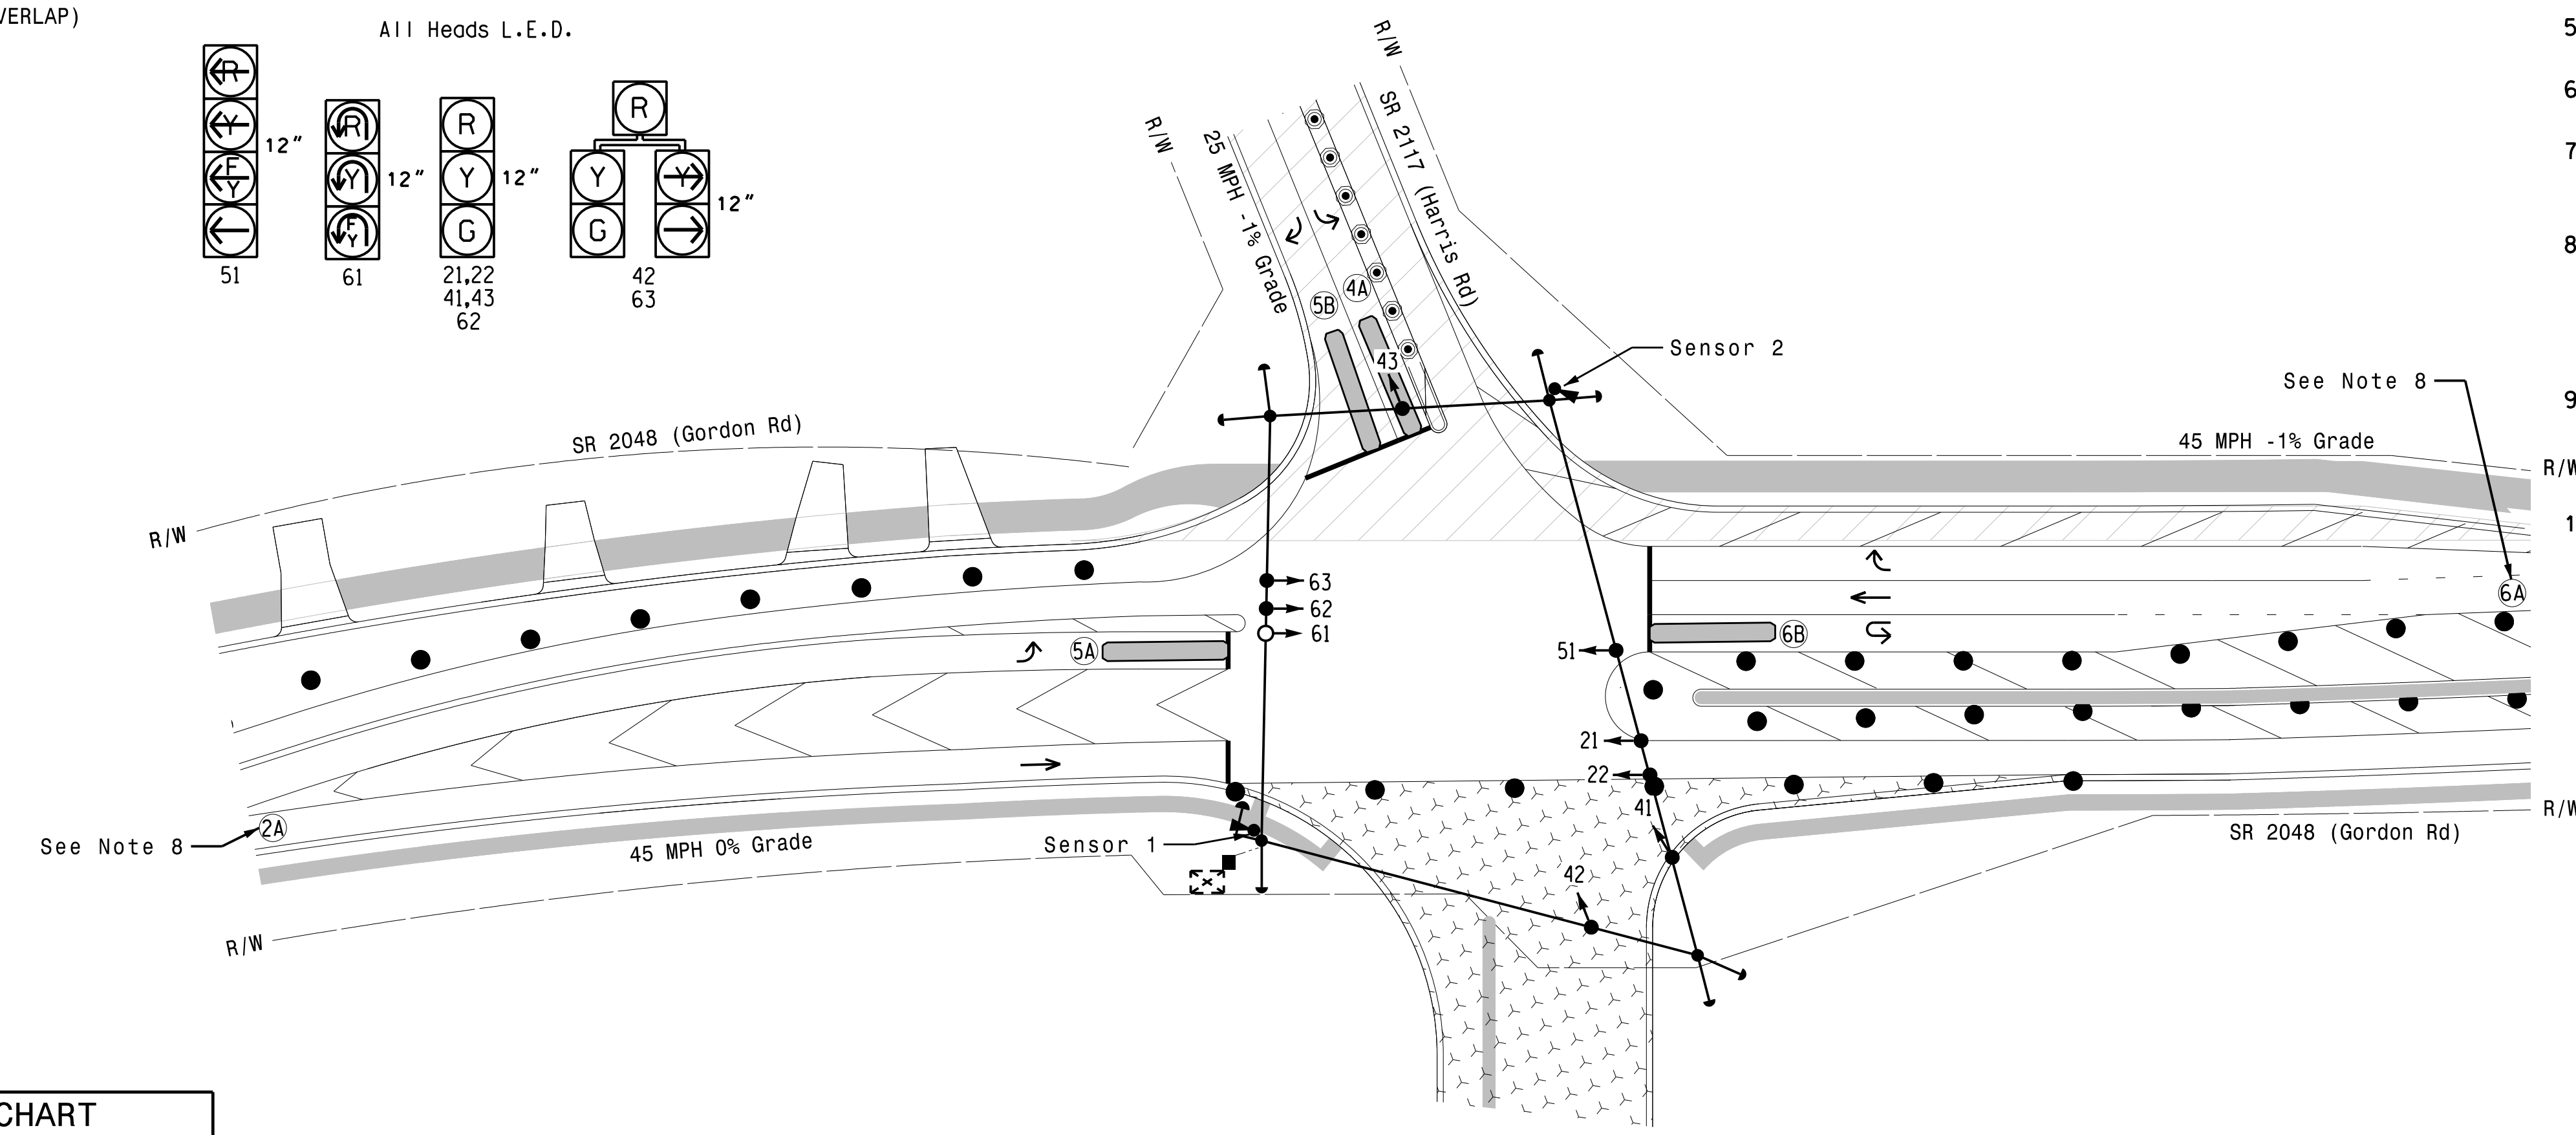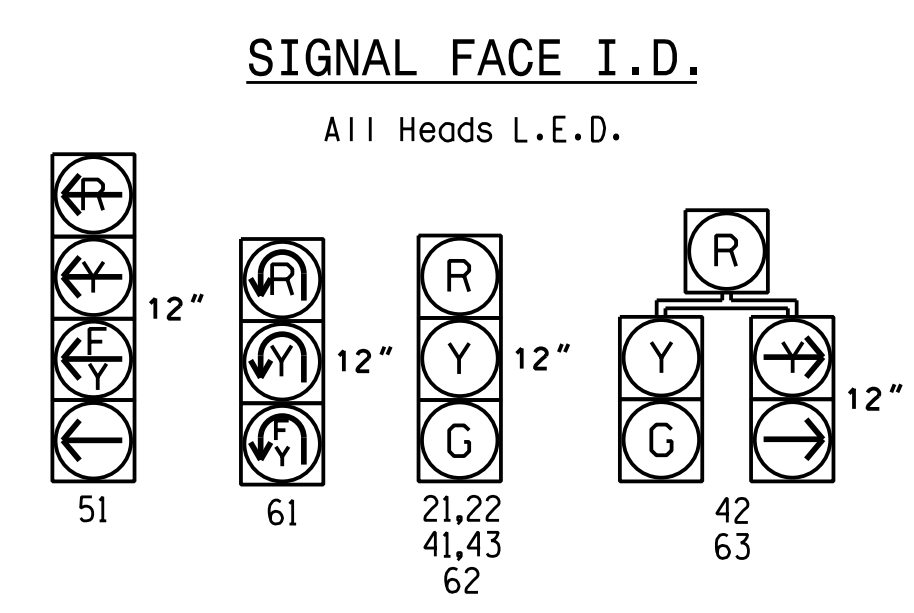


**OASIS 2070 TIMING CHART**

FEATURE	PHASE			
	2	4	5	6
Min Green 1 *	12	5	5	12
Extension 1 *	2.0	2.0	2.0	2.0
Max Green 1 *	90	30	20	90
Yellow Clearance	4.6	3.0	3.0	4.6
Red Clearance	2.2	3.8	3.3	2.2
Red Revert	2.0	2.0	2.0	2.0
Walk 1 *	-	-	-	-
Don't Walk 1	-	-	-	-
Seconds Per Actuation *	-	-	-	-
Max Variable Initial *	-	-	-	-
Time Before Reduction *	-	-	-	-
Time To Reduce *	-	-	-	-
Minimum Gap	-	-	-	-
Recall Mode	MIN RECALL	-	-	MIN RECALL
Vehicle Call Memory	YELLOW	-	-	YELLOW
Dual Entry	-	-	-	-
Simultaneous Gap	ON	ON	ON	ON

**RADAR DETECTION SYSTEM**

FUNCTION	Sensor 1	Sensor 2
Channel	1	1
Phase	2	6
Direction of Travel	EB	WB
Detection Zone (ft)	100-600	100-600
Enable Speed	Y	Y
Speed Range (mph)	35-100	35-100
Enable Estimated Time of Arrival	Y	Y
Estimated Time of Arrival (sec)	2.5-6.5	2.5-6.5

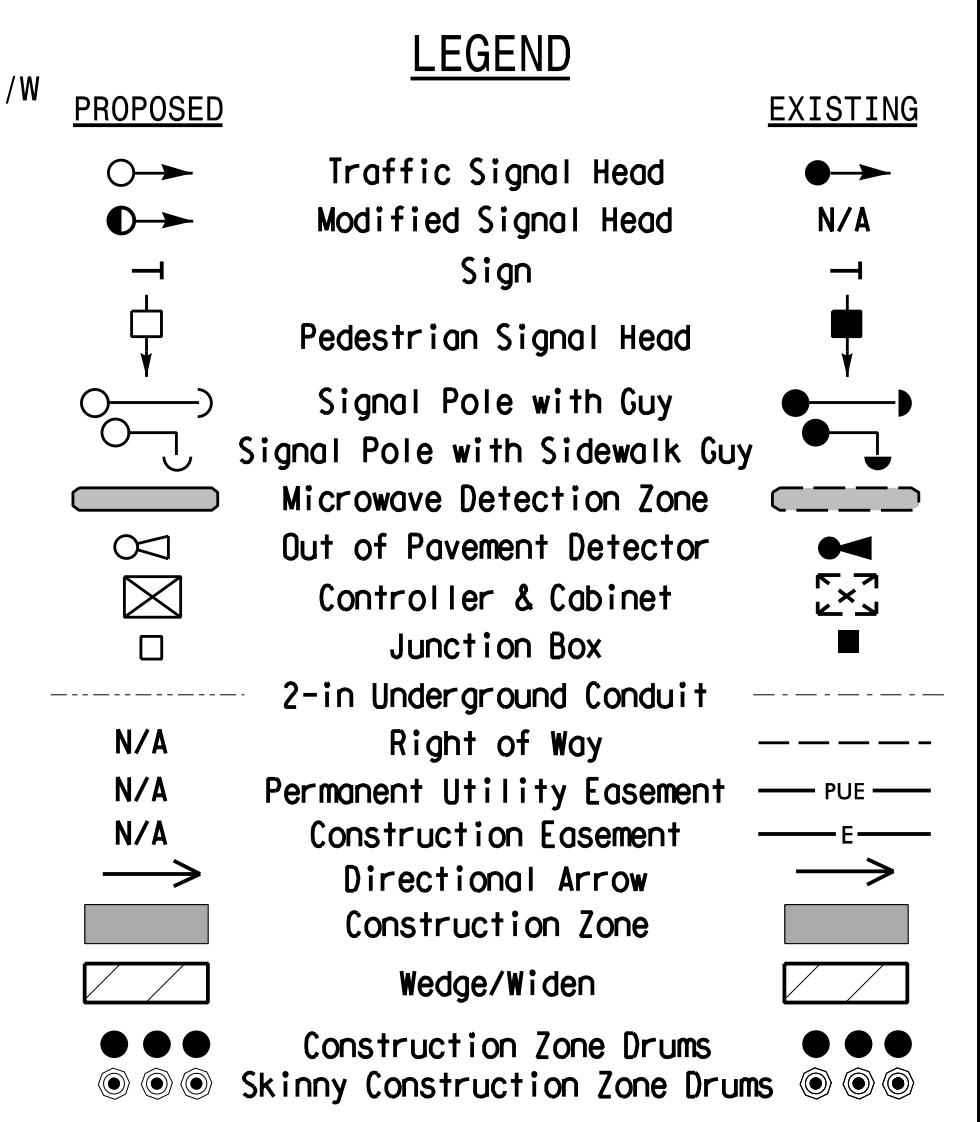


Signal Upgrade-  
 Temporary Design 2  
 (Construction Phase 2A)

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)		
	Division 3 New Hanover County Wilmington PLAN DATE: May 2022 PREPARED BY: E.E. Tiller	REVIEWED BY: N.K. Vlanich REVIEWED BY: N.R. Simmons	


**HNTB** HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

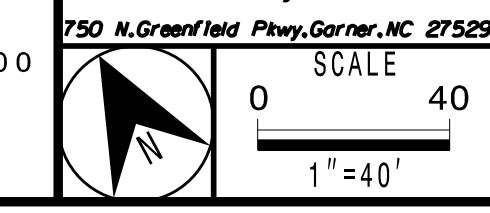




### 18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

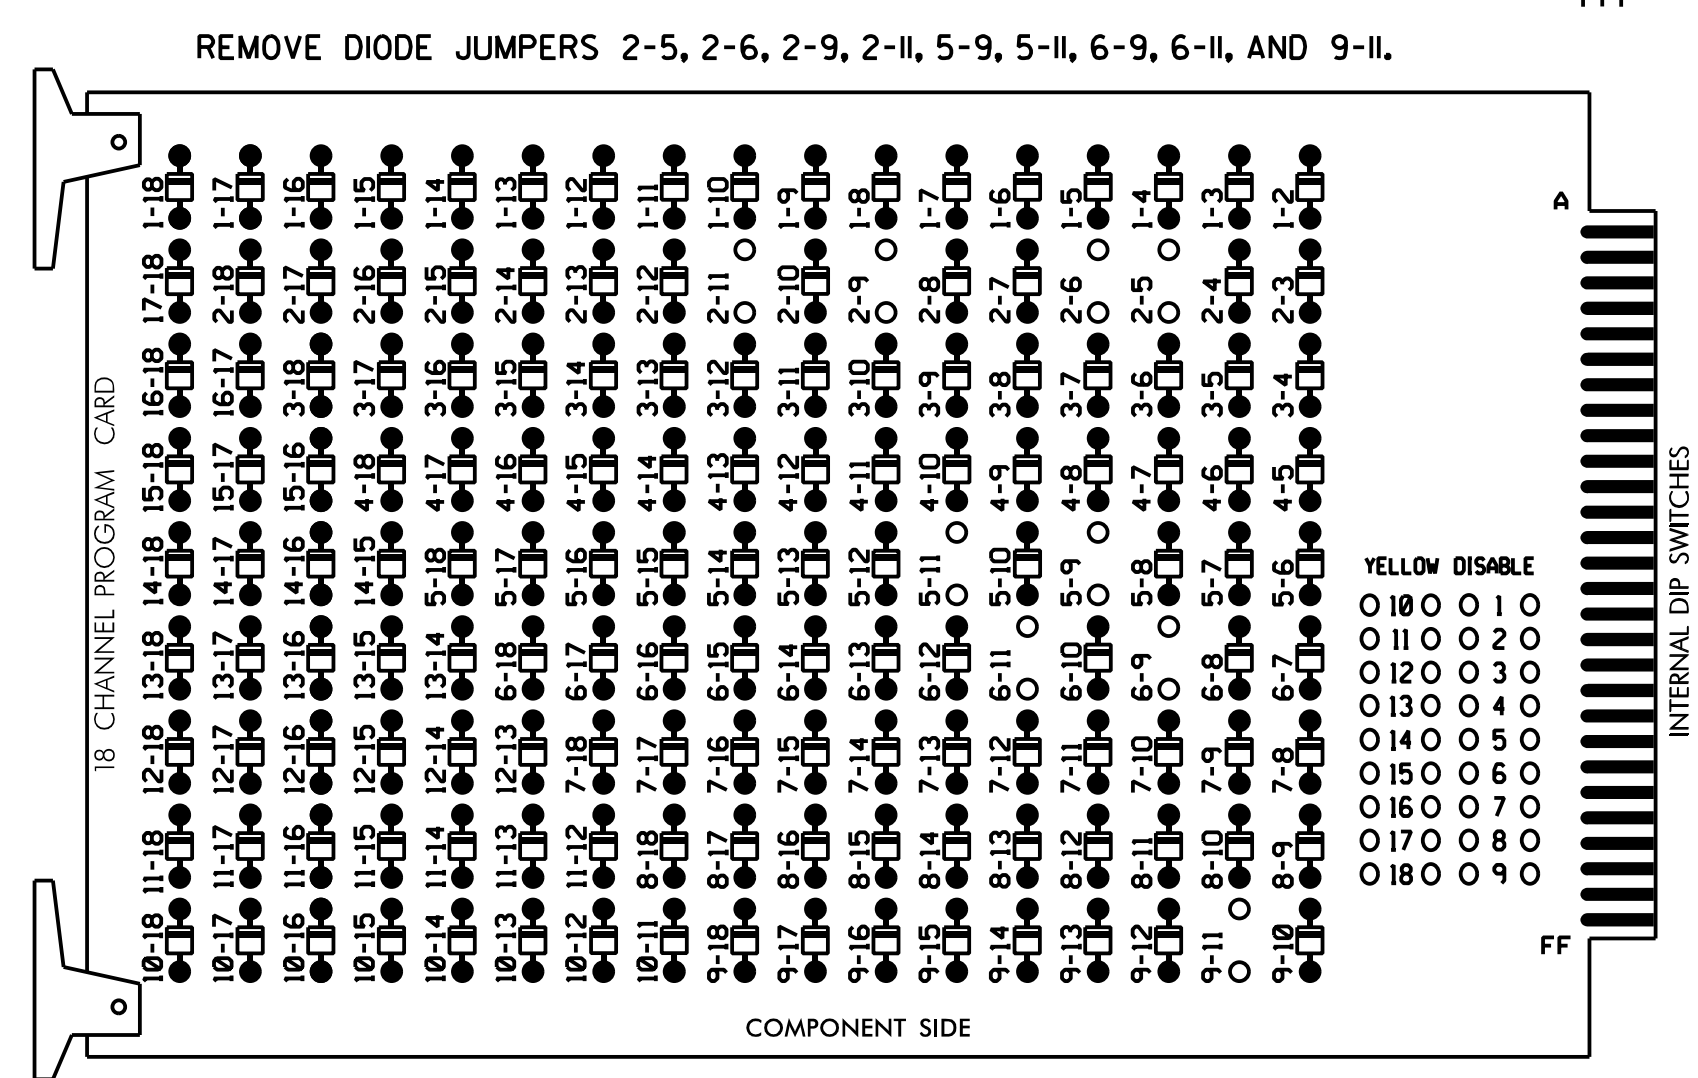

#### NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 are present on the monitor board.
- Ensure th Red Enable is active all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

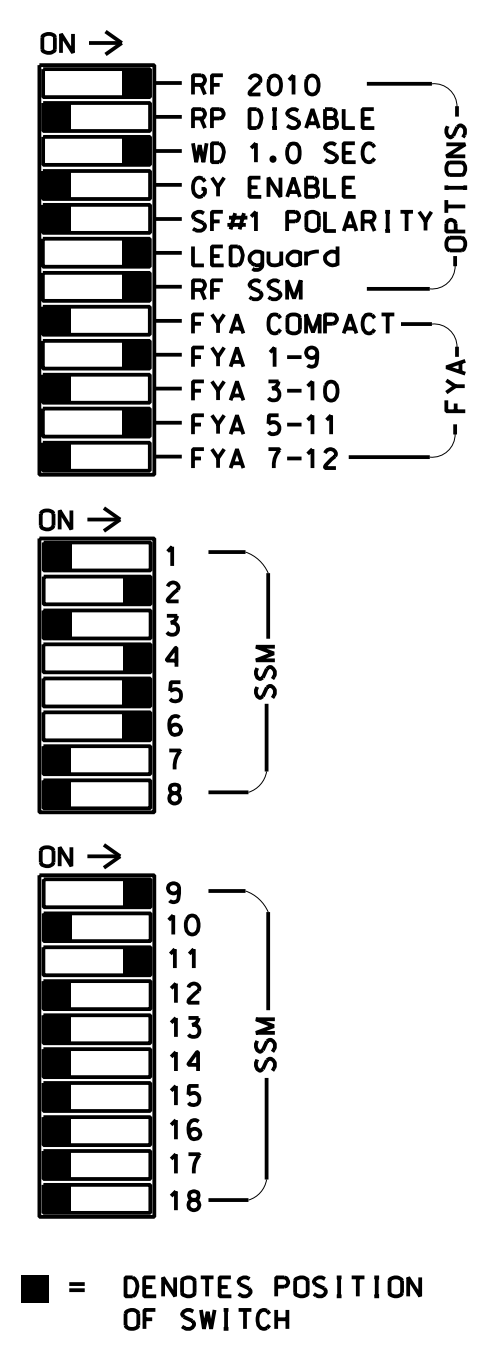

### NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Startup in Green.
- Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlap.
- The cabinet and controller are part of the Wilmington Signal System.

### EQUIPMENT INFORMATION

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S2,S5,S7,S8,AUX S1,AUX S4  
 PHASES USED.....2,4,5,6  
 OVERLAP "A".....2  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....5+6  
 OVERLAP "D".....NOT USED


### SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42,43	63	NU	42	51	62,63	NU	NU	61	NU	NU	51	NU	NU
RED		128			101			*		134								
YELLOW		129			102					135								
GREEN		130			103					136								
RED ARROW													A121			A114		
YELLOW ARROW						102	132						A122			A115		
FLASHING YELLOW ARROW													A123			A116		
GREEN ARROW						103	133	133										
Hand icon																		
Person icon																		

NU = Not Used  
 \* Denotes install load resistor. See load resistor installation detail this sheet.  
 ★ See pictorial of head wiring in detail this sheet.

### INPUT FILE POSITION LAYOUT

(front view)

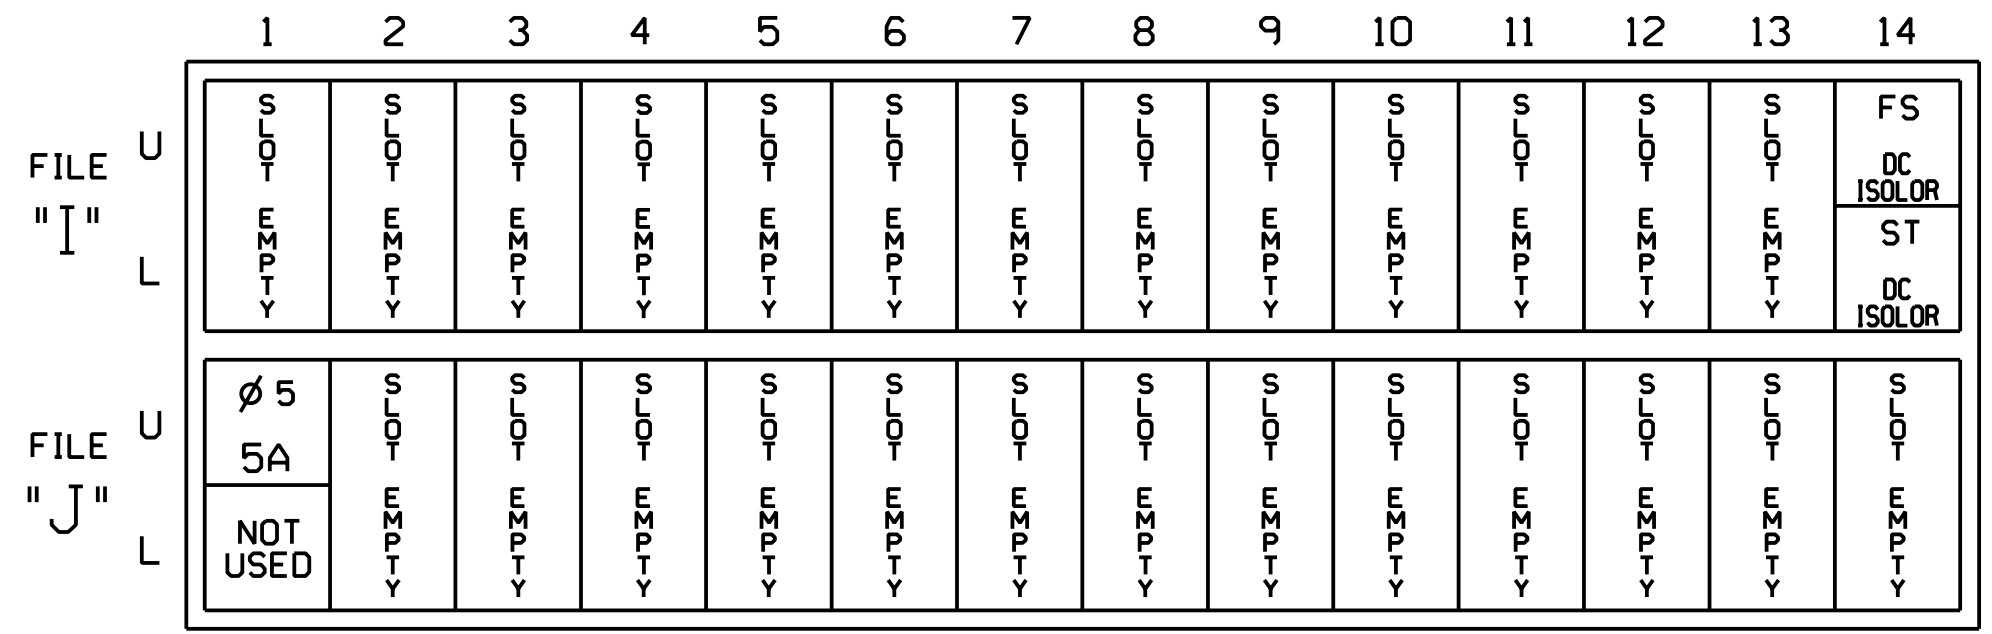


### INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
5A	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	14U	47	9 ★	22	2	Y	Y			
	-	J1U	55	17 ★	55	5	Y	Y			


\* See Input Page Assignment programming details on sheet 3.

#### INPUT FILE POSITION LEGEND: J2L

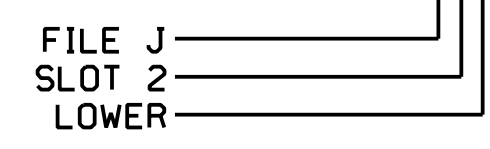

### FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

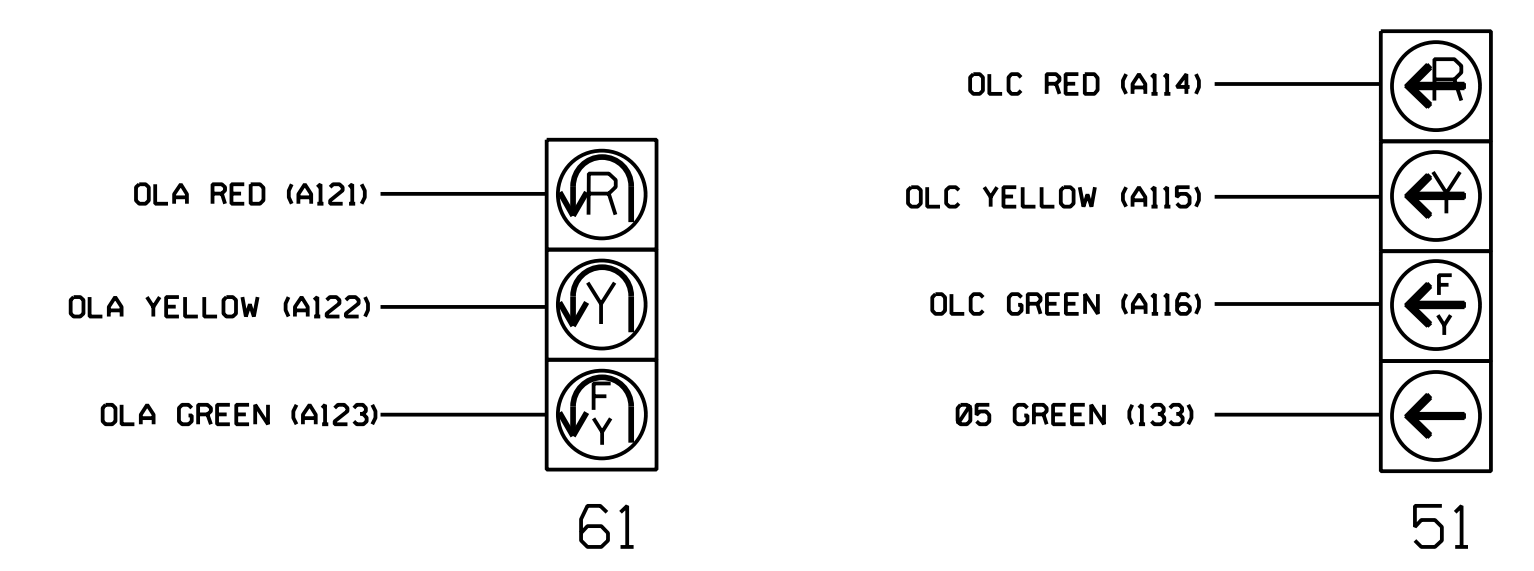

#### NOTE

The sequence display for signal head 51 requires special logic programming. See sheet 2 for programming instructions.


### SPECIAL DETECTOR NOTE

Install a multizone microwave detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish detection schemes shown on the Signal Design Plans.

### LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown below)

ACCEPTABLE VALUES	
VALUE (ohms)	WTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

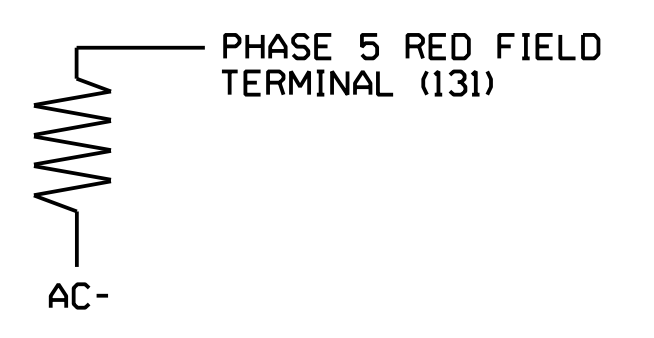

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T2  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

This plan supersedes the plan signed and sealed on 5/17/2024.

**HNTB**  
 HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

Signal Upgrade-  
 Electrical Detail - Sheet 1 of 4  
 (Construction Phase 2A)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared in the Office of:  750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)	SEAL NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 031464 NAYASHA R. SIMMONS
	Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vianich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	REVISIONS INIT. DATE

### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, AND 3.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

```

LOGICAL I/O COMMAND #1 (+/-COMMAND#)
IF ACTIVE PHASE #5 IS ON
AND RED CLEAR ON PHASE #5 IS ON

      ↓
      SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #42 ON
SET OUTPUT ASSIGNMENT #43 OFF
    
```

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

```

LOGICAL I/O COMMAND #2 (+/-COMMAND#)
IF ACTIVE PHASE #5 IS ON

      ↓
      SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #44 OFF
    
```

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

```

LOGICAL I/O COMMAND #3 (+/-COMMAND#)
IF YELLOW ON PHASE #5 IS ON

      ↓
      SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #43 ON
    
```

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGICAL I/O PROCESSOR PROGRAMMING COMPLETE

**OUTPUT REFERENCE SCHEDULE**  
USE TO INTERPRET LOGIC PROCESSOR

OUTPUT 42 = Overlap C Red  
OUTPUT 43 = Overlap C Yellow  
OUTPUT 44 = Overlap C Green

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

NOTICE PAGE 2

```

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

NOTICE GREEN FLASH

PRESS '+' TWICE

```

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: XX
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2

```

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

NOTICE GREEN FLASH

PRESS '+' TWICE

NOTICE PAGE 2

```


PAGE 2: VEHICLE OVERLAP 'C' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW - GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

OVERLAP PROGRAMMING COMPLETE


Signal Upgrade-  
Electrical Detail - Sheet 2 of 4  
(Construction Phase 2A)

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T2  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

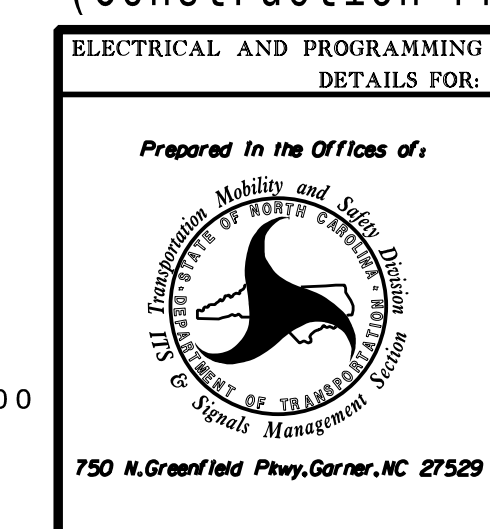

SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)	
Division 3	New Hanover County Wilmington
PLAN DATE: August 2023	REVIEWED BY: N.K. Vlanich
PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons
REVISIONS	INIT. DATE

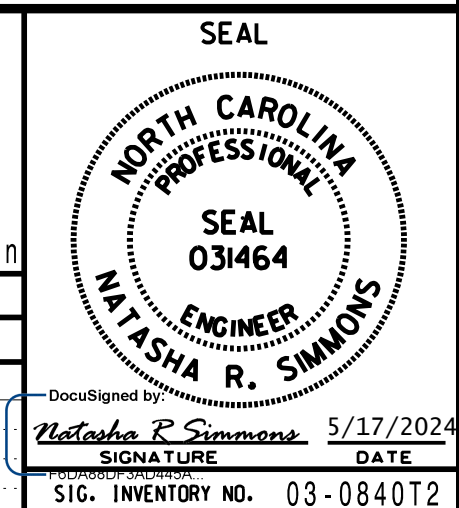

**HNTB**  
HNTB NORTH CAROLINA, P.C.  
343 E. Six Forks Road, Suite 200  
Raleigh, North Carolina 27609  
NC License No: C-1554  
(919) 546-8997

DocuSigned by:  
**Natasha R. Simmons** 5/17/2024  
SIGNATURE DATE  
SIG. INVENTORY NO. 03-0840T2



INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

PAGE: 2 C1 PIN:47 VEHICLE DETECTOR INPUT ASSIGNMENT #.....9 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....22 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED  
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 5A - PHASE 2)

PAGE: 2 C1 PIN:47 NOT ENABLED INPUT ASSIGNMENT #.....9 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64)..... PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 17

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR INPUT ASSIGNMENT #.....17 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....5 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '55' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 5A - PHASE 5)

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR INPUT ASSIGNMENT #.....17 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....55 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# ;12345678910111213141516 PHASES ASSIGNED ; SWITCH/DUPLICATE; LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '5' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# ;12345678910111213141516 PHASES ASSIGNED ; X SWITCH/DUPLICATE; LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T2 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade- Electrical Detail - Sheet 3 of 4 (Construction Phase 2A)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with columns for PLAN DATE, PREPARED BY, REVISIONS, INITI, DATE, and SIGNATURE. Includes HNTB logo and project details for SR 2048 and SR 2117.

## ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

### ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAPS PAGE 2: Modifies overlap parent phases for head 51 to run protected turns only.

INPUTS PAGE 2: Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 0 seconds.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T2  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:


Signal Upgrade-  
 Electrical Detail - Sheet 4 of 4  
 (Construction Phase 2A)

**DOCUMENT NOT CONSIDERED FINAL  
 UNLESS ALL SIGNATURES COMPLETED**

**HNTB** HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

ELECTRICAL AND PROGRAMMING  
 DETAILS FOR:


*Prepared in the Offices of:*

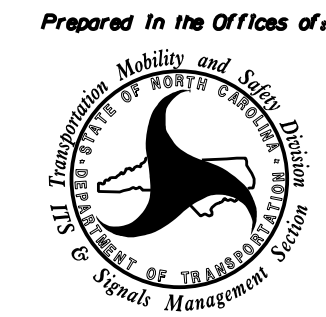

750 N. Greenfield Pkwy, Garner, NC 27529

SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)	
Division 3 New Hanover County Wilmington	
PLAN DATE: August 2023	REVIEWED BY: N.K. Vlanich
PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons
REVISIONS	INIT. DATE

SEAL




NATASHA R. SIMMONS



DocuSigned by:  
 Natasha R. Simmons 5/17/2024  
 SIGNATURE DATE  
 SIG. INVENTORY NO. 03-0840T2



**DEFAULT PHASING DIAGRAM**

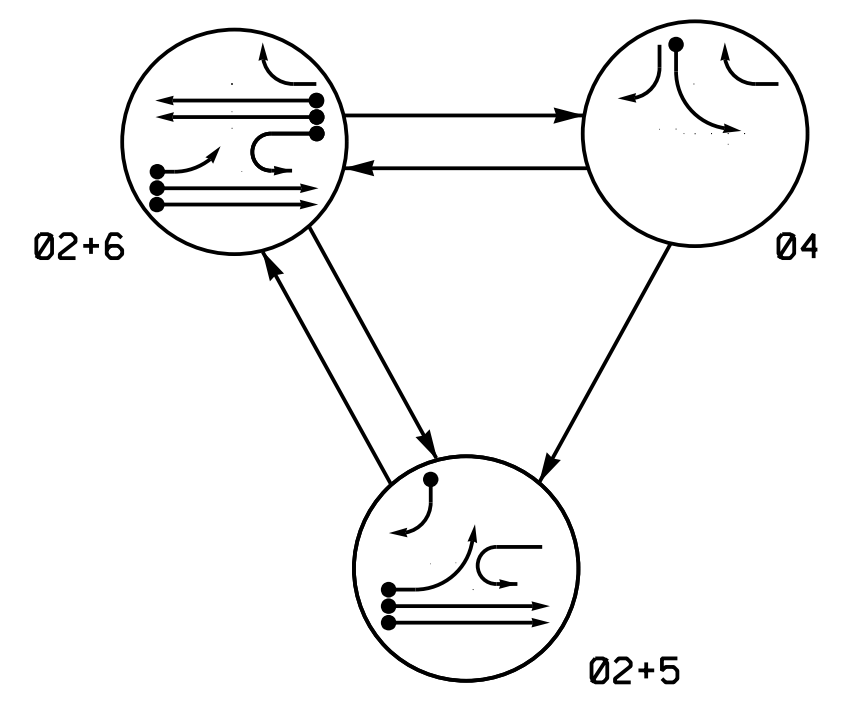

**ALTERNATE PHASING DIAGRAM**

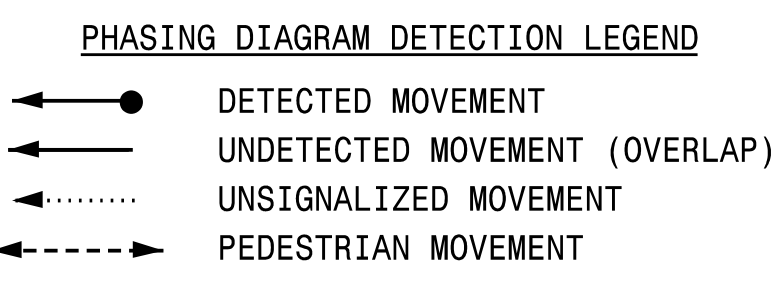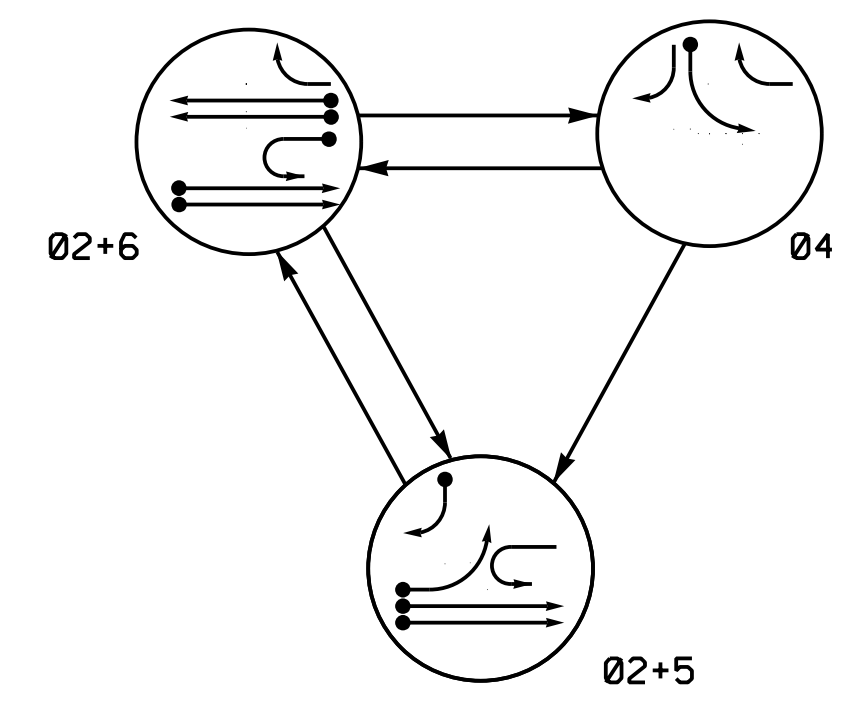

**DEFAULT PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE			
	02+5	02+6	04	F L C B
21,22	G	G	R	Y
41,43	R	R	G	R
42	R	R	G	R
51	—	—	—	—
61	Y	Y	R	Y
62	R	G	R	Y
63	R	G	R	Y

**ALTERNATE PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE			
	02+5	02+6	04	F L C B
21,22	G	G	R	Y
41,43	R	R	G	R
42	R	R	G	R
51	—	—	—	—
61	Y	Y	R	Y
62	R	G	R	Y
63	R	G	R	Y

**OASIS 2070 LOOP & DETECTOR INSTALLATION CHART**

ZONE	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	DETECTOR PROGRAMMING				SYSTEM LOOP	NEW CARD
					PHASE	CALLING	EXTENSION	FULL TIME DELAY		
4A	6X40	0	*	*	4	Y	Y	-	-	-
5A	6X40	0	*	*	5	Y	Y	-	-	15**
5B	6X40	0	*	*	2#	Y	Y	-	-	-
6C	6X40	0	*	*	6	Y	Y	-	-	-



\* Multizone Microwave Detection  
 \*\* Disable delay during alternate phasing operation.  
 # Disable phase call for loop(s) during alternate phasing.

**3 Phase Fully Actuated Wilmington Signal System**

**NOTES**

- Refer to "Roadway Standard Drawings NCDOT" dated January 2024 and "Standard Specifications for Roads and Structures" dated January 2024.
- Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
- Phase 5 may be lagged.
- Renumber existing loop 2A to 2B and 6B to 6C.
- Reposition existing signal heads numbered 21, 22, 42, 61, 62, and 63.
- Set all detector units to presence mode.
- The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
- This intersection uses multi-zone microwave detection. Install the detectors according to the manufacturer's instructions to achieve the desired detection.
- Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
- Signal system data Controller Asset #0369.

**SIGNAL FACE I.D.**

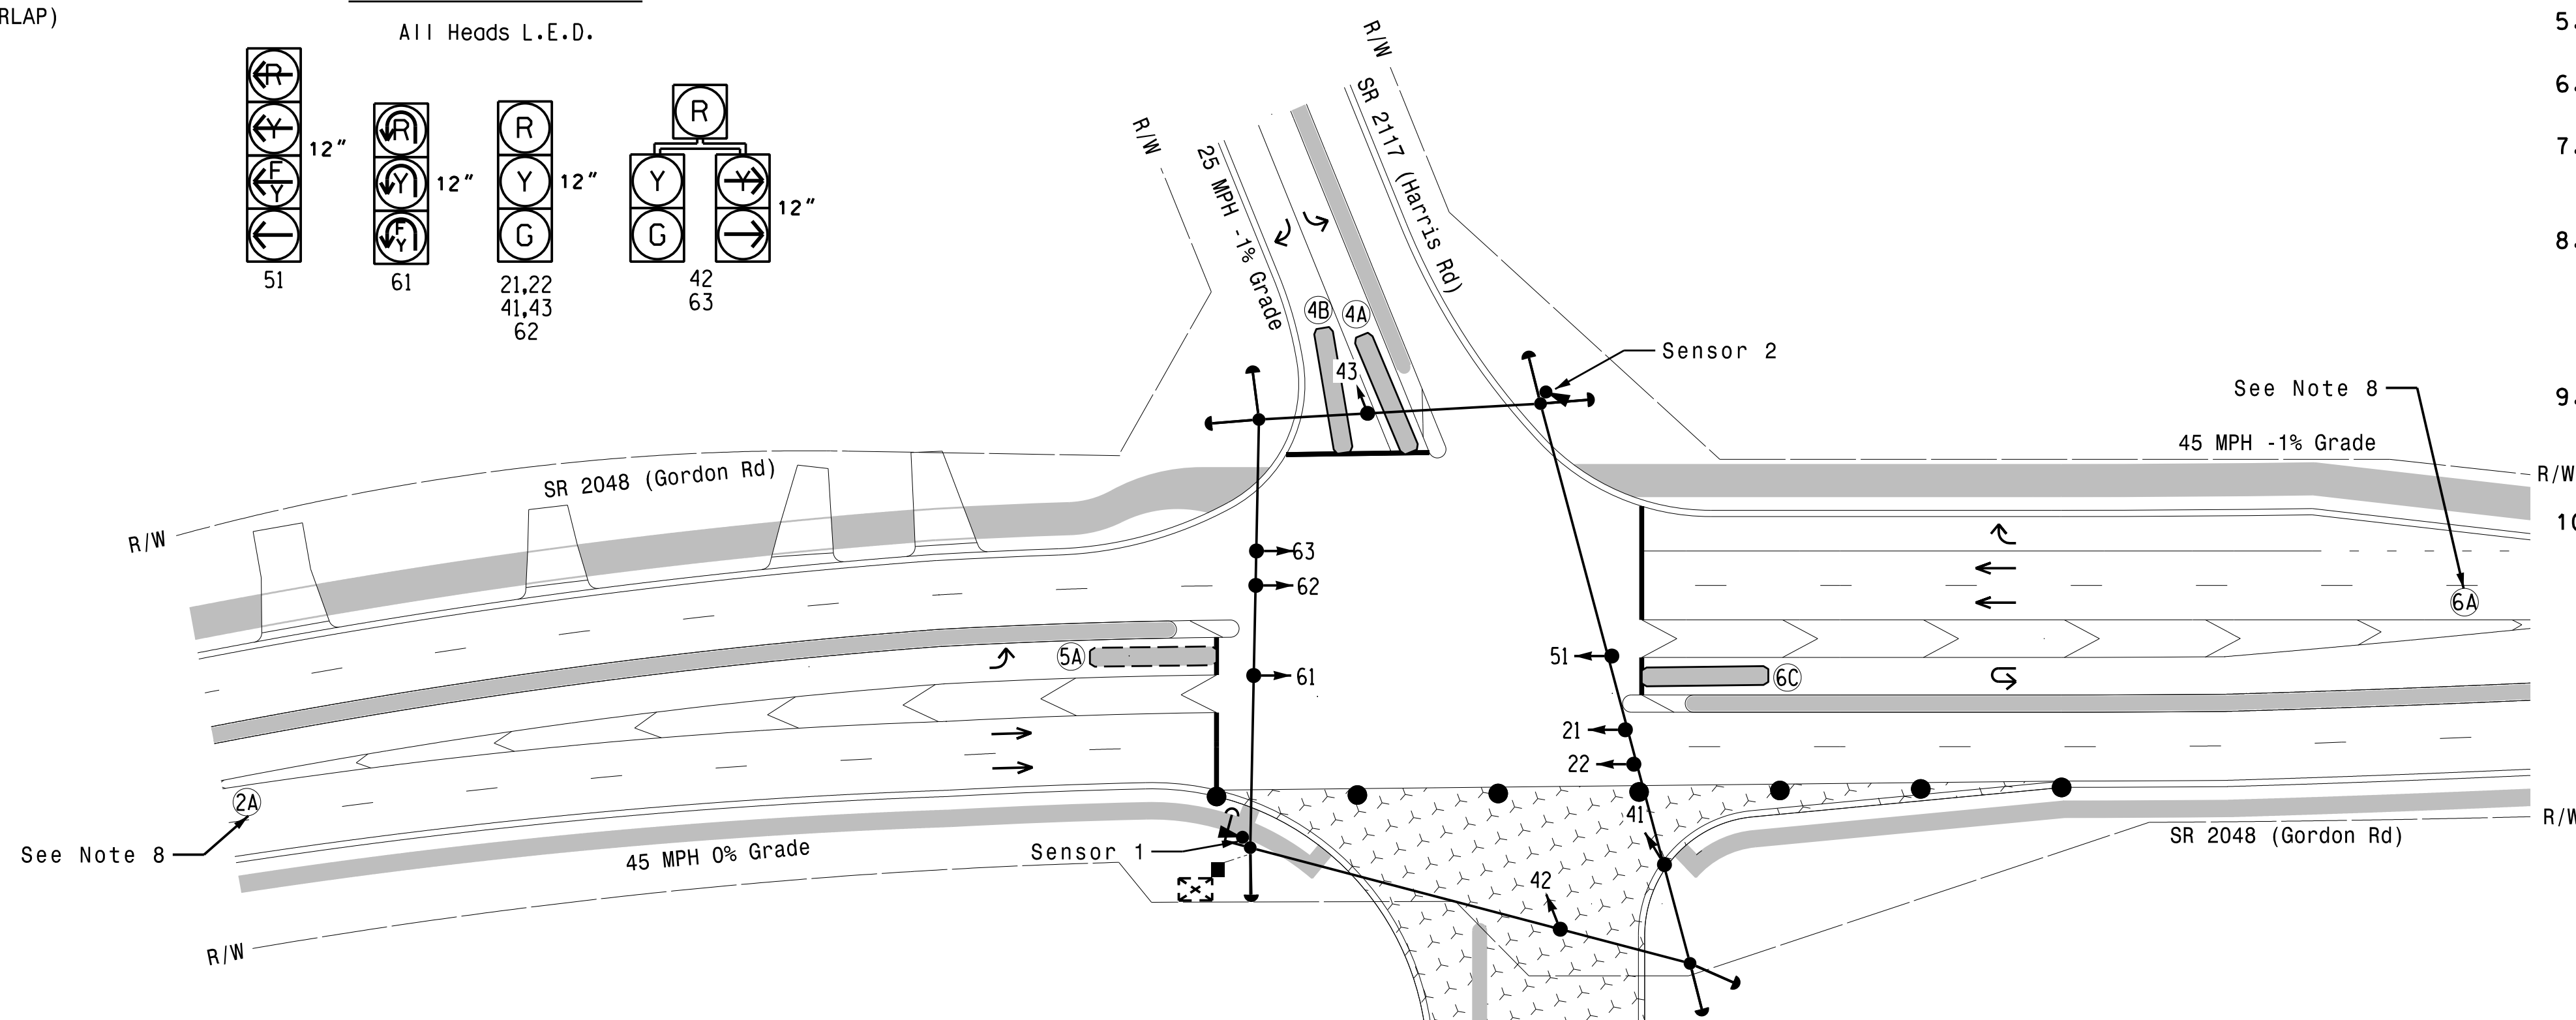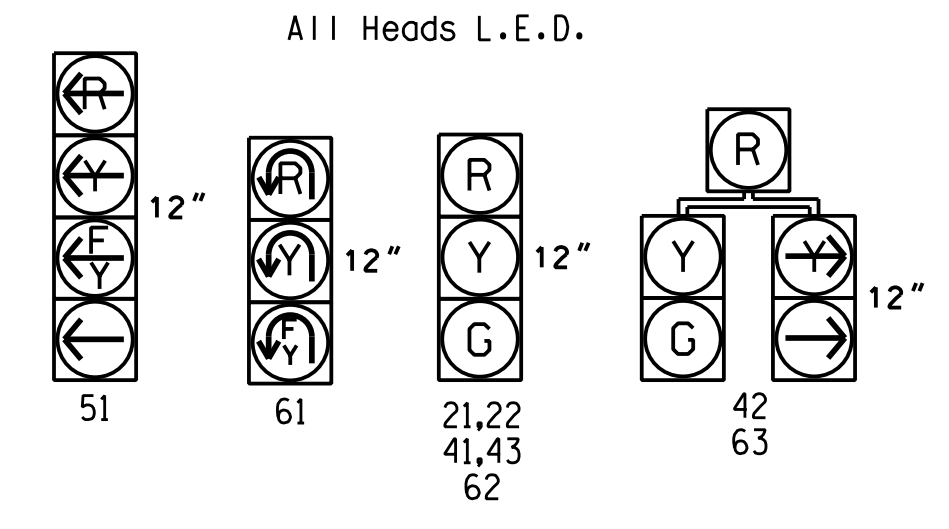


**OASIS 2070 TIMING CHART**

FEATURE	PHASE			
	2	4	5	6
Min Green 1 *	12	5	5	12
Extension 1 *	2.0	2.0	2.0	2.0
Max Green 1 *	90	30	20	90
Yellow Clearance	4.6	3.0	3.0	4.6
Red Clearance	2.2	3.5	3.3	2.2
Red Revert	2.0	2.0	2.0	2.0
Walk 1 *	-	-	-	-
Don't Walk 1	-	-	-	-
Seconds Per Actuation *	-	-	-	-
Max Variable Initial *	-	-	-	-
Time Before Reduction *	-	-	-	-
Time To Reduce *	-	-	-	-
Minimum Gap	-	-	-	-
Recall Mode	MIN RECALL	-	-	MIN RECALL
Vehicle Call Memory	YELLOW	-	-	YELLOW
Dual Entry	-	-	-	-
Simultaneous Gap	ON	ON	ON	ON

**RADAR DETECTION SYSTEM**

FUNCTION	Sensor 1	Sensor 2
Channel	1	1
Phase	2	6
Direction of Travel	EB	WB
Detection Zone (ft)	100-600	100-600
Enable Speed	Y	Y
Speed Range (mph)	35-100	35-100
Enable Estimated Time of Arrival	Y	Y
Estimated Time of Arrival (sec)	2.5-6.5	2.5-6.5

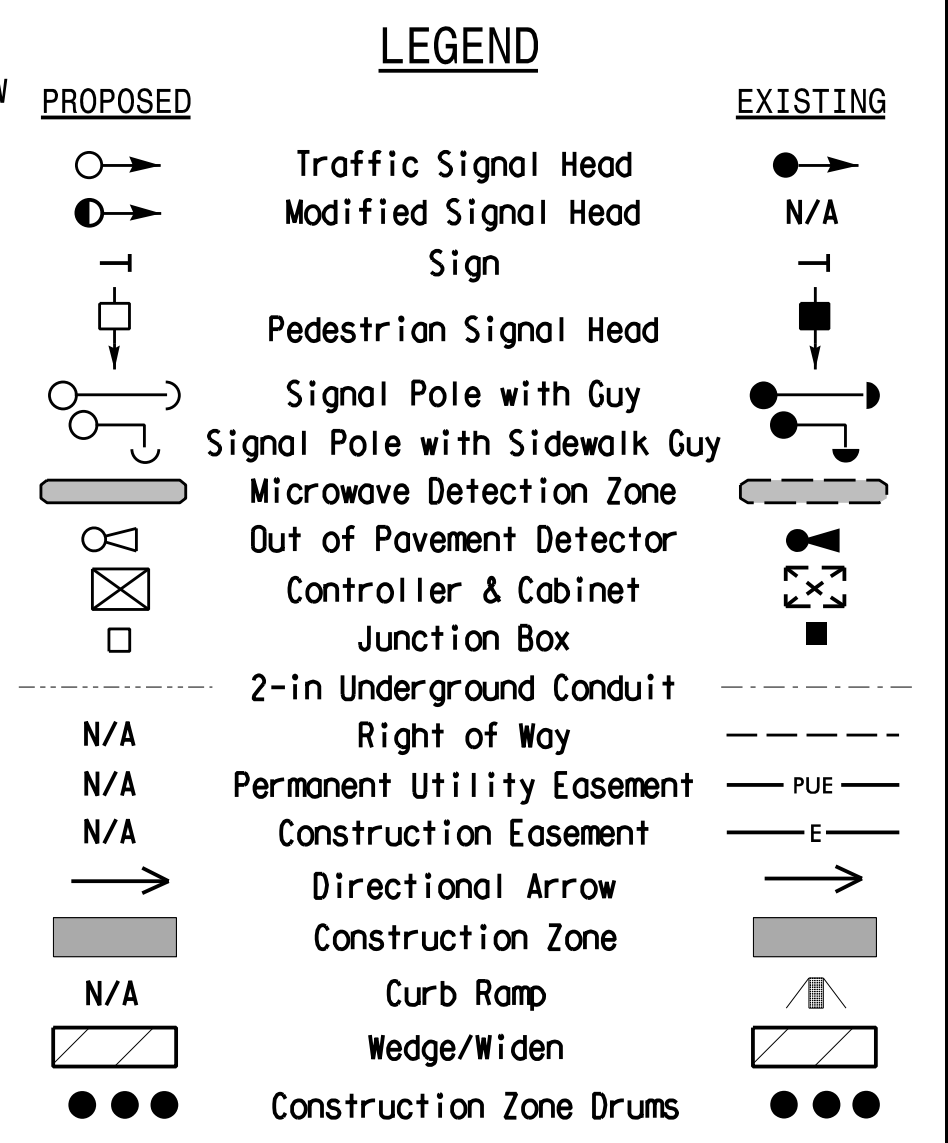

Signal Upgrade-  
 Temporary Design 3  
 (Construction Phase 3)


**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)		
	Division 3 New Hanover County Wilmington PLAN DATE: May 2022 PREPARED BY: E.E. Tiller	REVIEWED BY: N.K. Vlanich REVIEWED BY: N.R. Simmons	
750 N. Greenfield Pkwy, Corner, NC 27529 HNTB NORTH CAROLINA, P.C. 343 E. Six Forks Road, Suite 200 Raleigh, North Carolina 27609 NC License No: C-1554 (919) 546-8997	SCALE 0 40 1"=40'	REVISIONS INIT. DATE	DocuSigned by: N/ASHA R. SIMMONS 5/17/2024 SIGNATURE DATE SIG. INVENTORY NO. 03-0840T3



### 18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

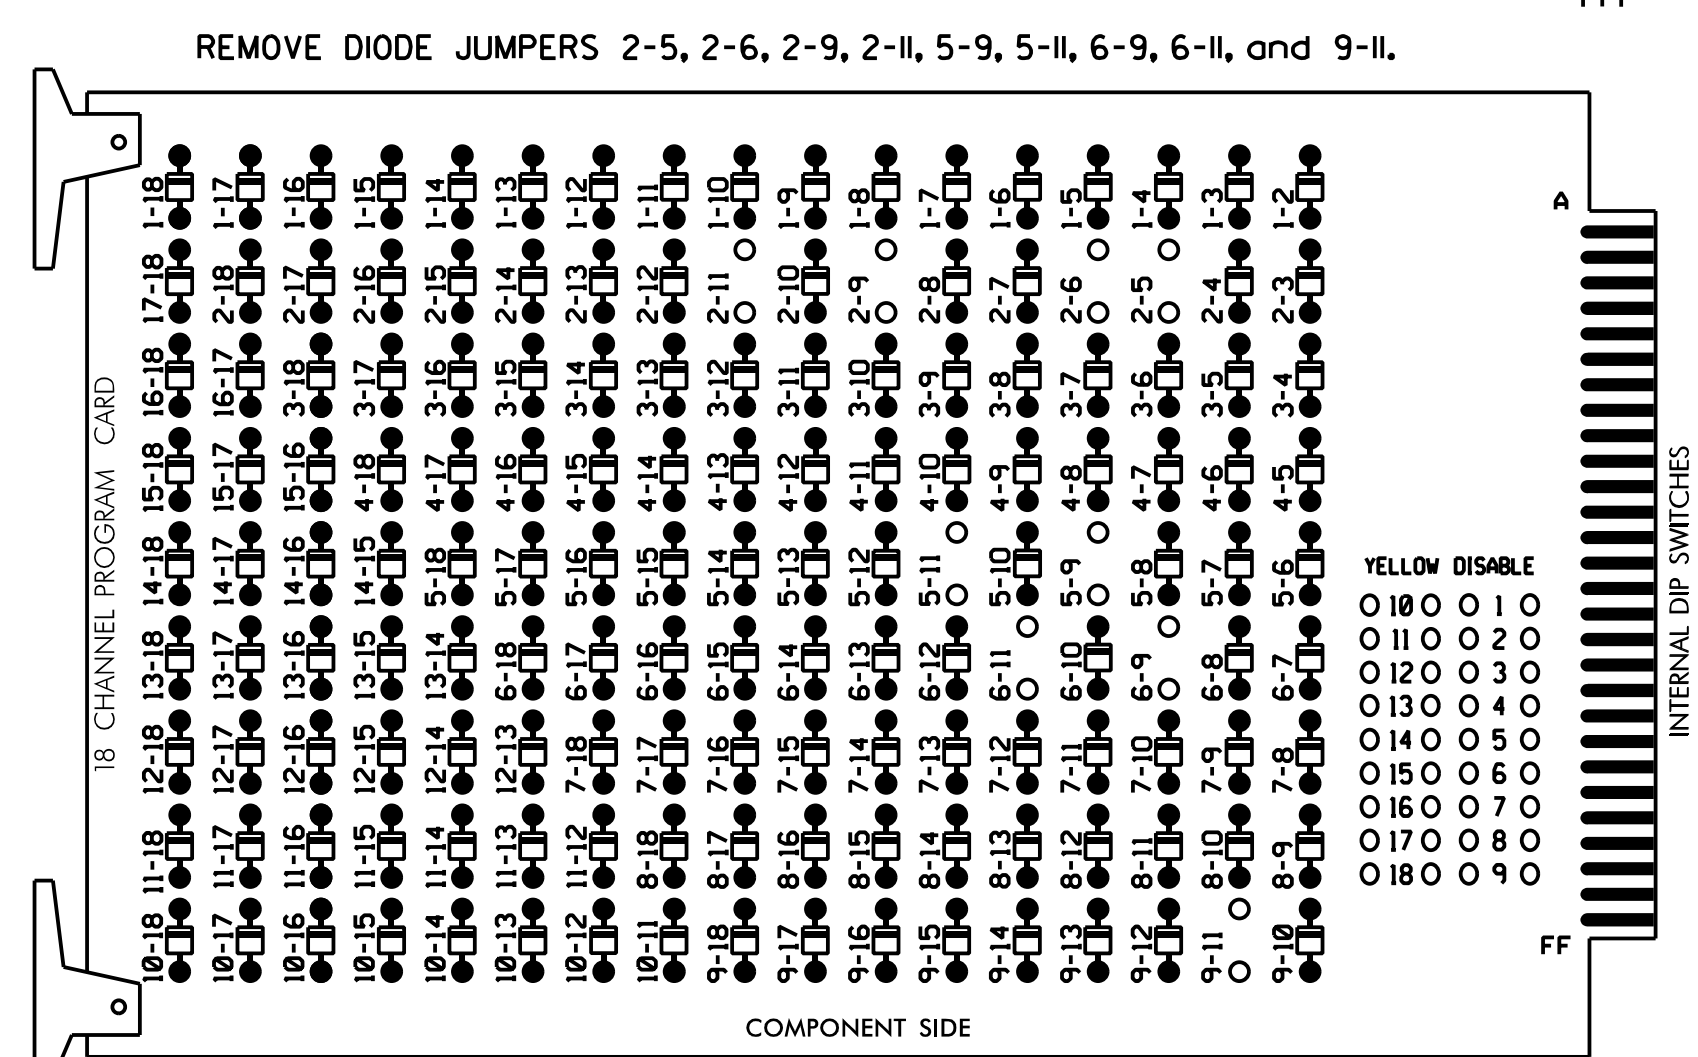

#### NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 are present on the monitor board.
- Ensure th Red Enable is active all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

### NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Startup in Green.
- Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlap.
- The cabinet and controller are part of the Wilmington Signal System.

### EQUIPMENT INFORMATION

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S2,S5,S7,S8,AUX S1,AUX S4  
 PHASES USED.....2,4,5,6  
 OVERLAP "A".....2  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....5+6  
 OVERLAP "D".....NOT USED


### SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	NU	21,22	NU	NU	41,42	63	NU	42	51	62,63	NU	NU	61	NU	NU	51	NU	NU
RED		128			101			*		134								
YELLOW		129			102					135								
GREEN		130			103					136								
RED ARROW													A121			A114		
YELLOW ARROW						102	132						A122			A115		
FLASHING YELLOW ARROW													A123			A116		
GREEN ARROW						103	133	133										
Hand icon																		
Person icon																		

NU = Not Used  
 \* Denotes install load resistor. See load resistor installation detail this sheet.  
 ★ See pictorial of head wiring in detail this sheet.

### INPUT FILE POSITION LAYOUT

(front view)

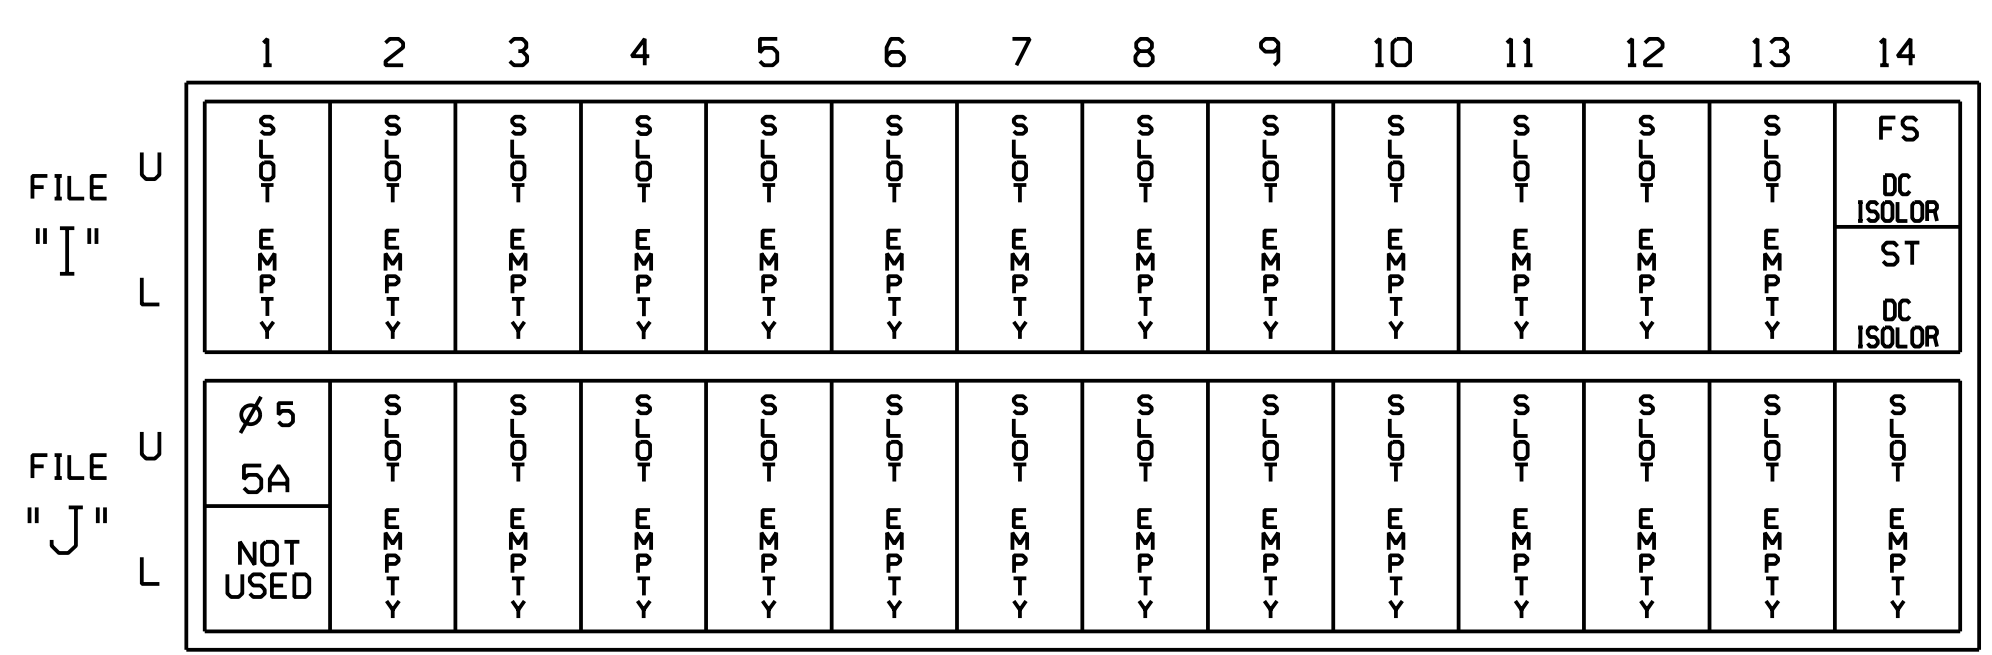

EX.: 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE  
ST = STOP TIME

### INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
5A	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	14U	47	9 ★	22	2	Y	Y			
	-	J1U	55	17 ★	55	5	Y	Y			


\* See Input Page Assignment programming details on sheet 3.

#### INPUT FILE POSITION LEGEND: J2L

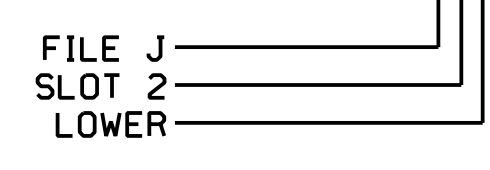

### FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

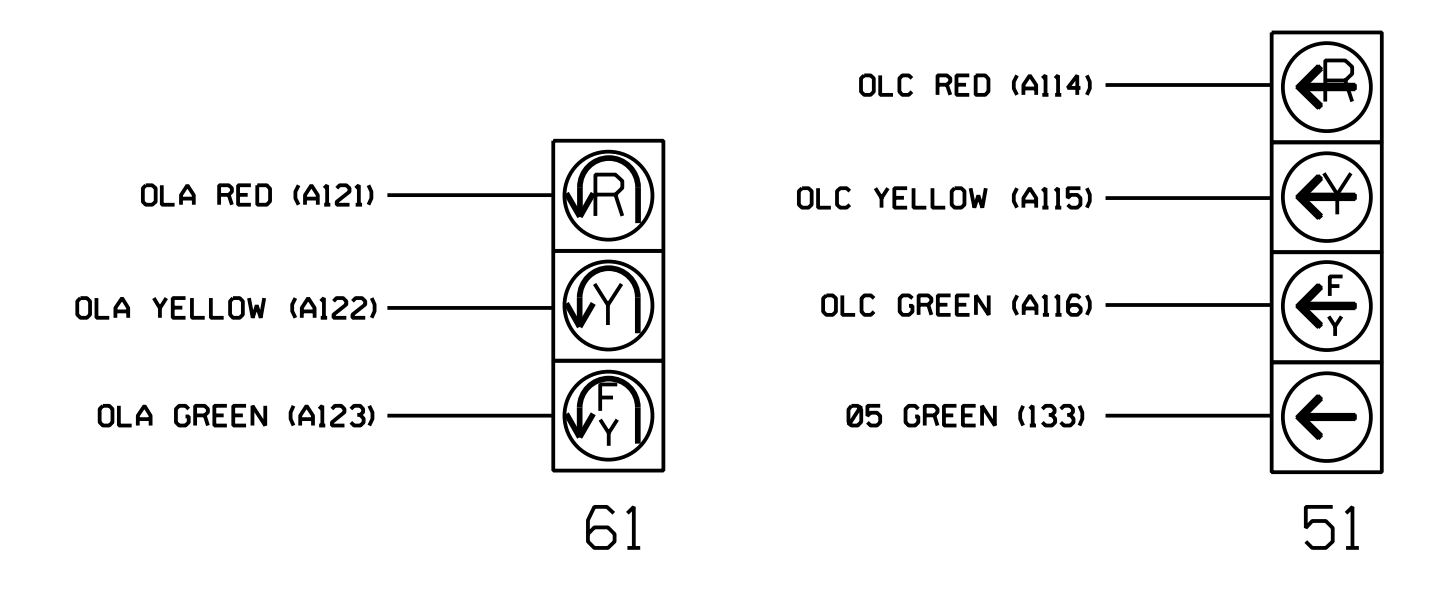

#### NOTE

The sequence display for signal head 51 requires special logic programming. See sheet 2 for programming instructions.


### SPECIAL DETECTOR NOTE

Install a multizone microwave detection system for vehicle detection. Perform installation according to manufacturer's directions and NCDOT engineer-approved mounting locations to accomplish detection schemes shown on the Signal Design Plans.

### LOAD RESISTOR INSTALLATION DETAIL

(install resistor as shown below)

ACCEPTABLE VALUES	
VALUE (ohms)	WTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

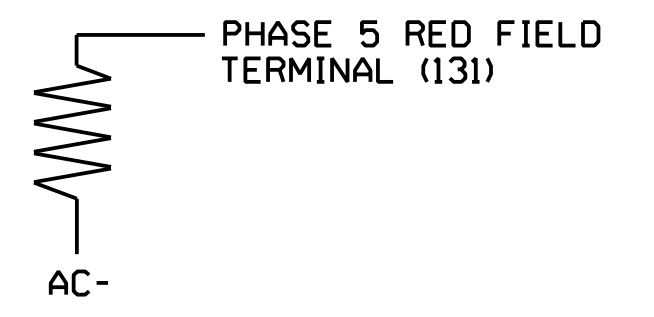

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T3  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

This plan supersedes the plan signed and sealed on 5/17/2024.

**HNTB**  
 HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

Signal Upgrade-  
 Electrical Detail - Sheet 1 of 4  
 (Construction Phase 3)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared in the Office of: 	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)	SEAL 
	Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vianich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	REVISIONS INIT. DATE _____ _____ _____



### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, AND 3.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

```

LOGICAL I/O COMMAND #1 (+/-COMMAND#)
IF ACTIVE PHASE #5 IS ON
AND RED CLEAR ON PHASE #5 IS ON

      ↓
      SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #42 ON
SET OUTPUT ASSIGNMENT #43 OFF
    
```

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

```

LOGICAL I/O COMMAND #2 (+/-COMMAND#)
IF ACTIVE PHASE #5 IS ON

      ↓
      SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #44 OFF
    
```

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

```

LOGICAL I/O COMMAND #3 (+/-COMMAND#)
IF YELLOW ON PHASE #5 IS ON

      ↓
      SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #43 ON
    
```

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGICAL I/O PROCESSOR PROGRAMMING COMPLETE

**OUTPUT REFERENCE SCHEDULE**  
USE TO INTERPRET LOGIC PROCESSOR

OUTPUT 42 = Overlap C Red  
OUTPUT 43 = Overlap C Yellow  
OUTPUT 44 = Overlap C Green

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

NOTICE PAGE 2

```

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

NOTICE GREEN FLASH

PRESS '+' TWICE

```

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: XX
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2

```

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

NOTICE GREEN FLASH

PRESS '+' TWICE

NOTICE PAGE 2

```



PAGE 2: VEHICLE OVERLAP 'C' SETTINGS
PHASE: 12345678910111213141516
VEH OVL PARENTS: X
VEH OVL NOT VEH:
VEH OVL NOT PED:
VEH OVL GRN EXT:
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW - GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T3  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade-  
Electrical Detail - Sheet 2 of 4  
(Construction Phase 3)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

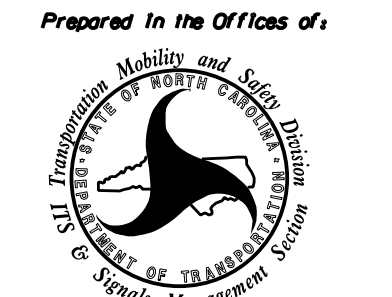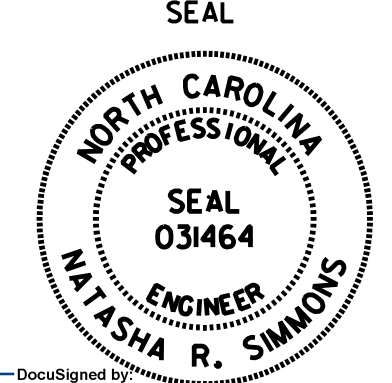ELECTRICAL AND PROGRAMMING DETAILS FOR:  Prepared in the Office of:  1750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)	SEAL  NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 031464 NAYASHA R. SIMMONS
	Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	REVISIONS INIT. DATE

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

PAGE: 2 C1 PIN:47 VEHICLE DETECTOR INPUT ASSIGNMENT #.....9 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....22 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED  
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 5A - PHASE 2)

PAGE: 2 C1 PIN:47 NOT ENABLED INPUT ASSIGNMENT #.....9 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64)..... PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 17

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR INPUT ASSIGNMENT #.....17 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....5 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '55' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 5A - PHASE 5)

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR INPUT ASSIGNMENT #.....17 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....55 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE: LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '5' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : X SWITCH/DUPLICATE: LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840T3 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade- Electrical Detail - Sheet 3 of 4 (Construction Phase 3)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with columns for PLAN DATE, PREPARED BY, REVISIONS, INIT, DATE, and SIGNATURE. Includes HNTB logo and project details for SR 2048 and SR 2117.



## ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

### ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAPS PAGE 2: Modifies overlap parent phases for head 51 to run protected turns only.

INPUTS PAGE 2: Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 0 seconds.

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 03-0840T3  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:


Signal Upgrade-  
Electrical Detail - Sheet 4 of 4  
(Construction Phase 3)

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

**HNTB** HNTB NORTH CAROLINA, P.C.  
343 E. Six Forks Road, Suite 200  
Raleigh, North Carolina 27609  
NC License No: C-1554  
(919) 546-8997

ELECTRICAL AND PROGRAMMING  
DETAILS FOR:


Prepared in the Offices of:

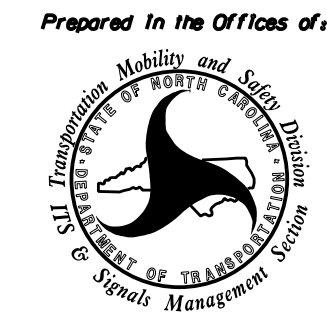

750 N. Greenfield Pkwy, Garner, NC 27529

SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)	
Division 3 New Hanover County Wilmington	
PLAN DATE: August 2023	REVIEWED BY: N.K. Vlanich
PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons
REVISIONS	INIT. DATE


SEAL

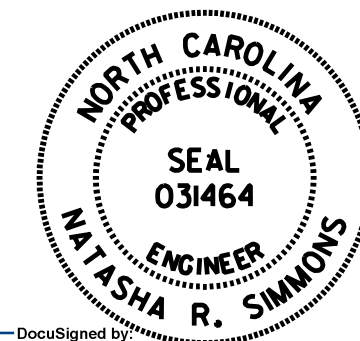



SEAL  
031464  
ENGINEER  
NATASHA R. SIMMONS

DocuSigned by:  
*Natasha R. Simmons* 5/17/2024  
SIGNATURE DATE  
SIG. INVENTORY NO. 03-0840T3

DEFAULT PHASING DIAGRAM

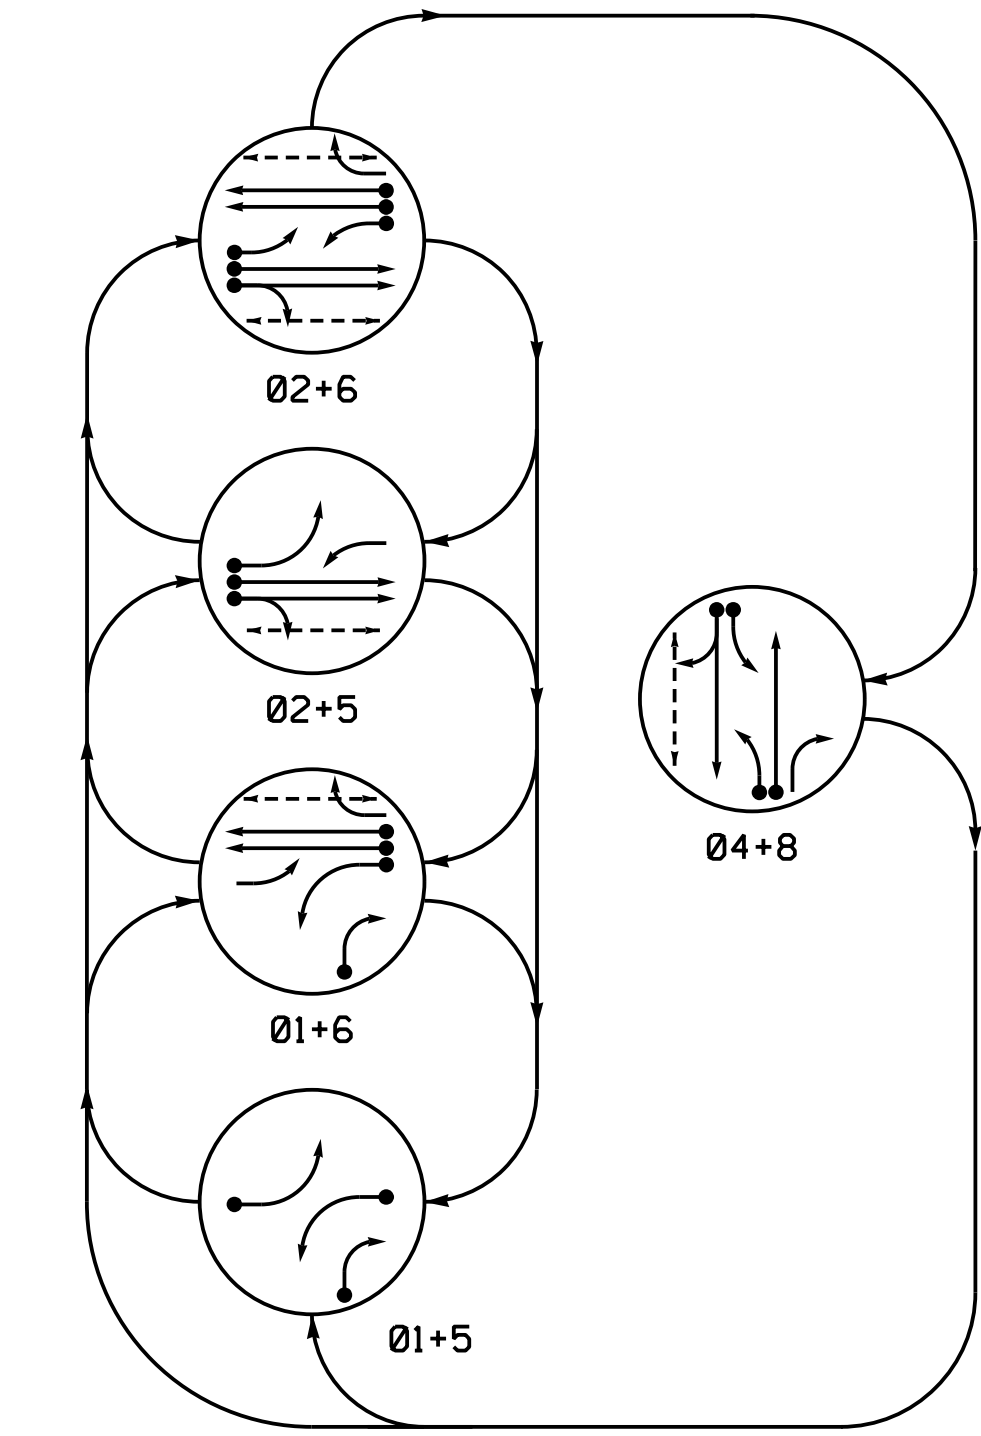

ALTERNATE PHASING DIAGRAM

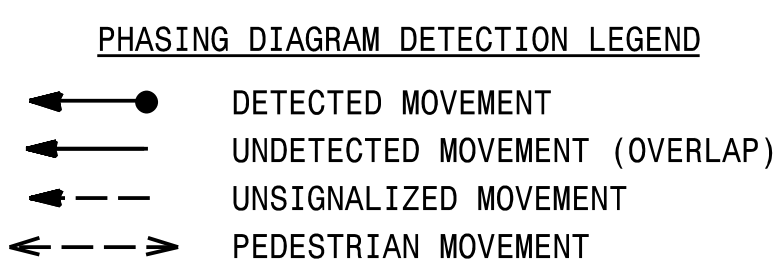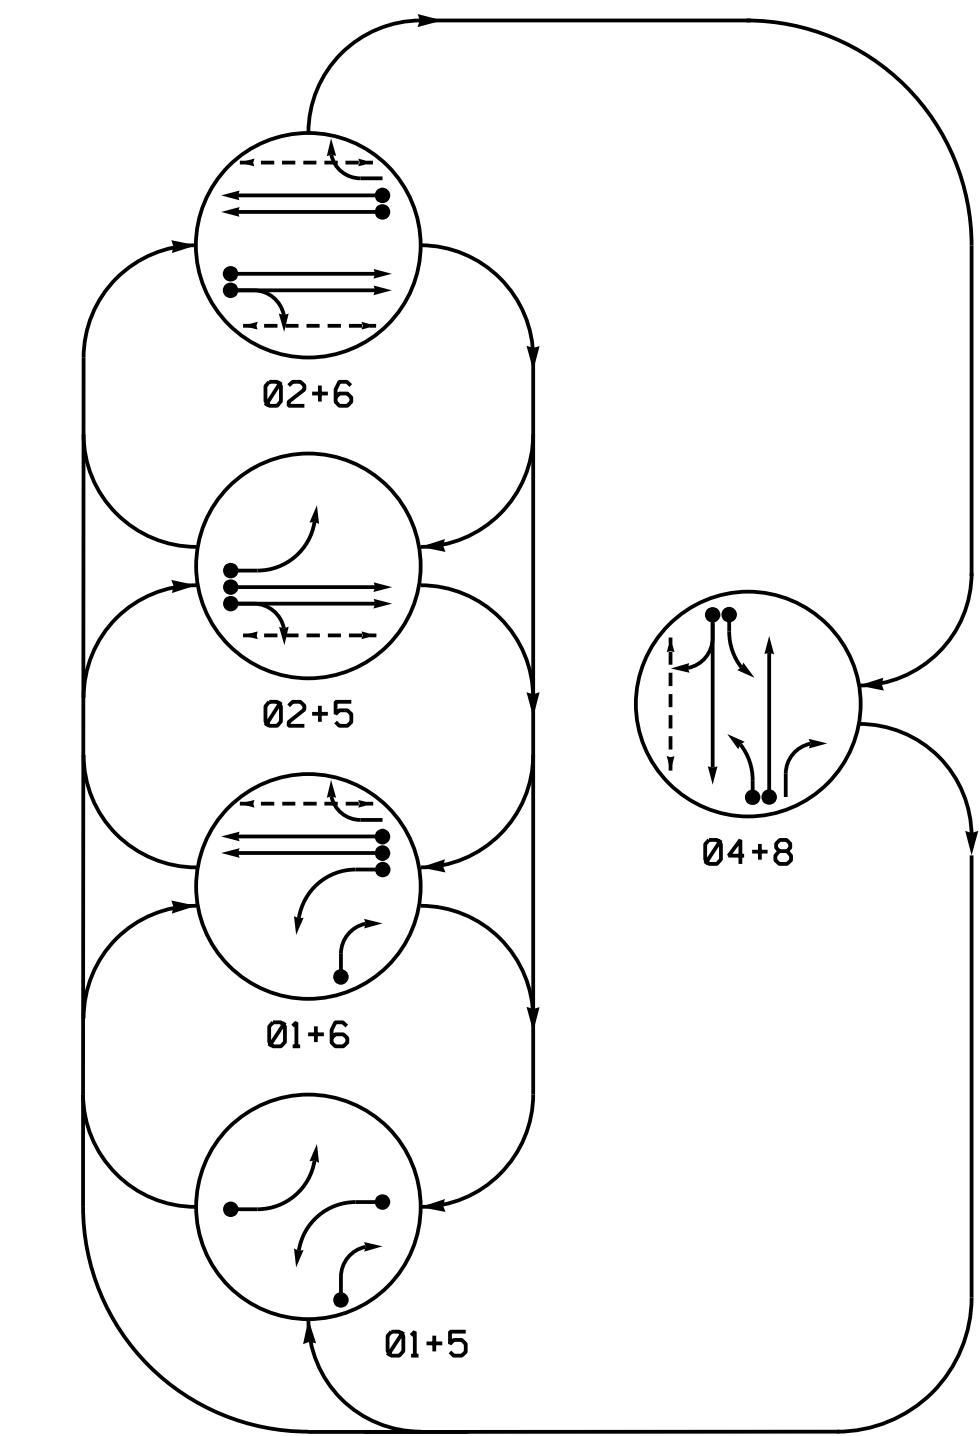

DEFAULT PHASING TABLE OF OPERATION table with columns for Signal Face and Phase (01+5, 02+6, 02+5, 01+6, F L EOP).


ALTERNATE PHASING TABLE OF OPERATION table with columns for Signal Face and Phase (01+5, 02+6, 02+5, 01+6, F L EOP).

OASIS 2070 LOOP & DETECTOR INSTALLATION CHART table with columns for Zone, Size, Distance, Turns, New Loop, Phase, Calling, Extension, Full Time Delay, Stretch Time, Delay Time, System Loop, New Card.



\* Multizone Microwave Detection
\*\* Disable Delay During Alternate Phasing Operation.
# Disable phase call for loop(s) during alternate phasing.

RADAR DETECTION SYSTEM table with columns for Function, Sensor 1(2A), Sensor 2(6A) and rows for Channel, Phase, Direction of Travel, Detection Zone, Enable Speed, Speed Range, Enable Estimated Time of Arrival, Estimated Time of Arrival.

- 5 Phase Fully Actuated Wilmington Signal System
NOTES
1. Refer to "Roadway Standard Drawings NCDOT" dated January 2024 and "Standard Specifications for Roads and Structures" dated January 2024.
2. Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
3. Phases 1 and/or 5 may be lagged.
4. Set all detector units to presence mode.
5. Omit "WALK" and flashing "DON'T WALK" with no pedestrian calls.
6. Program pedestrian heads to countdown the flashing "Don't Walk" time only.
7. All pedestrian pushbuttons shall be located in the field by the Division Traffic Engineer before installation.
8. The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
9. This intersection uses multi-zone microwave detection. Install detectors according to the manufacturer's instructions to achieve the desired detection.
10. Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
11. Signal system data: Controller Asset #0840.

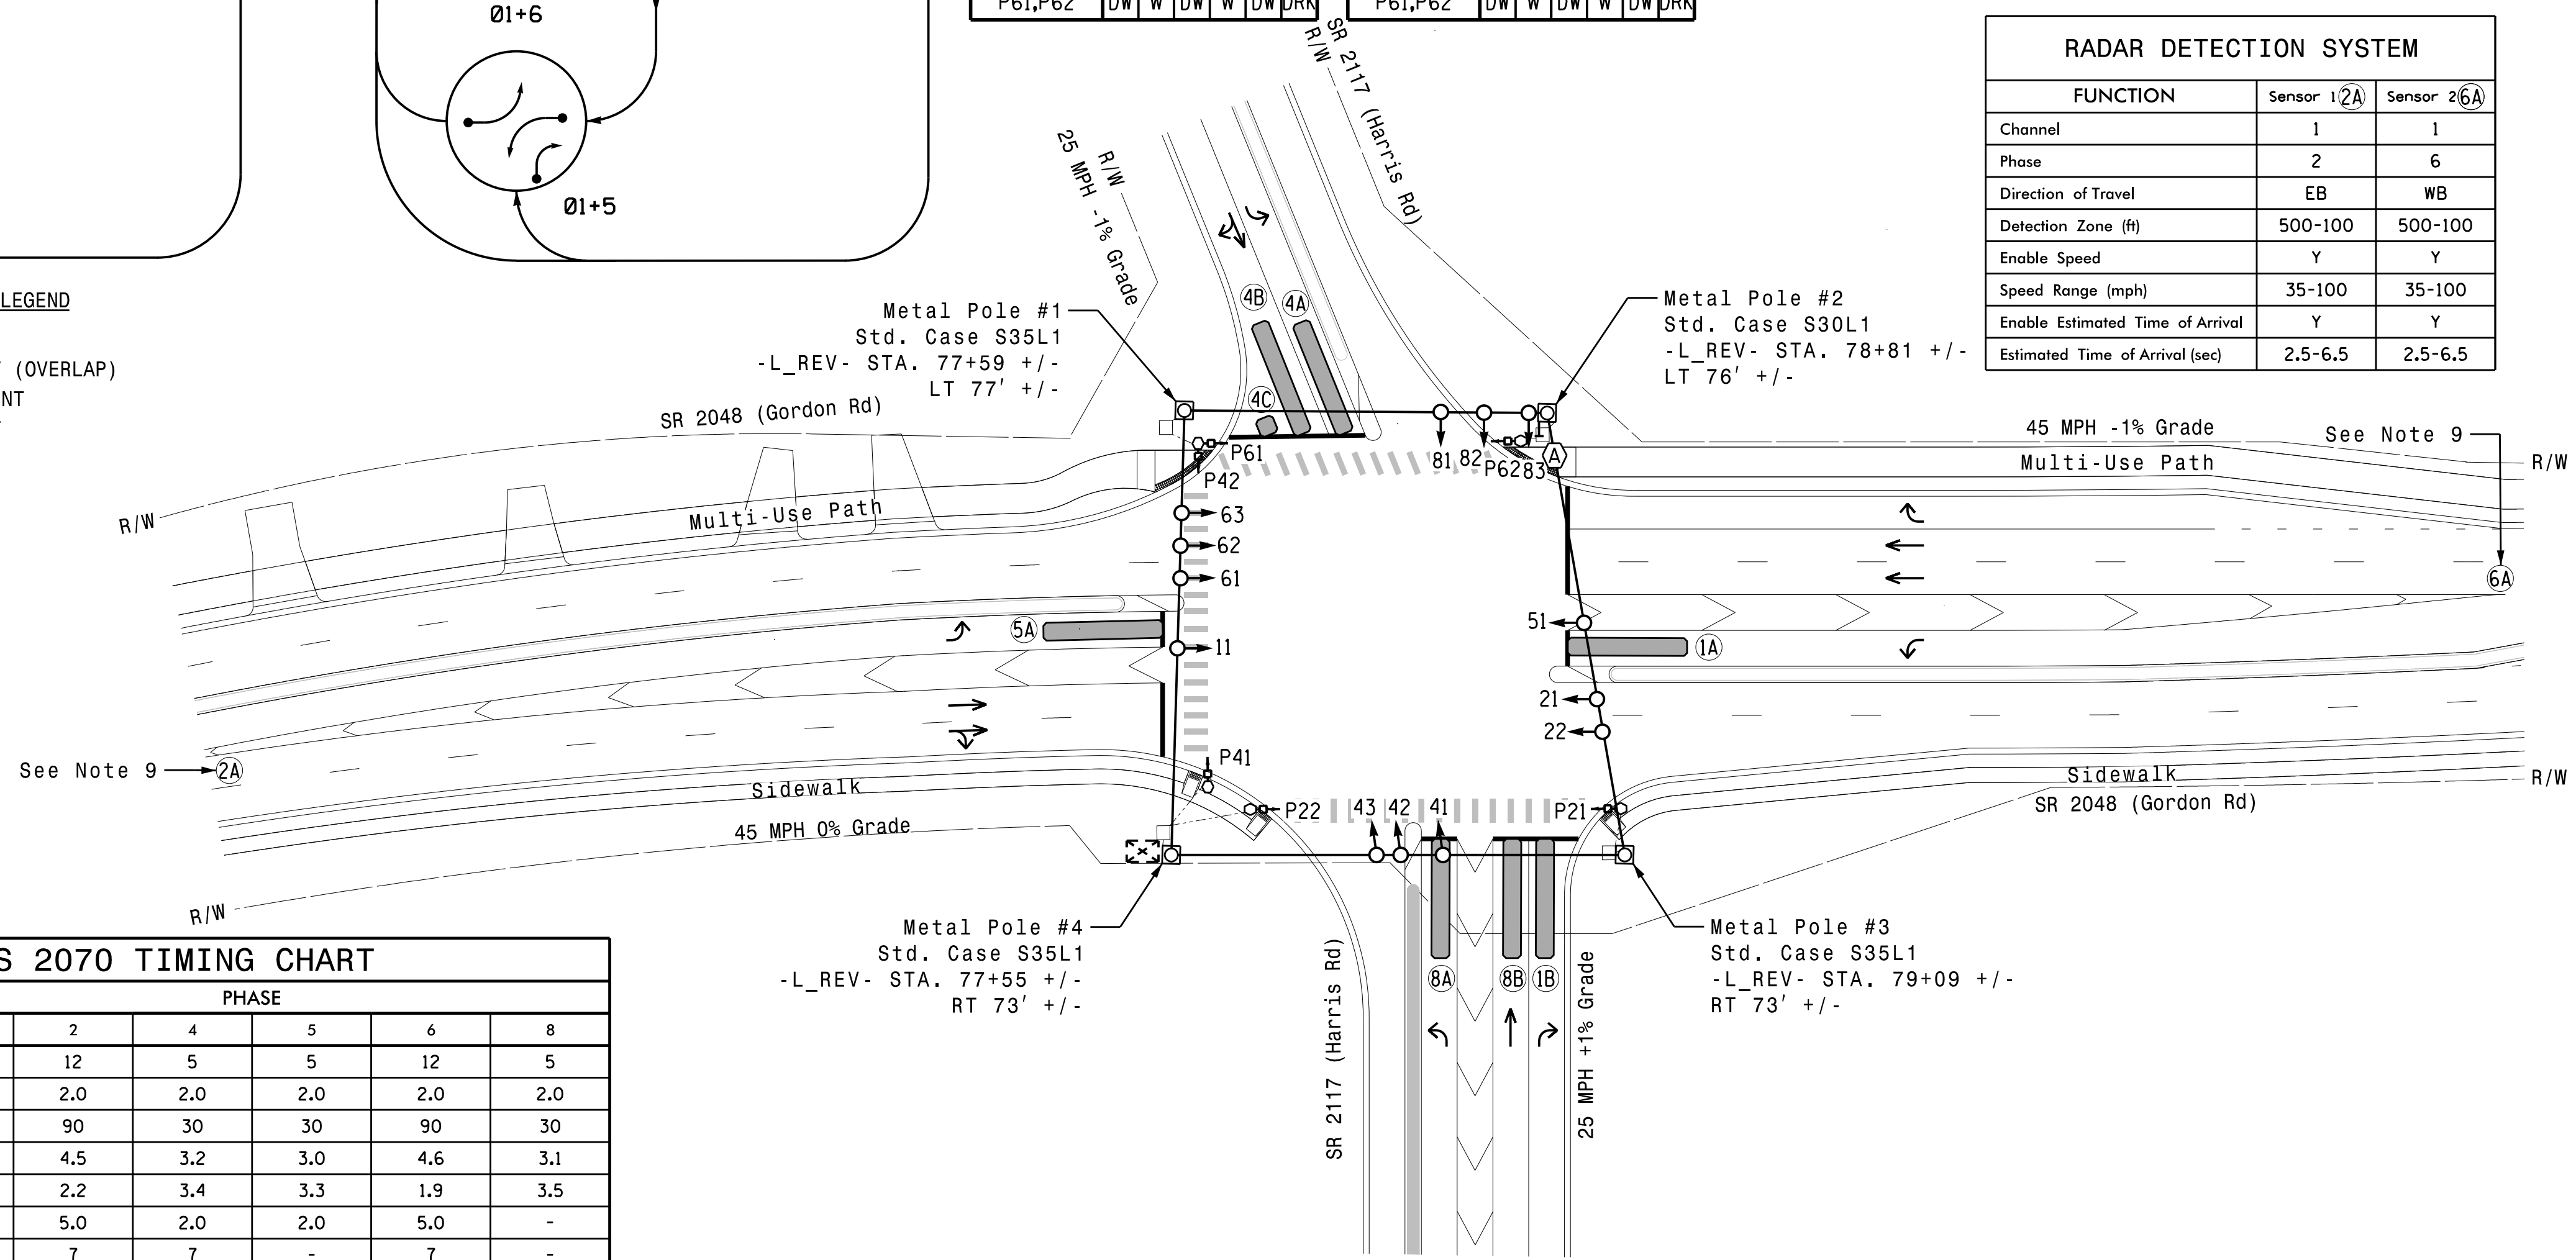

OASIS 2070 TIMING CHART table with columns for Feature and Phases 1, 2, 4, 5, 6, 8 and rows for Min Green, Extension, Max Green, Clearance, Walk, etc.

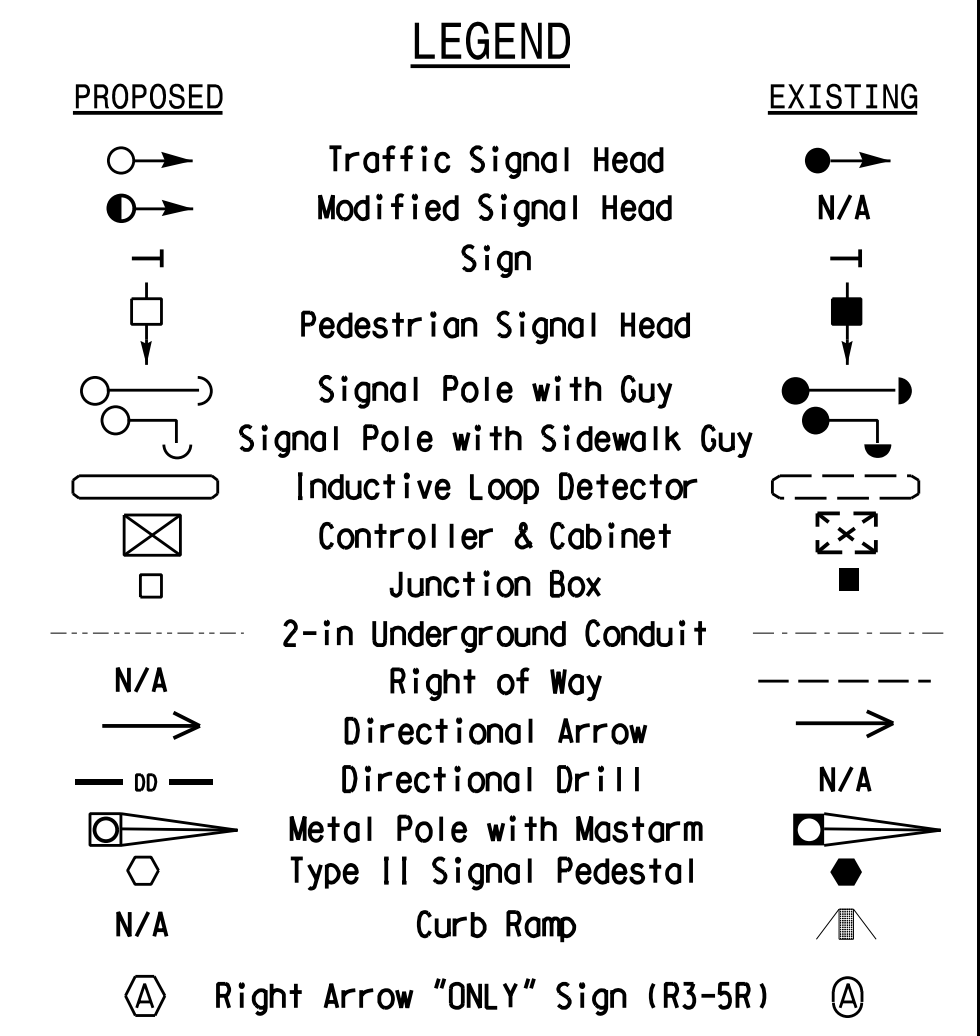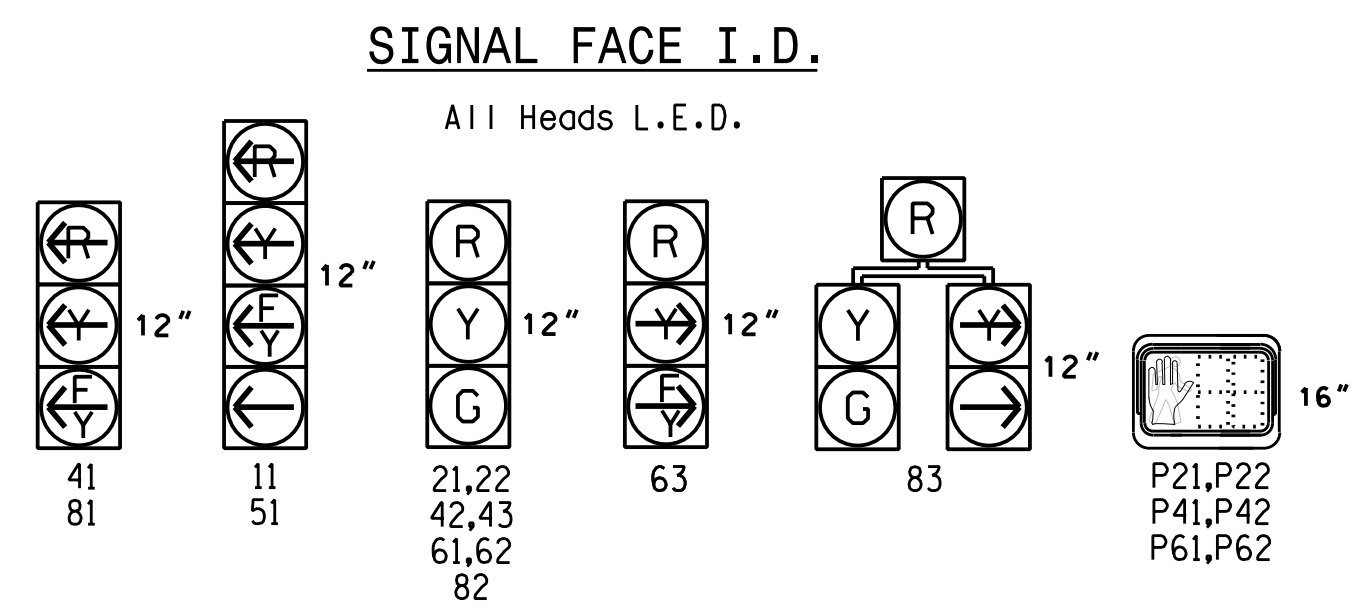

Signal Upgrade - Final Design
DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED
SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)
Division 3 New Hanover County Wilmington
PLAN DATE: May 2022 REVIEWED BY: N.K. Vlanich
PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons
HNTB NORTH CAROLINA, P.C. 343 E. Six Forks Road, Suite 200 Raleigh, North Carolina 27609 NC License No: C-1554 (919) 546-8997







### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5, AND 6.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON  
AND RED CLEAR ON PHASE #1 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #50 ON  
SET OUTPUT ASSIGNMENT #51 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

LOGICAL I/O COMMAND #2 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #52 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #3 (+/-COMMAND#)  
IF YELLOW ON PHASE #1 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #51 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #4 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON  
AND RED CLEAR ON PHASE #5 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #42 ON  
SET OUTPUT ASSIGNMENT #43 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

LOGICAL I/O COMMAND #5 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #44 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

LOGICAL I/O COMMAND #6 (+/-COMMAND#)  
IF YELLOW ON PHASE #5 IS ON

SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #43 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'B' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'D' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

PAGE 1: VEHICLE OVERLAP 'E' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE PAGE 2

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'B' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...N  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE PAGE 2

NOTICE PAGE 2 → PAGE 2: VEHICLE OVERLAP 'E' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN

SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+'

NOTICE GREEN FLASH





OVERLAP PROGRAMMING COMPLETE

OUTPUT REFERENCE SCHEDULE	
USE TO INTERPRET LOGIC PROCESSOR	
OUTPUT 42 =	Overlap C Red
OUTPUT 43 =	Overlap C Yellow
OUTPUT 44 =	Overlap C Green
OUTPUT 50 =	Overlap A Red
OUTPUT 51 =	Overlap A Yellow
OUTPUT 52 =	Overlap A Green

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade - Final Design  
Electrical Detail - Sheet 2 of 6

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

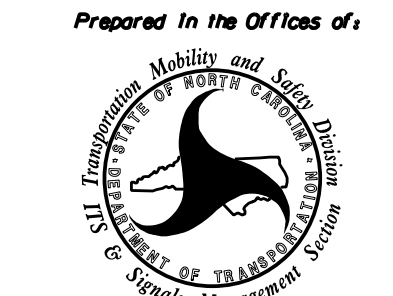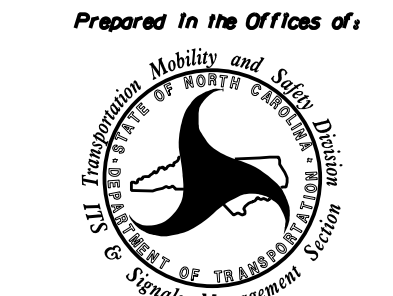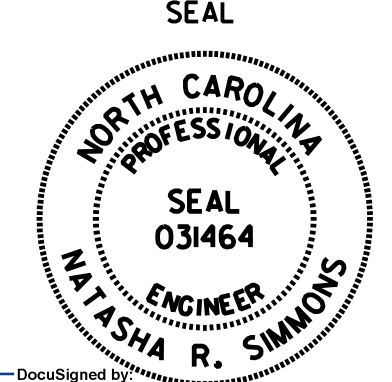 Prepared in the Office of:  750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)	SEAL  N. K. Vianich ENGINEER 031464 N. A. SIMMONS
	Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vianich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	REVISIONS INIT. DATE DocuSigned by:  5/17/2024 DATE SIG. INVENTORY NO. 03-0840



INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION. 2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS). THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

PAGE: 2 C1 PIN:48 VEHICLE DETECTOR INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....26 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED

DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 1A - PHASE 6)

PAGE: 2 C1 PIN:48 NOT ENABLED INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....- PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 18

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....1 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '51' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 1A - PHASE 1)

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....51 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '1' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED :X SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade - Final Design Electrical Detail - Sheet 3 of 6

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with project details: SR 2048 (Gordon Rd) at SR 2117 (Harris Rd), Division 3 New Hanover County Wilmington, PLAN DATE: August 2023, REVIEWED BY: N.K. Vianich, PREPARED BY: E.E. Tiller, REVIEWED BY: N.R. Simmons, and a signature block for N. K. Vianich dated 5/17/2024.



### INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

```

PAGE: 2 C1 PIN:47 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....22
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER A 'Y' FOR NOT ENABLED  
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 5A - PHASE 2)

```

PAGE: 2 C1 PIN:47 NOT ENABLED
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PRESS '+' TO ADVANCE TO INPUT 17

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....5
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER '55' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 5A - PHASE 5)

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....55
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PROGRAMMING COMPLETE

### SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....N
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED :
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '5' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....Y
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED : X
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```




DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade - Final Design  
Electrical Detail - Sheet 4 of 6

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

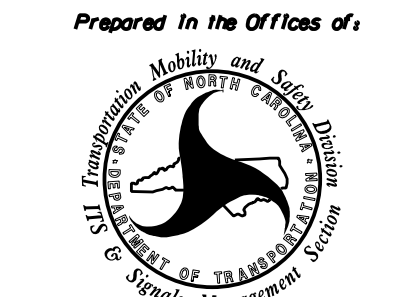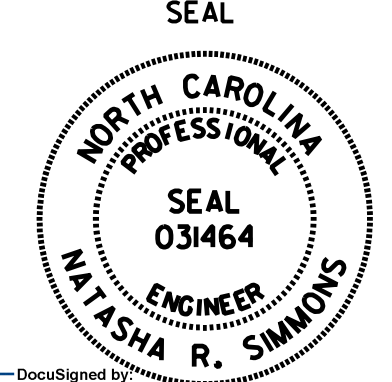	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)		
	Division 3 New Hanover County Wilmington	PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	
REVISIONS		INIT. DATE	DocuSigned by:  5/17/2024 DATE SIG. INVENTORY NO. 03-0840



## ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

### ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

- OVERLAPS PAGE 2:** Modifies overlap parent phases for heads 11 and 51 to run protected turns only.
- INPUTS PAGE 2:** Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 0 seconds.
- Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 0 seconds.

## FLASHER CIRCUIT MODIFICATION DETAIL

IN ORDER TO ENSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:

1. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
2. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
3. REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

THIS ELECTRICAL DETAIL IS FOR  
 THE SIGNAL DESIGN: 03-0840  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

Signal Upgrade - Final Design  
 Electrical Detail - Sheet 5 of 6

**DOCUMENT NOT CONSIDERED FINAL  
 UNLESS ALL SIGNATURES COMPLETED**

ELECTRICAL AND PROGRAMMING DETAILS FOR:  Prepared in the Office of:  750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 2117 (Harris Rd)  Division 3    New Hanover County    Wilmington	SEAL  SEAL 031464 ENGINEER NATASHA R. SIMMONS						
PLAN DATE: August 2023    REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller    REVIEWED BY: N.R. Simmons		DocuSigned by:  NATASHA R. SIMMONS    5/17/2024 SIGNATURE    DATE SIG. INVENTORY NO.    03-0840						
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="text-align: left;">REVISIONS</th> <th style="text-align: left;">INIT.</th> <th style="text-align: left;">DATE</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>			REVISIONS	INIT.	DATE			
REVISIONS	INIT.	DATE						

OUTPUT REMAPPING ASSIGNMENT PROGRAMMING DETAIL TO ASSIGN LOADSWITCH AUX S3 TO OVERLAP 'E' (FOR SIGNAL HEAD 63) (program controller as shown below)

FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '1' (OUTPUT ASSIGNMENTS). WITH CURSOR IN "OUTPUT ASSIGNMENT#" POSITION, ENTER "45"

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

PAGE:1 C1 PIN:91 NOT ENABLED OUTPUT ASSIGNMENT #.....45 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0.0 SELECT ASSIGNMENT: NOT ENABLED.....Y VEHICLE PHASE..... PEDESTRIAN PHASE..... VEHICLE OVERLAP.....Y PEDESTRIAN OVERLAP..... WATCHDOG..... DETECTOR RESET..... ADVANCE BEACON..... OUT OF PHASE FLASHER..... CONTROLLER FLASH..... RUN FREE..... RESERVED..... PREEMPT..... SOFT PREEMPT..... ANY PREEMPT..... COORDINATION PLAN..... OFFSET..... PHASE CHECK..... PHASE ON..... PHASE NEXT.....

OVERLAP "E" RED

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED. ENTER A "Y" FOR VEHICLE OVERLAP.

PAGE:1 C1 PIN:91 NOT ENABLED SELECT VEHICLE OVERLAP (A=1,P=16)...5 SELECT COLOR(0=RED,1=YEL,2=GRN)...0

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

PAGE:1 C1 PIN:91 VEHICLE OVERLAP OUTPUT ASSIGNMENT #.....45 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0.0 SELECT ASSIGNMENT: NOT ENABLED..... VEHICLE PHASE..... PEDESTRIAN PHASE..... VEHICLE OVERLAP.....Y PEDESTRIAN OVERLAP..... WATCHDOG..... DETECTOR RESET..... ADVANCE BEACON..... OUT OF PHASE FLASHER..... CONTROLLER FLASH..... RUN FREE..... RESERVED..... PREEMPT..... SOFT PREEMPT..... ANY PREEMPT..... COORDINATION PLAN..... OFFSET..... PHASE CHECK..... PHASE ON..... PHASE NEXT.....

PRESS '\*' KEY FOR OUTPUT 46

PAGE:1 C1 PIN:93 NOT ENABLED OUTPUT ASSIGNMENT #.....46 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0.0 SELECT ASSIGNMENT: NOT ENABLED.....Y VEHICLE PHASE..... PEDESTRIAN PHASE..... VEHICLE OVERLAP.....Y PEDESTRIAN OVERLAP..... WATCHDOG..... DETECTOR RESET..... ADVANCE BEACON..... OUT OF PHASE FLASHER..... CONTROLLER FLASH..... RUN FREE..... RESERVED..... PREEMPT..... SOFT PREEMPT..... ANY PREEMPT..... COORDINATION PLAN..... OFFSET..... PHASE CHECK..... PHASE ON..... PHASE NEXT.....

OVERLAP "E" GREEN

THE OUTPUT IS SET AS NOT ENABLED BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED. ENTER A "Y" FOR VEHICLE OVERLAP.

PAGE:1 C1 PIN:93 NOT ENABLED SELECT VEHICLE OVERLAP (A=1,P=16)...5 SELECT COLOR(0=RED,1=YEL,2=GRN)...2

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

PAGE:1 C1 PIN:93 VEHICLE OVERLAP OUTPUT ASSIGNMENT #.....46 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0.0 SELECT ASSIGNMENT: NOT ENABLED..... VEHICLE PHASE..... PEDESTRIAN PHASE..... VEHICLE OVERLAP.....Y PEDESTRIAN OVERLAP..... WATCHDOG..... DETECTOR RESET..... ADVANCE BEACON..... OUT OF PHASE FLASHER..... CONTROLLER FLASH..... RUN FREE..... RESERVED..... PREEMPT..... SOFT PREEMPT..... ANY PREEMPT..... COORDINATION PLAN..... OFFSET..... PHASE CHECK..... PHASE ON..... PHASE NEXT.....

PRESS '\*' KEY FOR OUTPUT 54

PAGE:1 C1 PIN:101 CONTROLLER FLASH OUTPUT ASSIGNMENT #.....54 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0.0 SELECT ASSIGNMENT: NOT ENABLED..... VEHICLE PHASE..... PEDESTRIAN PHASE..... VEHICLE OVERLAP.....Y PEDESTRIAN OVERLAP..... WATCHDOG..... DETECTOR RESET..... ADVANCE BEACON..... OUT OF PHASE FLASHER..... CONTROLLER FLASH.....Y RUN FREE..... RESERVED..... PREEMPT..... SOFT PREEMPT..... ANY PREEMPT..... COORDINATION PLAN..... OFFSET..... PHASE CHECK..... PHASE ON..... PHASE NEXT.....

OVERLAP "E" YELLOW

ENTER A "Y" FOR VEHICLE OVERLAP.

PAGE:1 C1 PIN:101 CONTROLLER FLASH SELECT VEHICLE OVERLAP (A=1,P=16)...5 SELECT COLOR(0=RED,1=YEL,2=GRN)...1

WHEN A 'Y' IS ENTERED FOR 'VEHICLE OVERLAP' THE SCREEN SHOWN ABOVE WILL APPEAR. ENTER DATA AS SHOWN. PRESS THE 'ENT' AFTER AFTER INPUTING DATA, THEN 'ESC'.

DISPLAY WILL NOW SHOW THE SPECIFIED OUTPUT ASSIGNED AS 'VEHICLE OVERLAP' AS SHOWN BELOW.

PAGE:1 C1 PIN:101 VEHICLE OVERLAP OUTPUT ASSIGNMENT #.....54 FREQUENCY (0=DEFAULT) (0-25.5 HZ)...0.0 DUTY CYCLE (0=DEFAULT) (0 - 100%)...0 MODE (0=SOLID,1=FLASH)...0.0 SELECT ASSIGNMENT: NOT ENABLED..... VEHICLE PHASE..... PEDESTRIAN PHASE..... VEHICLE OVERLAP.....Y PEDESTRIAN OVERLAP..... WATCHDOG..... DETECTOR RESET..... ADVANCE BEACON..... OUT OF PHASE FLASHER..... CONTROLLER FLASH..... RUN FREE..... RESERVED..... PREEMPT..... SOFT PREEMPT..... ANY PREEMPT..... COORDINATION PLAN..... OFFSET..... PHASE CHECK..... PHASE ON..... PHASE NEXT.....

THE OUTPUT IS SET AS CONTROLLER FLASH BY DEFAULT. THIS "Y" WILL REMAIN UNTIL THE OUTPUT IS CHANGED.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0840 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade - Final Design Electrical Detail - Sheet 6 of 6


DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

HNTB HNTB NORTH CAROLINA, P.C. 343 E. Six Forks Road, Suite 200 Raleigh, North Carolina 27609 NC License No: C-1554 (919) 546-8997


Table with columns: ELECTRICAL AND PROGRAMMING DETAILS FOR, SR 2048 (Gordon Rd) at SR 2117 (Harris Rd), Division 3 New Hanover County Wilmington, PLAN DATE: August 2023, REVIEWED BY: N.K. Vlanich, PREPARED BY: E.E. Tiller, REVIEWED BY: N.R. Simmons, REVISIONS, INITI, DATE, SEAL NORTH CAROLINA PROFESSIONAL SEAL 031464 ENGINEER NAYASHA R. SIMMONS, 5/17/2024, DATE, SIG. INVENTORY NO. 03-0840




**DEFAULT PHASING DIAGRAM**

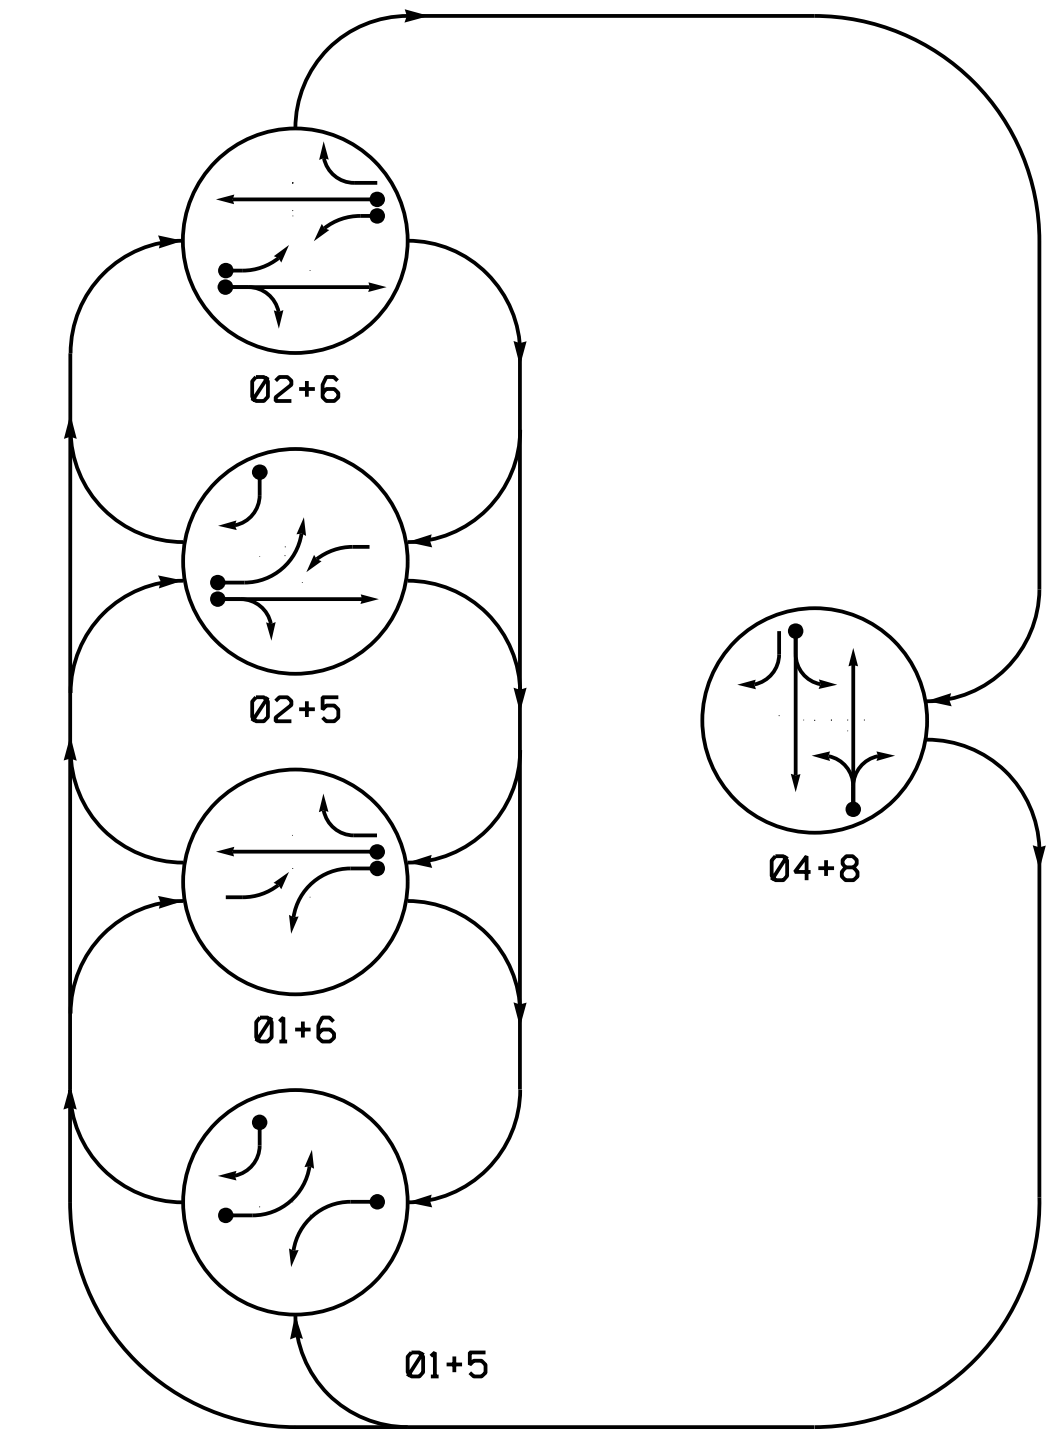

**ALTERNATE PHASING DIAGRAM**

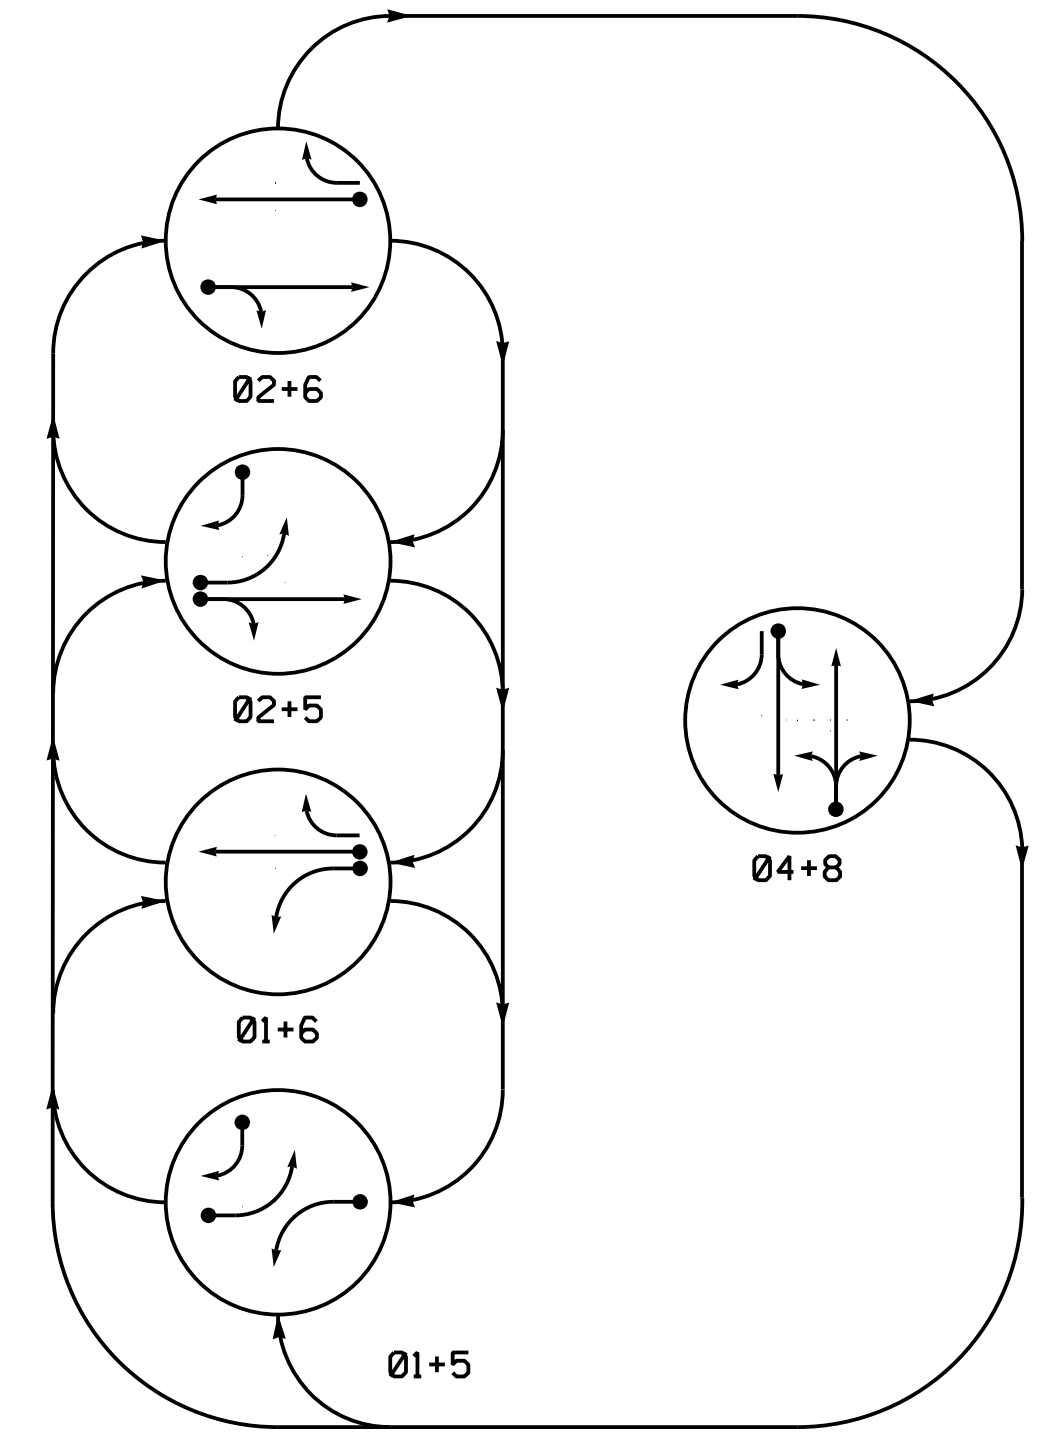

**SIGNAL FACE I.D.**

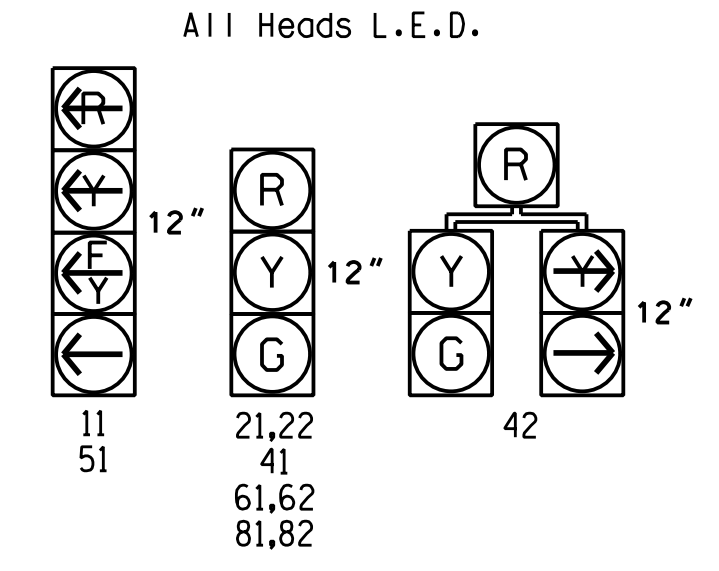

**OASIS 2070 LOOP & DETECTOR INSTALLATION CHART**

ZONE	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	DETECTOR PROGRAMMING				SYSTEM LOOP	NEW CARD	
					PHASE	CALLING	EXTENSION	FULL TIME DELAY			STRETCH TIME
1A	6x40	0	*	*	1	Y	Y	-	15**	-	Y
4A	6x40	0	*	*	6#	Y	Y	-	-	-	Y
5A	6x40	0	*	*	5	Y	Y	-	15**	-	Y
5B	6x40	0	*	*	2#	Y	Y	-	-	-	Y
8A	6x40	0	*	*	8	Y	Y	-	3	-	Y

\* Multizone Microwave Detection  
 \*\* Reduce delay to 3 seconds during alternate phasing.  
 # Disable phase call for loop(s) during alternate phasing.


**5 Phase Fully Actuated Wilmington Signal System**

**NOTES**

- Refer to "Roadway Standard Drawings NCDOT" dated January 2024 and "Standard Specifications for Roads and Structures" dated January 2024.
- Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
- Phase 1 and/or phase 5 may be lagged.
- Set all detector units to presence mode.
- Locate new cabinet to as not to obstruct sight distance of vehicles turning right on red.
- The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
- This intersection uses multi-zone microwave detection. Install detectors according to the manufacturer's instructions to achieve the desired detection.
- Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
- Signal system data: Controller Asset #0893.

**PHASING DIAGRAM DETECTION LEGEND**

- DETECTED MOVEMENT
- UNDETECTED MOVEMENT (OVERLAP)
- UNSIGNALIZED MOVEMENT
- PEDESTRIAN MOVEMENT

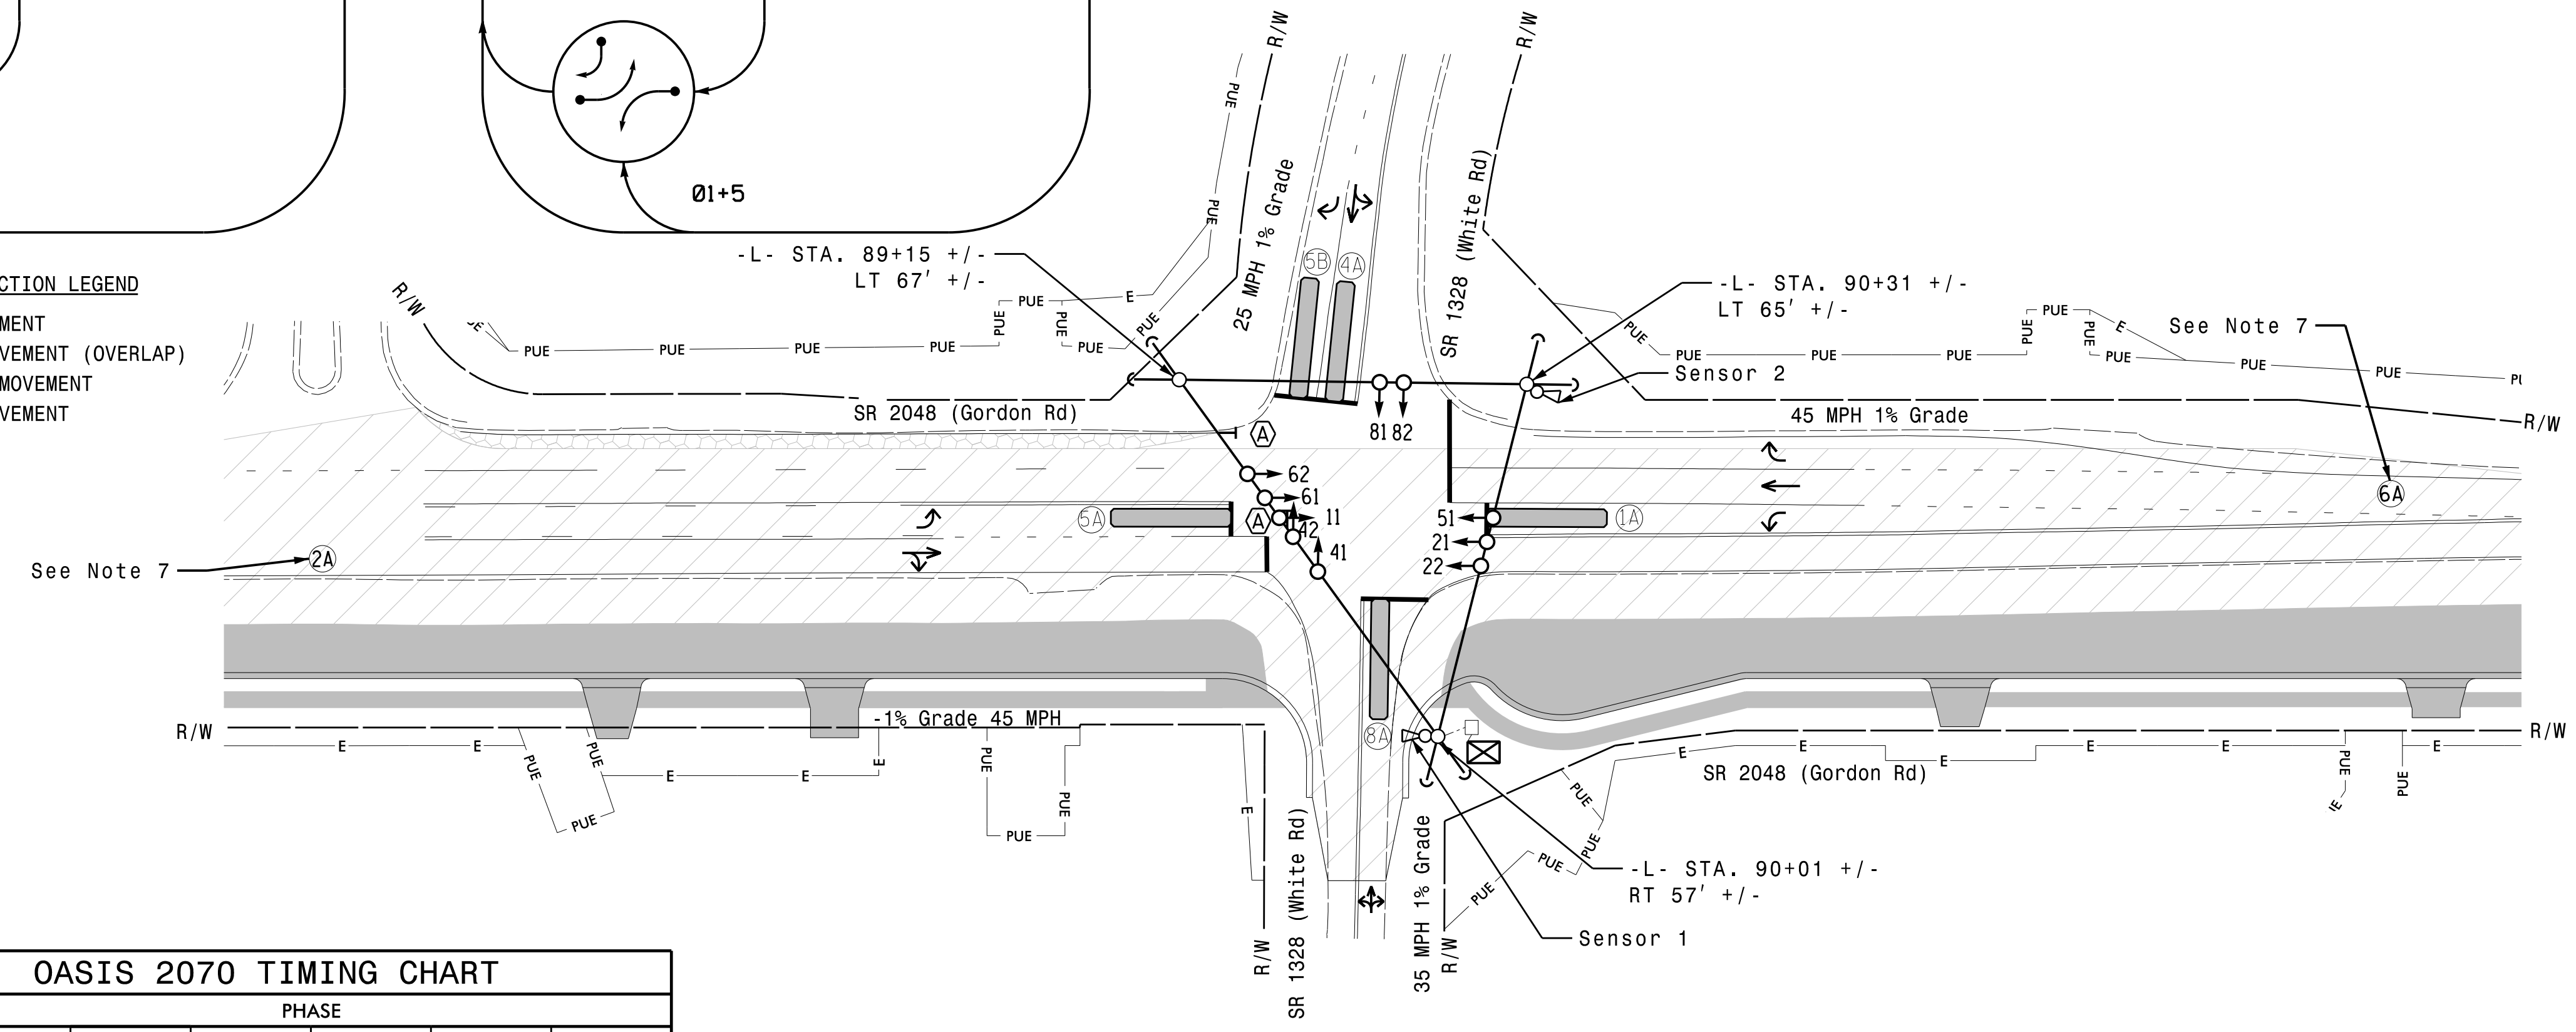

**OASIS 2070 TIMING CHART**

FEATURE	PHASE					
	1	2	4	5	6	8
Min Green 1 *	5	12	5	5	12	5
Extension 1 *	2.0	2.0	2.0	2.0	2.0	2.0
Max Green 1 *	20	90	20	20	90	20
Yellow Clearance	3.0	4.6	3.1	3.0	4.6	3.8
Red Clearance	1.8	1.1	2.0	1.9	1.1	1.3
Red Revert	2.0	2.0	2.0	2.0	2.0	2.0
Walk 1 *	-	-	-	-	-	-
Don't Walk 1	-	-	-	-	-	-
Seconds Per Actuation *	-	-	-	-	-	-
Max Variable Initial *	-	-	-	-	-	-
Time Before Reduction *	-	-	-	-	-	-
Time To Reduce *	-	-	-	-	-	-
Minimum Gap	-	-	-	-	-	-
Recall Mode	-	MIN RECALL	-	-	MIN RECALL	-
Vehicle Call Memory	-	YELLOW	-	-	YELLOW	-
Dual Entry	-	-	ON	-	-	ON
Simultaneous Gap	ON	ON	ON	ON	ON	ON

\* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

**RADAR DETECTION SYSTEM**

FUNCTION	Sensor 1	Sensor 2
Channel	1	1
Phase	2	6
Direction of Travel	EB	WB
Detection Zone (ft)	100-600	100-600
Enable Speed	Y	Y
Speed Range (mph)	35-100	35-100
Enable Estimated Time of Arrival	Y	Y
Estimated Time of Arrival (sec)	2.5-6.5	2.5-6.5

**DEFAULT PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE						FLASH
	0	1	2	4	6	8	
11	-	-	-	-	-	-	-
21,22	R	R	R	G	R	Y	-
41	R	R	R	R	G	R	-
42	R	R	R	R	G	R	-
51	-	-	-	-	-	-	-
61,62	R	G	R	G	R	Y	-
81,82	R	R	R	R	G	R	-

**ALTERNATE PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE						FLASH
	0	1	2	4	6	8	
11	-	-	-	-	-	-	-
21,22	R	R	G	R	R	Y	-
41	R	R	R	R	G	R	-
42	R	R	R	R	G	R	-
51	-	-	-	-	-	-	-
61,62	R	G	R	G	R	Y	-
81,82	R	R	R	R	G	R	-

**LEGEND**

PROPOSED	EXISTING
○ Traffic Signal Head	● N/A
○ Modified Signal Head	○ N/A
○ Sign	○ N/A
○ Pedestrian Signal Head	○ N/A
○ Signal Pole with Guy	○ N/A
○ Signal Pole with Sidewalk Guy	○ N/A
○ Microwave Detection Zone	○ N/A
○ Out of Pavement Detector	○ N/A
○ Controller & Cabinet	○ N/A
○ Junction Box	○ N/A
○ 2-in Underground Conduit	○ N/A
N/A Right of Way	○ N/A
N/A Permanent Utility Easement	○ N/A
N/A Construction Easement	○ N/A
→ Directional Arrow	→ N/A
Construction Zone	Construction Zone
Wedge/Widen	Wedge/Widen
Temporary Pavement	Temporary Pavement
N/A Curb Ramp	○ N/A
○ Right Arrow "ONLY" Sign (R3-5R)	○ N/A

Signal Upgrade-  
 Temporary Design 1  
 (Construction Phase 1)

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

**HNTB** HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

Prepared for: **SR 2048 (Gordon Rd) at SR 1328 (White Rd)**

Division 3 New Hanover County Wilmington

PLAN DATE: May 2022 REVIEWED BY: N.K. Vlanich

PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons

750 N. Greenfield Pkwy, Corner, NC 27528

SCALE: 1"=40'

REVISIONS: \_\_\_\_\_

INITI. DATE

DocuSigned by: **Nelasha R. Simmons** 5/17/2024


SIGNATURE DATE

SIG. INVENTORY NO. 03-089311



### 18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

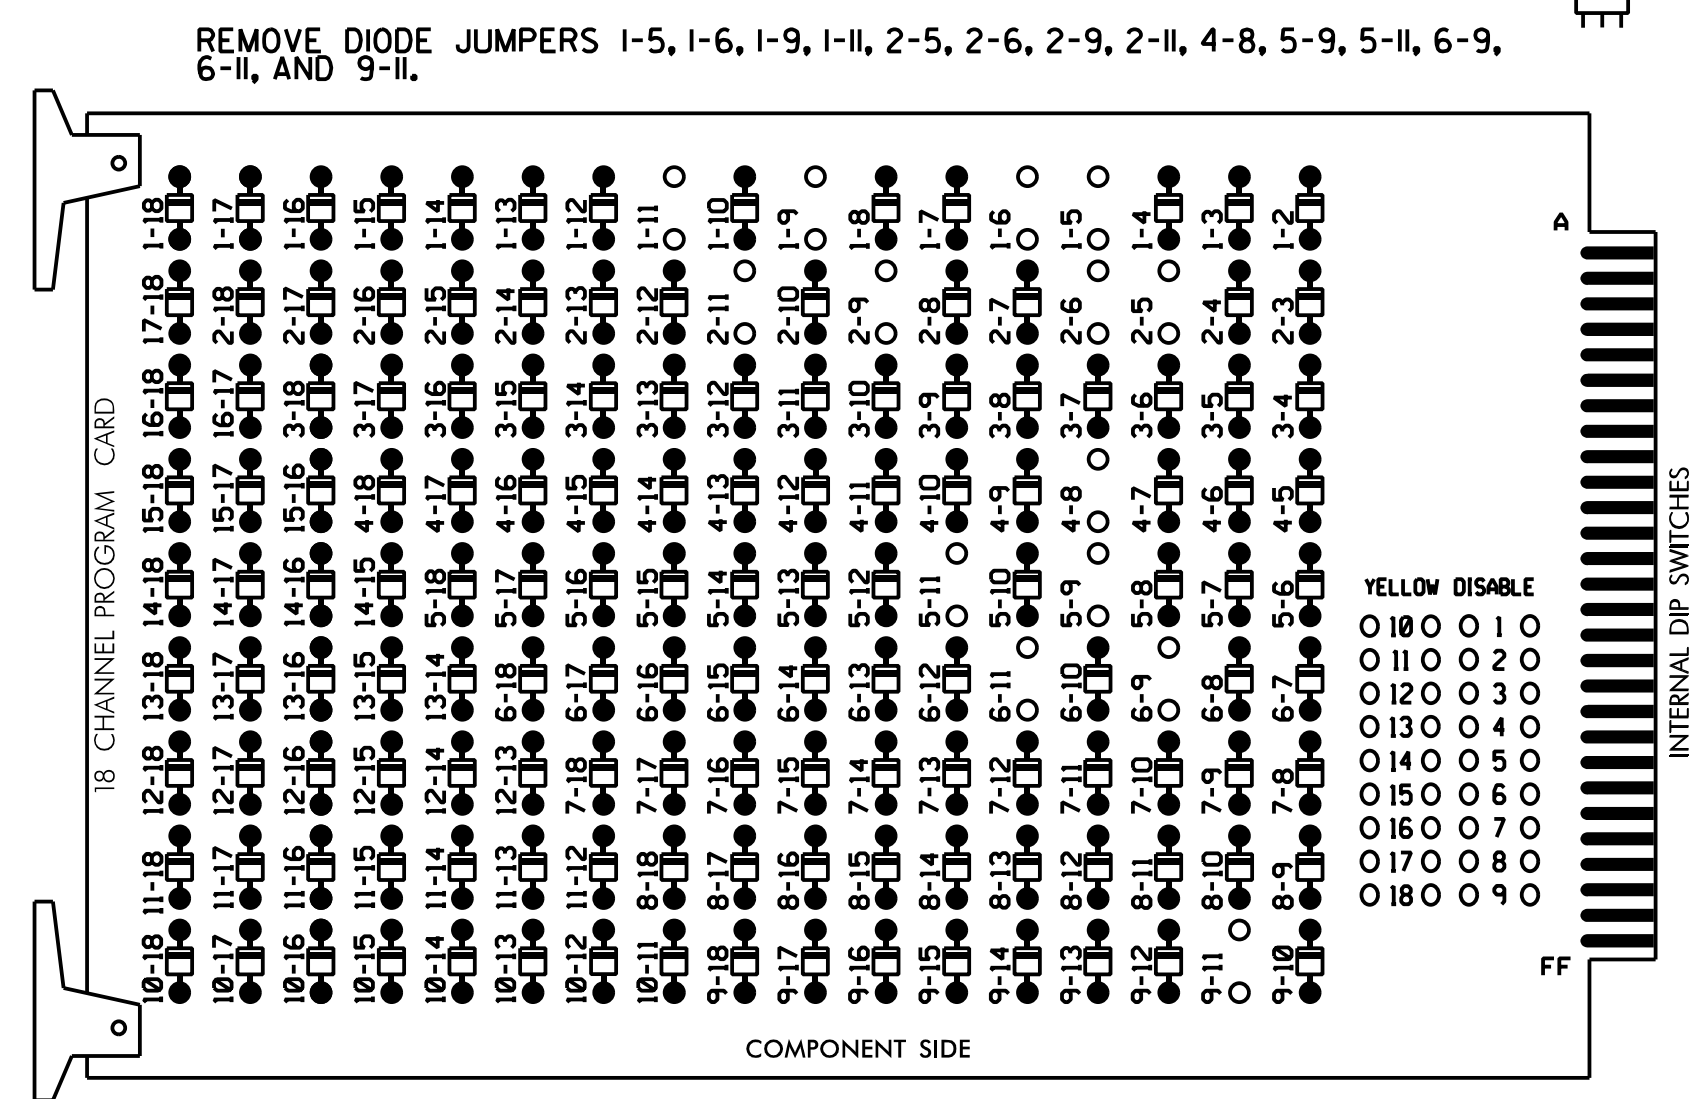

REMOVE JUMPERS AS SHOWN

NOTES:

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 are present on the monitor board.
- Ensure that Red Enable is active all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

■ = DENOTES POSITION OF SWITCH

### NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Startup In Green.
- Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlap.
- The cabinet and controller are part of the Wilmington Signal System.

### EQUIPMENT INFORMATION

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S1,S2,S5,S7,S8,S11,AUX S1,  
 AUX S4  
 PHASES USED.....1,2,4,5,6,8  
 OVERLAP "A".....1+2  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....5+6  
 OVERLAP "D".....NOT USED

### SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	21,22	NU	NU	41,42	NU	42	51	61,62	NU	NU	81,82	NU	11	NU	NU	51	NU
RED		128			101		*		134		107							
YELLOW	*	129			102				135		108							
GREEN		130			103				136		109							
RED ARROW													A121				A114	
YELLOW ARROW							132						A122				A115	
FLASHING YELLOW ARROW													A123				A116	
GREEN ARROW	127							133	133									
Hand icon																		
Person icon																		


NU = Not Used

\* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail this sheet.

### INPUT FILE POSITION LAYOUT

(front view)

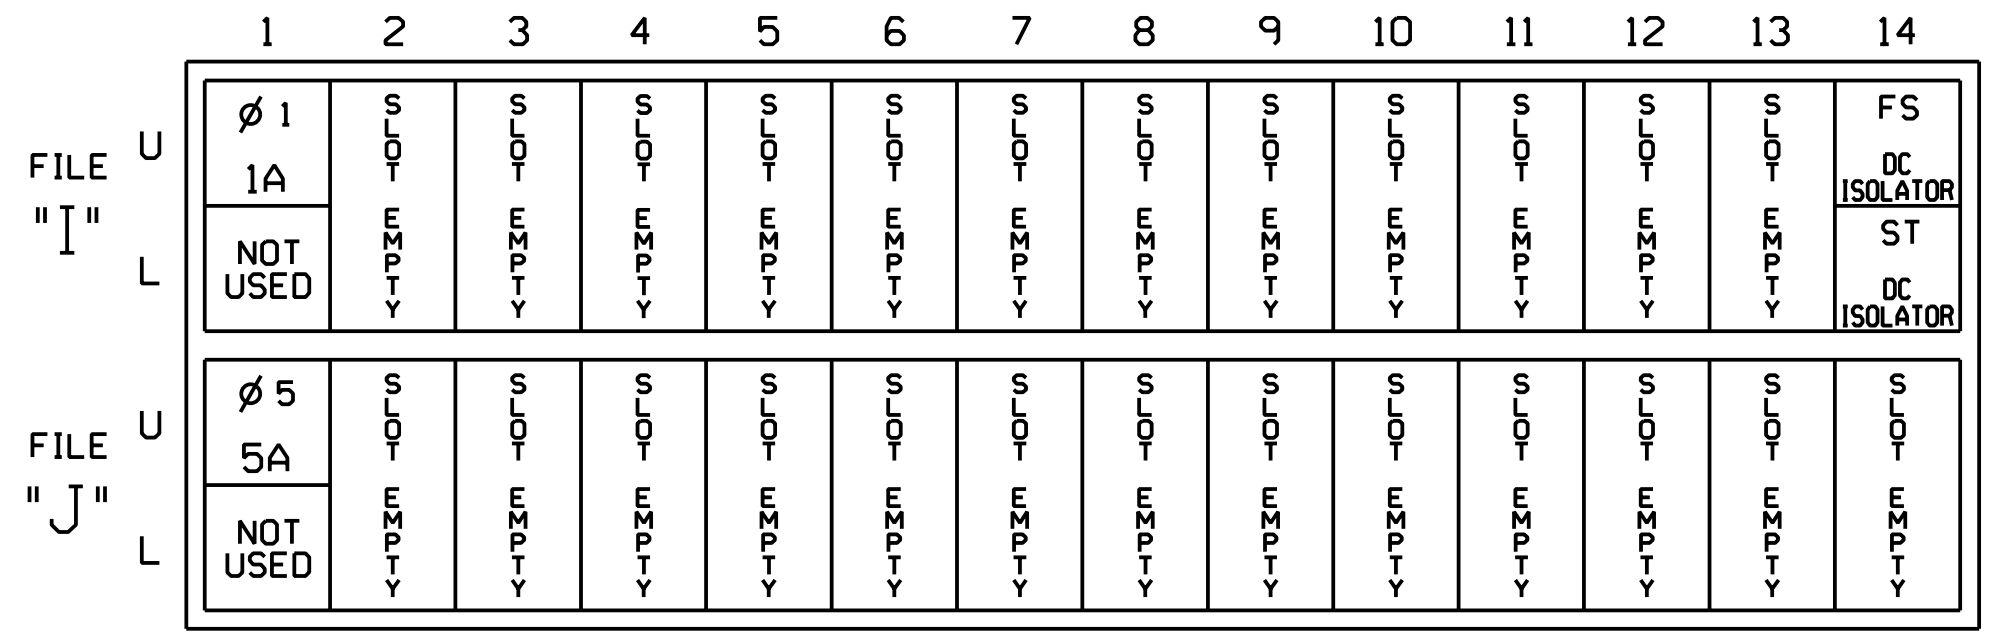

EX.: 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE  
 ST = STOP TIME

### INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10 ★	26	6	Y	Y			
	-	I1U	56	18 ★	51	1	Y	Y			3
5A	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	14U	47	9 ★	22	2	Y	Y			
	-	J1U	55	17 ★	55	5	Y	Y			3


\* See Input Page Assignment programming details on sheets 3 and 4.

#### INPUT FILE POSITION LEGEND: J2L

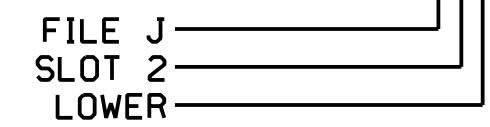

### FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

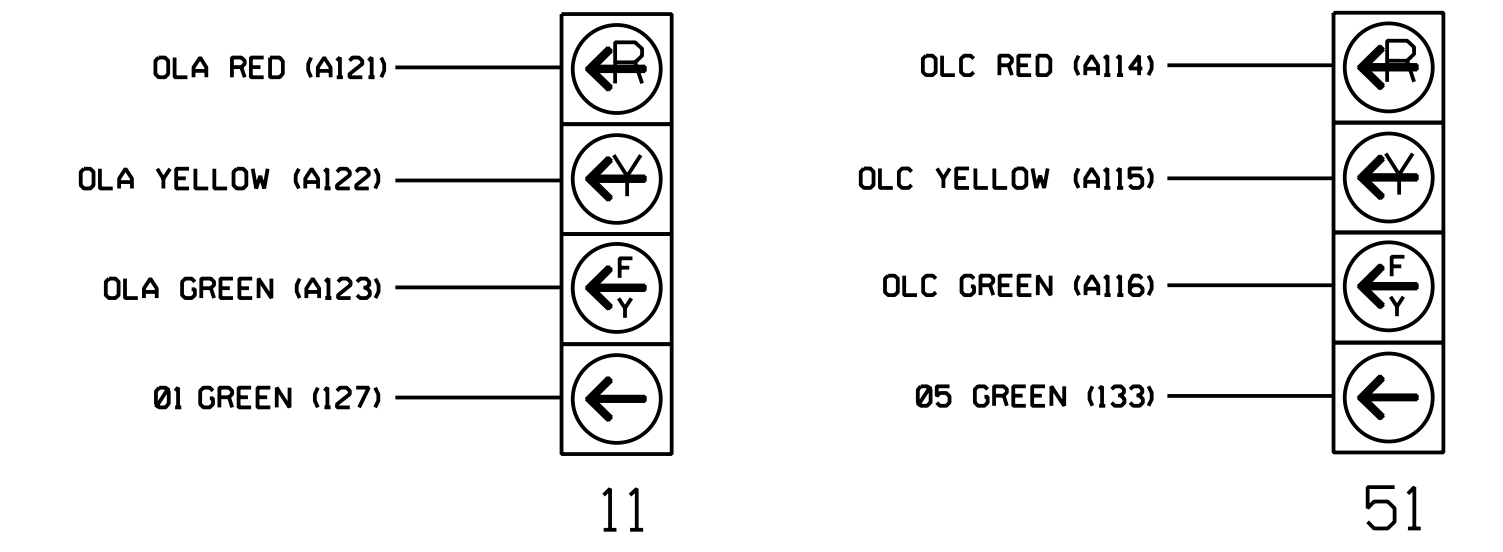


#### NOTE

The sequence display for signal heads 11 and 51 require special logic programming. See sheet 2 for programming instructions.

### LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

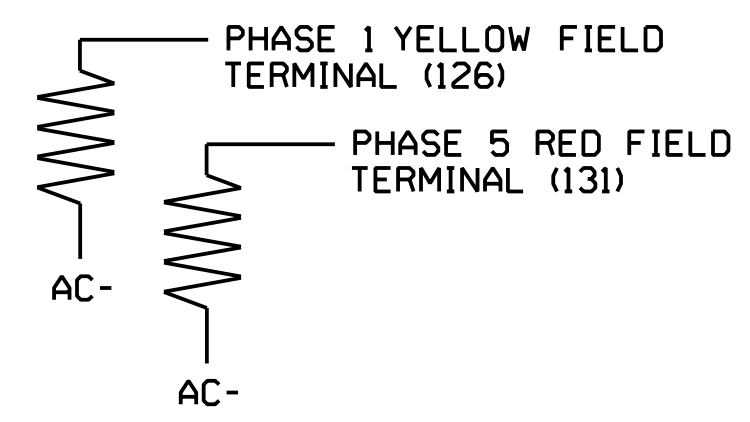

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T1  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

**HNTB**  
 HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

Signal Upgrade-  
 Electrical Detail - Sheet 1 of 5  
 (Construction Phase 1)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared in the Office of:  750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 1328 (White Rd)	SEAL NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 031464 MASHA R. SIMMONS
	Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	REVISIONS INIT. DATE DocuSigned by: Masha R. Simmons 5/17/2024 SIGNATURE DATE SIG. INVENTORY NO. 03-0893T1



### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5, AND 6.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON  
AND RED CLEAR ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #50 ON  
SET OUTPUT ASSIGNMENT #51 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 1 RED CLEAR WHEN TRANSITIONING FROM PHASE 1 TO PHASE 2 (HEAD 11).

LOGICAL I/O COMMAND #2 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #52 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #3 (+/-COMMAND#)  
IF YELLOW ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #51 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 1 (HEAD 11).

LOGICAL I/O COMMAND #4 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON  
AND RED CLEAR ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #42 ON  
SET OUTPUT ASSIGNMENT #43 OFF

PRESS '+'

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

LOGICAL I/O COMMAND #5 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #44 OFF

PRESS '+'

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

LOGICAL I/O COMMAND #6 (+/-COMMAND#)  
IF YELLOW ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #43 ON

PRESS '+'

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGICAL I/O PROCESSOR PROGRAMMING COMPLETE

OUTPUT REFERENCE SCHEDULE	
USE TO INTERPRET LOGIC PROCESSOR	
OUTPUT 42 =	Overlap C Red
OUTPUT 43 =	Overlap C Yellow
OUTPUT 44 =	Overlap C Green
OUTPUT 50 =	Overlap A Red
OUTPUT 51 =	Overlap A Yellow
OUTPUT 52 =	Overlap A Green

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

← NOTICE GREEN FLASH

PRESS '+' TWICE

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: : XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

← NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2 →

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+' TWICE

NOTICE PAGE 2 →

PAGE 2: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: : X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT.3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT.0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

OVERLAP PROGRAMMING COMPLETE

Signal Upgrade-  
Electrical Detail - Sheet 2 of 5  
(Construction Phase 1)

DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T1  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

	SR 2048 (Gordon Rd) at SR 1328 (White Rd)
	Division 3 New Hanover County Wilmington
PLAN DATE: August 2023 PREPARED BY: E.E. Tiller	REVIEWED BY: N.K. Vlanich REVIEWED BY: N.R. Simmons
REVISIONS INIT. DATE	DATE
1750 N. Greenfield Pkwy, Garner, NC 27529	5/17/2024 SIGNATURE SIG. INVENTORY NO. 03-0893T1

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION. 2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 3 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS). THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

PAGE: 2 C1 PIN:48 VEHICLE DETECTOR INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....26 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED  
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 1A - PHASE 6)

PAGE: 2 C1 PIN:48 NOT ENABLED INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....- PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 18

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....1 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '51' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 1A - PHASE 1)

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....51 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '1' FOR PHASES ASSIGNED

ENSURE DELAY IS '3'

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED :X SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.3 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T1 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade- Electrical Detail - Sheet 3 of 5 (Construction Phase 1)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with columns for ELECTIONAL AND PROGRAMMING DETAILS FOR, SR 2048 (Gordon Rd) at SR 1328 (White Rd), Division 3 New Hanover County Wilmington, PLAN DATE: August 2023, REVIEWED BY: N.K. Vlanich, PREPARED BY: E.E. Tiller, REVIEWED BY: N.R. Simmons, and a signature block for N. K. Vlanich dated 5/17/2024.



INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 3 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

PAGE: 2 C1 PIN:47 VEHICLE DETECTOR INPUT ASSIGNMENT #.....9 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....22 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH.66=FREE).. OFFSET#.. CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)..

ENTER A 'Y' FOR NOT ENABLED

DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 5A - PHASE 2)

PAGE: 2 C1 PIN:47 NOT ENABLED INPUT ASSIGNMENT #.....9 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64)..... PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH.66=FREE).. OFFSET#.. CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)..

PRESS '+' TO ADVANCE TO INPUT 17

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR INPUT ASSIGNMENT #.....17 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....5 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH.66=FREE).. OFFSET#.. CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)..

ENTER '55' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 5A - PHASE 5)

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR INPUT ASSIGNMENT #.....17 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N)..... VEHICLE DETECTOR (1-64).....55 PEDESTRIAN DETECTOR (1-16)..... ALTERNATE PED DETECTOR (1-16)..... PREEMPT (1-10)..... INVERTED PREEMPT (1-10)..... STOP TIME (Y/N)..... FLASH SENSE (Y/N)..... DOOR OPEN (Y/N)..... MANUAL CONTROL ENABLE (Y/N)..... MANUAL CONTROL ADVANCE (Y/N)..... SPECIAL FUNCTION ALARM (1-8)..... TOD HOUR SYNCHRONIZATION (0-23)..... FORCE OFF RING (1-4)..... HOLD PHASES (1-16)..... PLAN (65=FLSH.66=FREE).. OFFSET#.. CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)..

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE: LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '5' FOR PHASES ASSIGNED

ENSURE DELAY IS '3'

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : X SWITCH/DUPLICATE: LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....3 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T1 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade- Electrical Detail - Sheet 4 of 5 (Construction Phase 1)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with project details: SR 2048 (Gordon Rd) at SR 1328 (White Rd), Division 3 New Hanover County Wilmington, PLAN DATE: August 2023, REVIEWED BY: N.K. Vlanich, PREPARED BY: E.E. Tiller, REVIEWED BY: N.R. Simmons, and a signature block for N. K. Vlanich dated 5/17/2024.

## ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

### ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

**OVERLAPS PAGE 2:** Modifies overlap parent phases for heads 11 and 51 to run protected turns only.

**INPUTS PAGE 2:** Disables phase 6 call on loop 1A and reduces delay time for phase 1 call on loop 1A to 3 seconds.

Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 3 seconds.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T1  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:


Signal Upgrade-  
 Electrical Detail - Sheet 5 of 5  
 (Construction Phase 1)

**DOCUMENT NOT CONSIDERED FINAL  
 UNLESS ALL SIGNATURES COMPLETED**

**HNTB** HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

ELECTRICAL AND PROGRAMMING DETAILS FOR:


Prepared in the Office of:

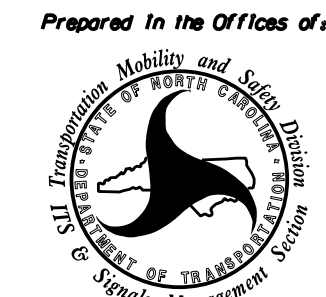

750 N. Greenfield Pkwy, Garner, NC 27529

SR 2048 (Gordon Rd) at SR 1328 (White Rd)	
Division 3 New Hanover County Wilmington	
PLAN DATE: August 2023	REVIEWED BY: N.K. Vlanich
PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons
REVISIONS	INIT. DATE

SEAL




NORTH CAROLINA  
 PROFESSIONAL  
 SEAL  
 031464  
 ENGINEER  
 MELISHA R. SIMMONS


DocuSigned by:  
 Melisha R. Simmons 5/17/2024  
 SIGNATURE DATE  
 SIG. INVENTORY NO. 03-0893T1




**DEFAULT PHASING DIAGRAM**

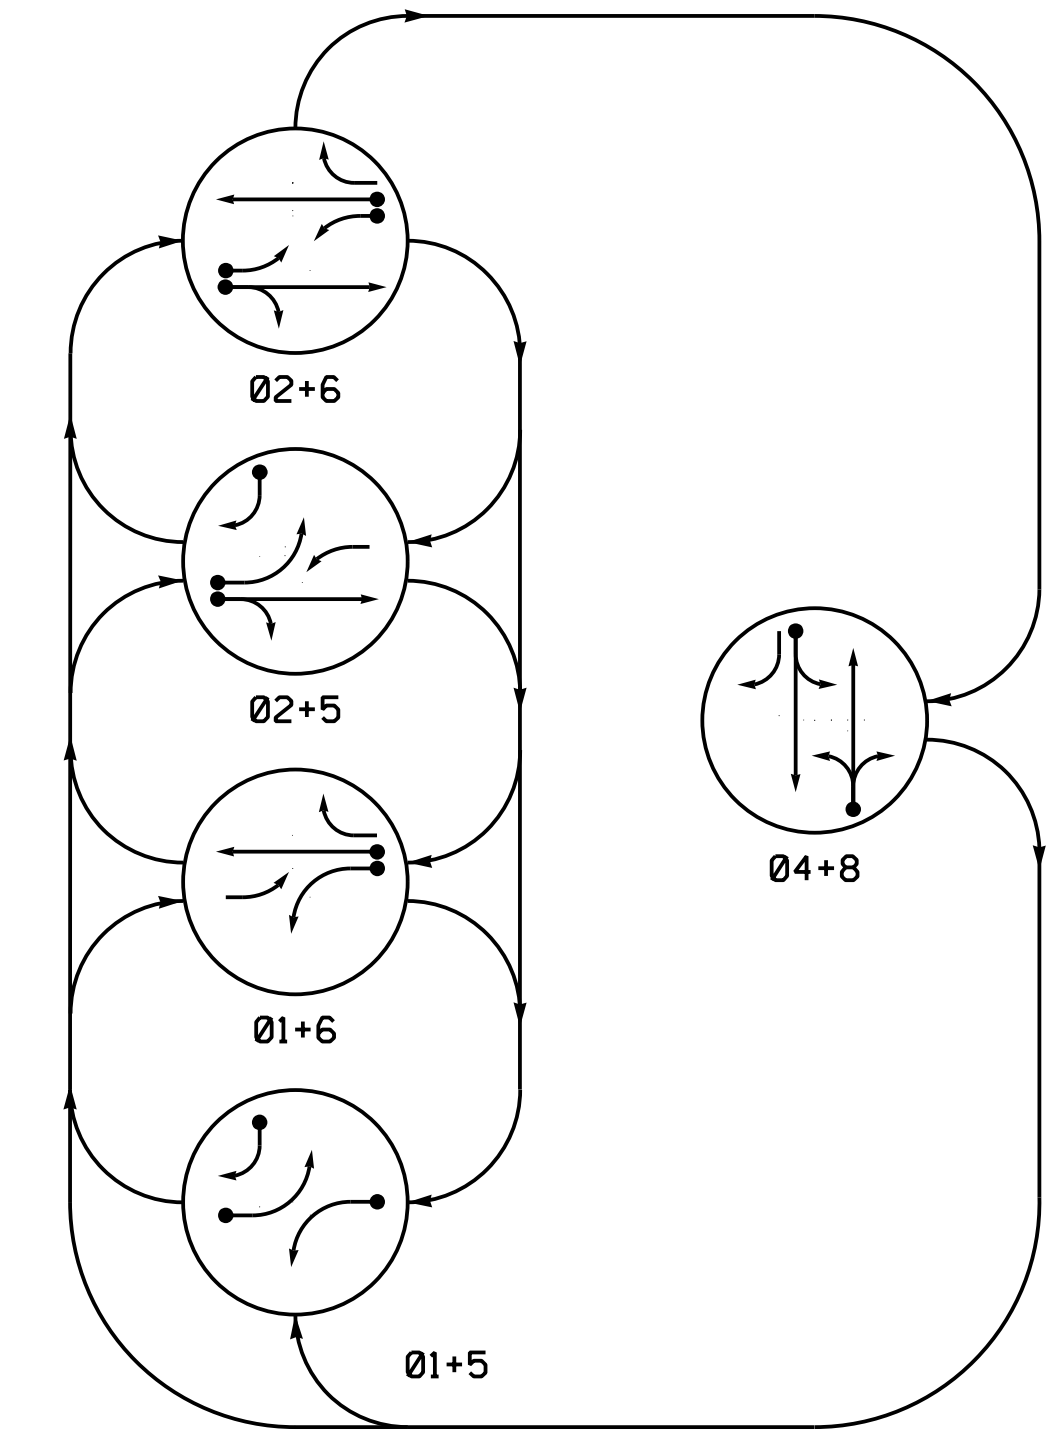

**ALTERNATE PHASING DIAGRAM**

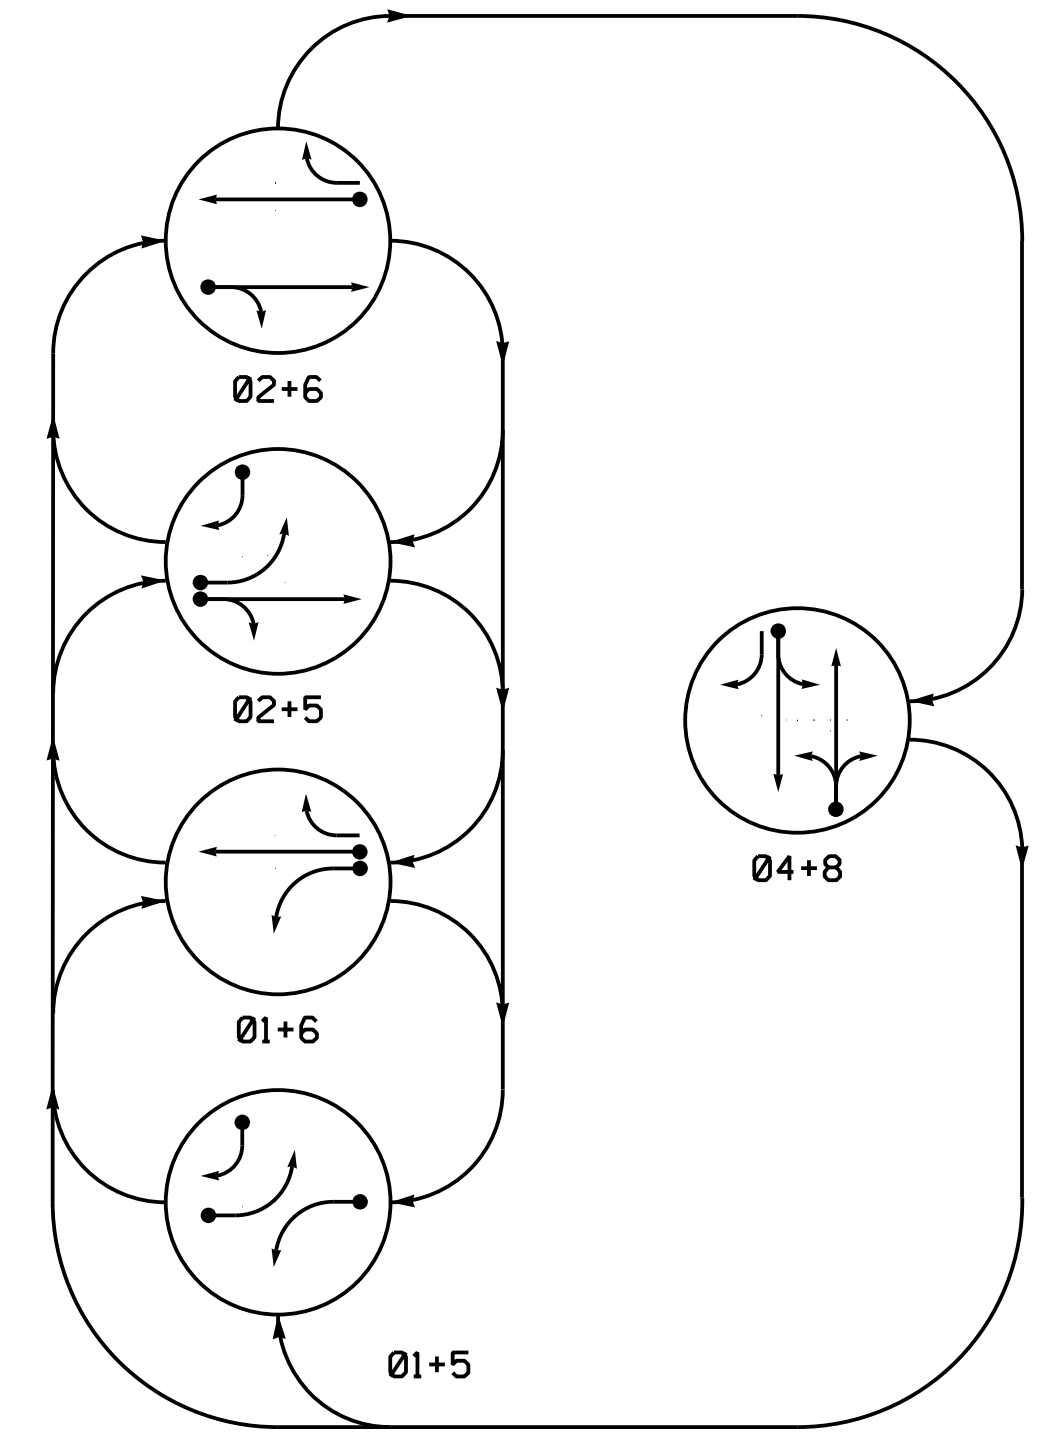

**SIGNAL FACE I.D.**

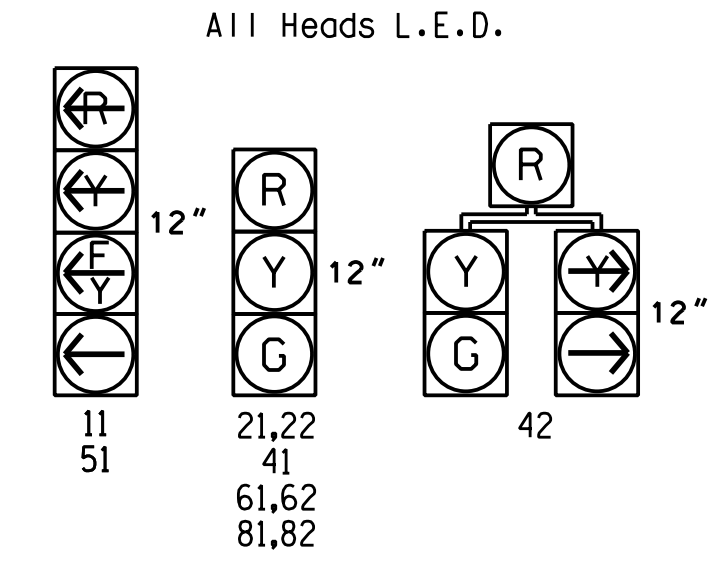

**OASIS 2070 LOOP & DETECTOR INSTALLATION CHART**




ZONE	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	DETECTOR PROGRAMMING				SYSTEM LOOP	NEW CARD	
					PHASE	CALLING	EXTENSION	FULL TIME DELAY			STRETCH TIME
1A	6x40	0	*	*	1	Y	Y	-	15**	-	-
4A	6x40	0	*	*	6#	Y	Y	-	3	-	-
5A	6x40	0	*	*	4	Y	Y	-	3	-	-
5B	6x40	0	*	*	5	Y	Y	-	15**	-	-
8A	6x40	0	*	*	2#	Y	Y	-	3	-	-
					5	Y	Y	-	15	-	-
					8	Y	Y	-	3	-	-

\* Multizone Microwave Detection  
 \*\* Reduce delay to 3 seconds during alternate phasing.  
 # Disable phase call for loop(s) during alternate phasing.

**5 Phase Fully Actuated Wilmington Signal System**

**NOTES**

- Refer to "Roadway Standard Drawings NCDOT" dated January 2024 and "Standard Specifications for Roads and Structures" dated January 2024.
- Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
- Phase 1 and/or phase 5 may be lagged.
- Reposition existing signal heads numbered 11, 21, 22, 41, 42, 51, 61, and 62 and existing sign (A).
- Set all detector units to presence mode.
- The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
- This intersection uses multi-zone microwave detection. Install detectors according to the manufacturer's instructions to achieve the desired detection.
- Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
- Signal system data: Controller Asset #0893.

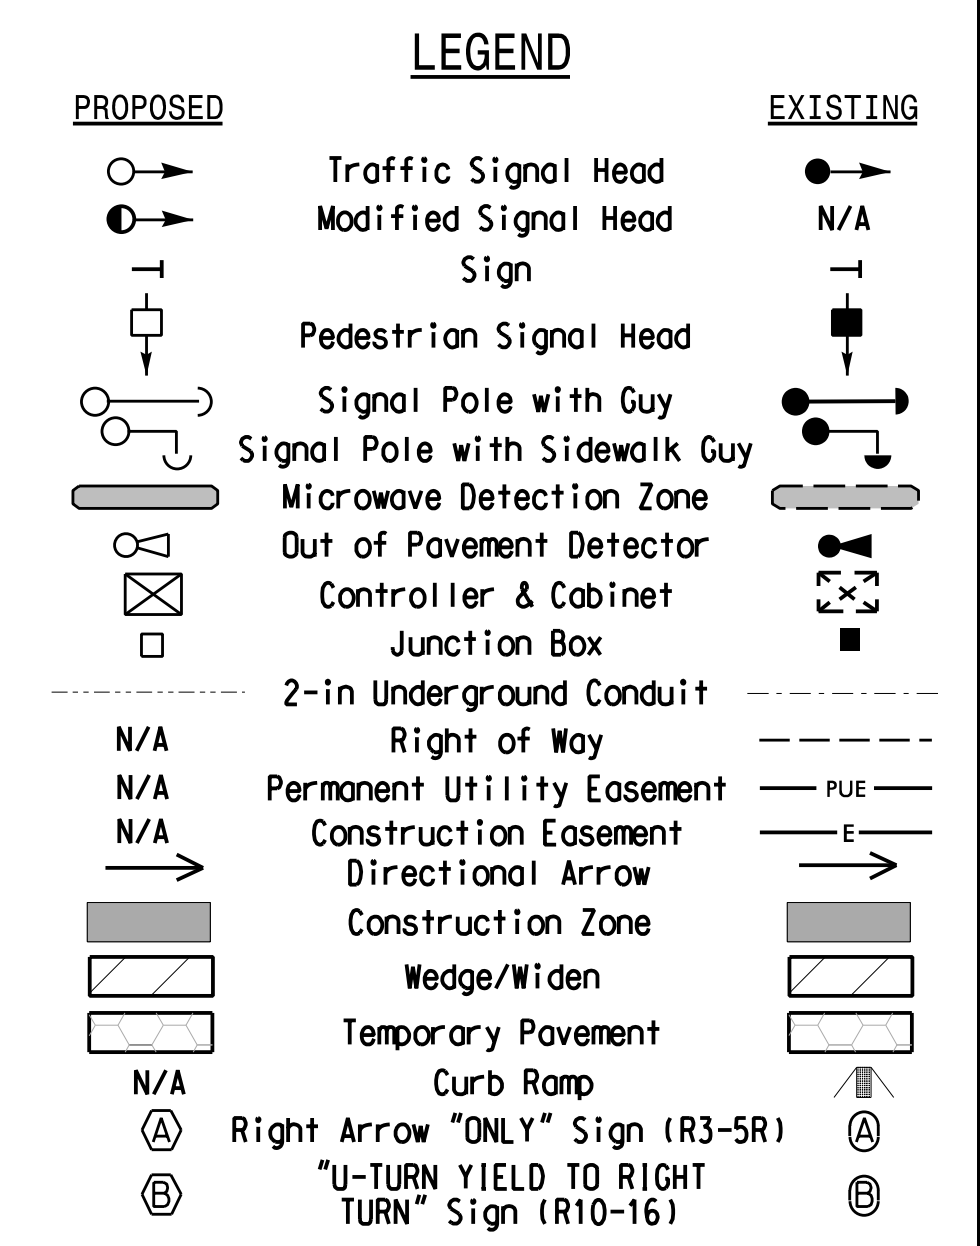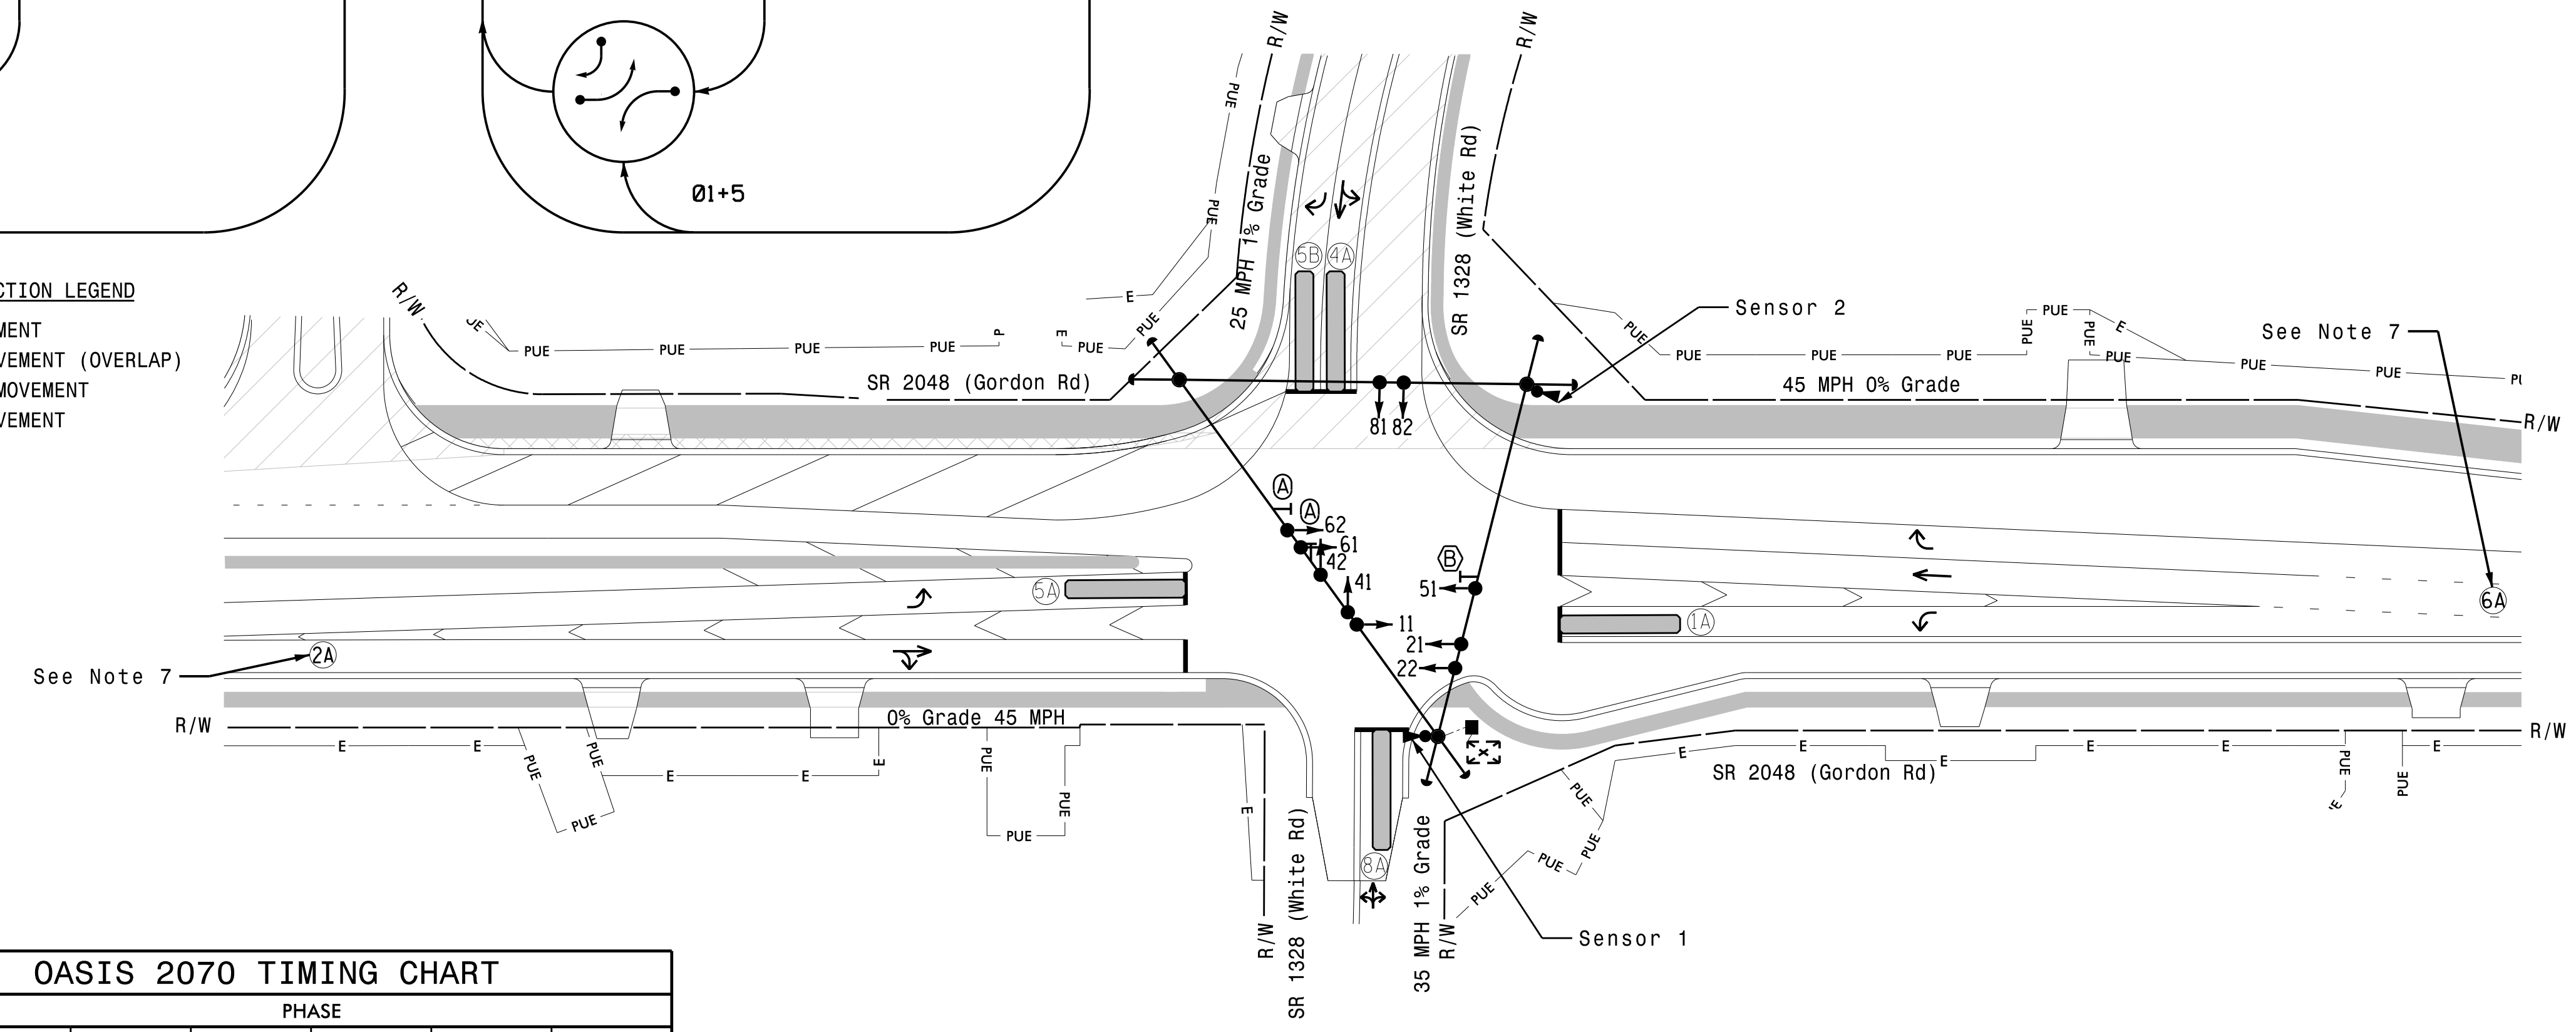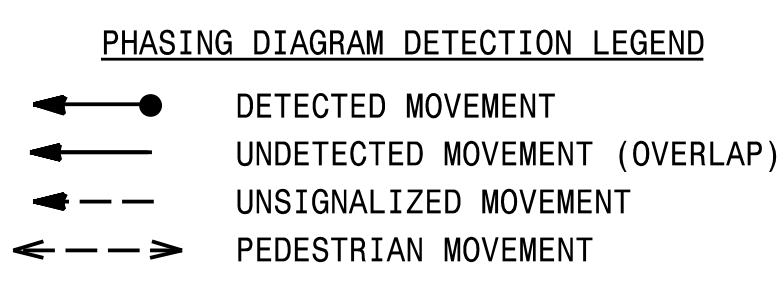

**OASIS 2070 TIMING CHART**

FEATURE	PHASE					
	1	2	4	5	6	8
Min Green 1 *	5	12	5	5	12	5
Extension 1 *	2.0	2.0	2.0	2.0	2.0	2.0
Max Green 1 *	20	90	20	20	90	20
Yellow Clearance	3.0	4.5	3.1	3.0	4.5	3.8
Red Clearance	2.6	1.5	3.0	2.4	1.5	1.6
Red Revert	2.0	2.0	2.0	2.0	2.0	2.0
Walk 1 *	-	-	-	-	-	-
Don't Walk 1	-	-	-	-	-	-
Seconds Per Actuation *	-	-	-	-	-	-
Max Variable Initial *	-	-	-	-	-	-
Time Before Reduction *	-	-	-	-	-	-
Time To Reduce *	-	-	-	-	-	-
Minimum Gap	-	-	-	-	-	-
Recall Mode	-	MIN RECALL	-	-	MIN RECALL	-
Vehicle Call Memory	-	YELLOW	-	-	YELLOW	-
Dual Entry	-	-	ON	-	-	ON
Simultaneous Gap	ON	ON	ON	ON	ON	ON

\* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

**RADAR DETECTION SYSTEM**

FUNCTION	Sensor 1	Sensor 2
Channel	1	1
Phase	2	6
Direction of Travel	EB	WB
Detection Zone (ft)	100-600	100-600
Enable Speed	Y	Y
Speed Range (mph)	35-100	35-100
Enable Estimated Time of Arrival	Y	Y
Estimated Time of Arrival (sec)	2.5-6.5	2.5-6.5

**DEFAULT PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE					
	01+5	01+6	02+5	02+6	04+8	FLASH
11	-	-	-	-	-	-
21,22	R	R	G	G	R	Y
41	R	R	R	R	G	R
42	R	R	R	R	G	R
51	-	-	-	-	-	-
61,62	R	G	R	G	R	Y
81,82	R	R	R	R	G	R

**ALTERNATE PHASING TABLE OF OPERATION**

SIGNAL FACE	PHASE					
	01+5	01+6	02+5	02+6	04+8	FLASH
11	-	-	-	-	-	-
21,22	R	R	G	G	R	Y
41	R	R	R	R	G	R
42	R	R	R	R	G	R
51	-	-	-	-	-	-
61,62	R	G	R	G	R	Y
81,82	R	R	R	R	G	R

Signal Upgrade-  
 Temporary Design 2  
 (Construction Phase 2A)

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

**HNTB** HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

Prepared for: **SR 2048 (Gordon Rd) at SR 1328 (White Rd)**

Division 3 New Hanover County Wilmington

PLAN DATE: May 2022 REVIEWED BY: N.K. Vlanich

PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons

SCALE: 1"=40'

REVISIONS: \_\_\_\_\_

INIT. DATE

Signature: *Natasha R. Simmons* 5/17/2024


SIGNATURE DATE

SIG. INVENTORY NO. 03-0893T2



### 18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

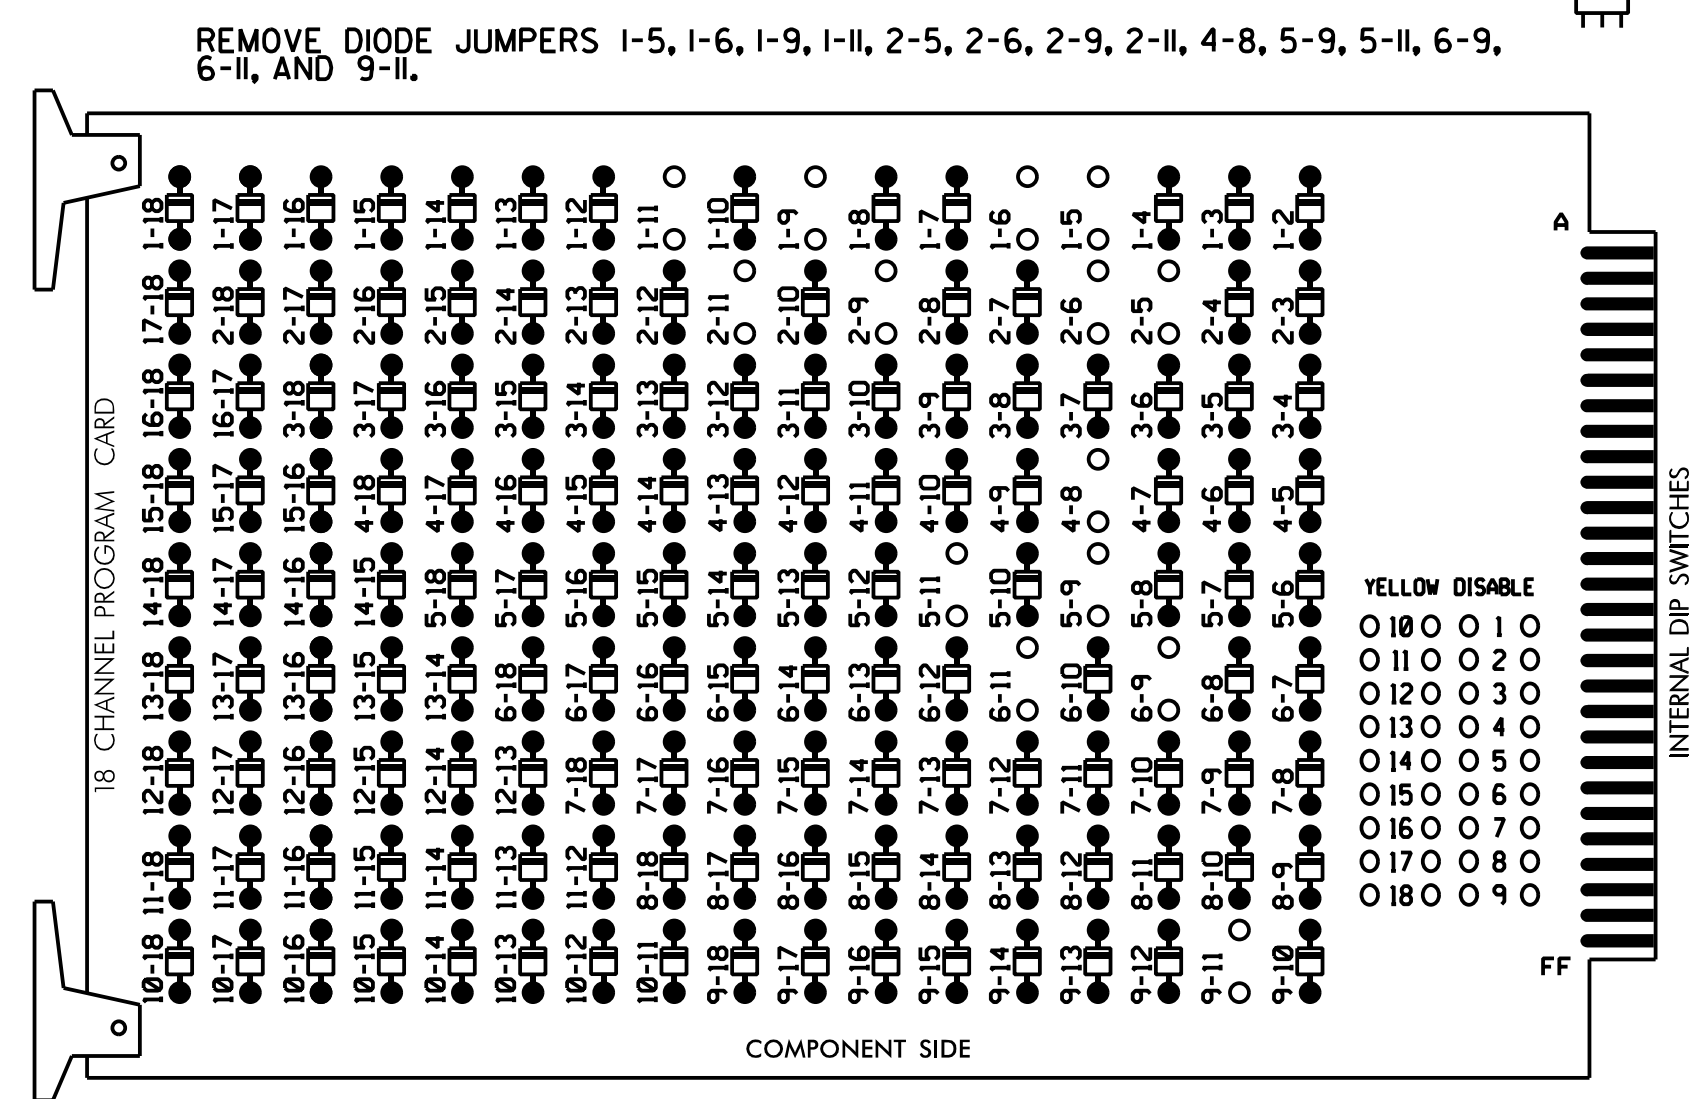

- NOTES:
- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
  - Ensure jumpers SEL2-SEL5 are present on the monitor board.
  - Ensure that Red Enable is active all times during normal operation.
  - Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

### NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Startup In Green.
- Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlap.
- The cabinet and controller are part of the Wilmington Signal System.

### EQUIPMENT INFORMATION

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S1,S2,S5,S7,S8,S11,AUX S1,  
 AUX S4  
 PHASES USED.....1,2,4,5,6,8  
 OVERLAP "A".....1+2  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....5+6  
 OVERLAP "D".....NOT USED


### SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	21,22	NU	NU	41,42	NU	42	51	61,62	NU	NU	81,82	NU	11	NU	NU	51	NU
RED		128			101		*		134		107							
YELLOW	*	129			102				135		108							
GREEN		130			103				136		109							
RED ARROW													A121				A114	
YELLOW ARROW							132						A122				A115	
FLASHING YELLOW ARROW													A123				A116	
GREEN ARROW	127						133	133										
Hand icon																		
Person icon																		

NU = Not Used  
 \* Denotes install load resistor. See load resistor installation detail this sheet.  
 ★ See pictorial of head wiring in detail this sheet.

### INPUT FILE POSITION LAYOUT

(front view)

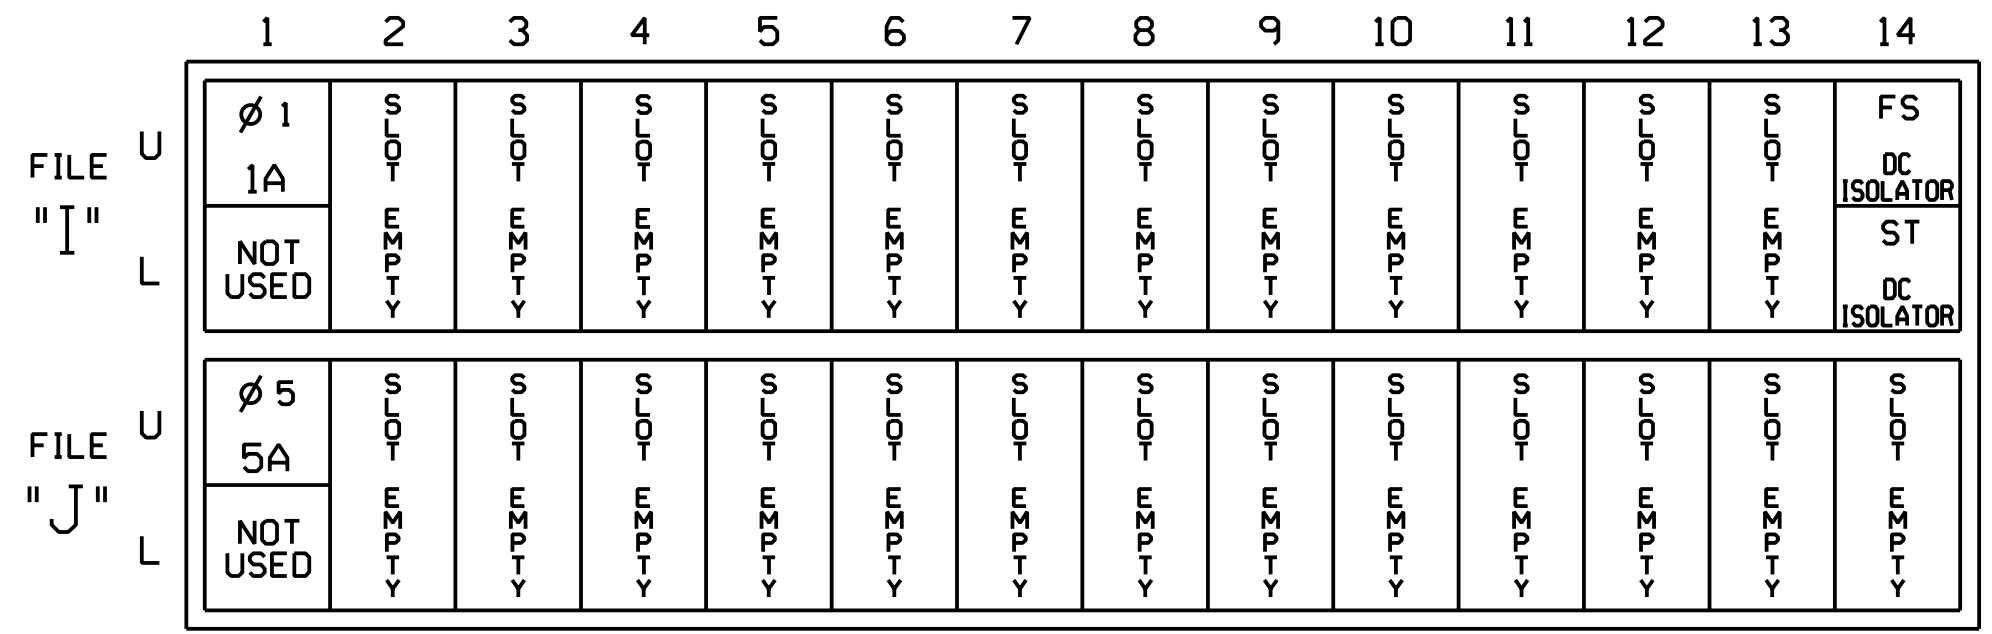


### INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10 ★	26	6	Y	Y			3
	-	I1U	56	18 ★	51	1	Y	Y			3
5A	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	14U	47	9 ★	22	2	Y	Y			3
	-	J1U	55	17 ★	55	5	Y	Y			3


\* See Input Page Assignment programming details on sheets 3 and 4.

### INPUT FILE POSITION LEGEND: J2L

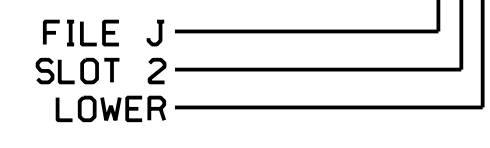

### FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

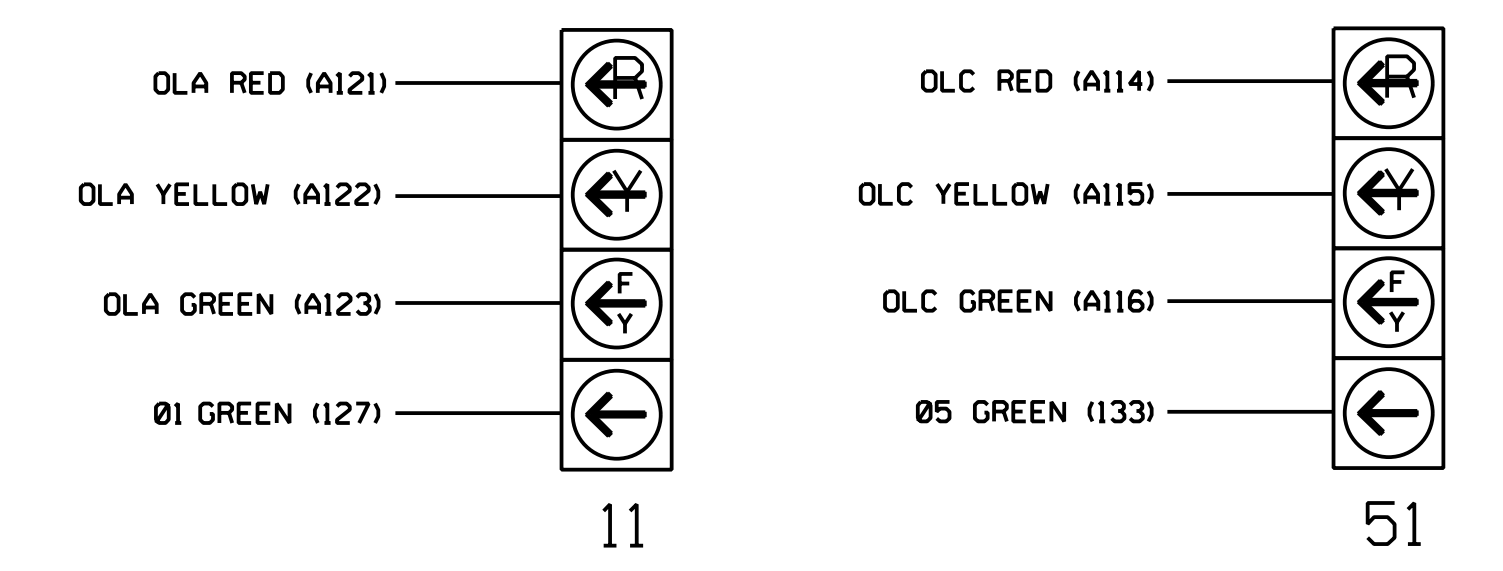


### NOTE

The sequence display for signal heads 11 and 51 require special logic programming. See sheet 2 for programming instructions.

### LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

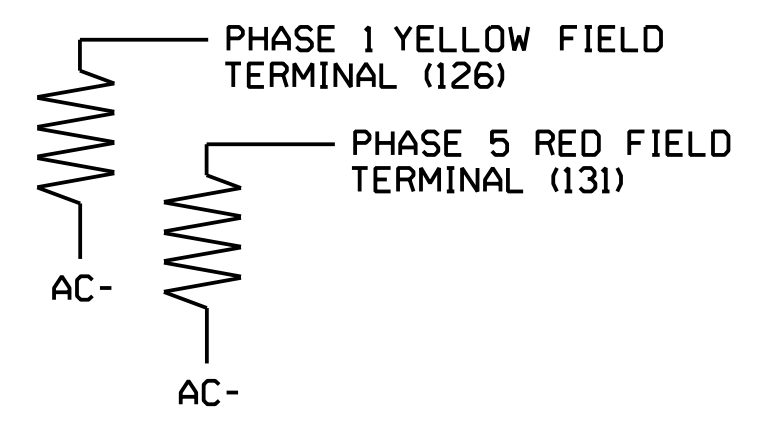

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T2  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

**HNTB**  
 HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

Signal Upgrade-  
 Electrical Detail - Sheet 1 of 5  
 (Construction Phase 2A)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

ELECTRICAL AND PROGRAMMING DETAILS FOR: Prepared in the Offices of: 750 N. Greenfield Pkwy, Garner, NC 27529	SR 2048 (Gordon Rd) at SR 1328 (White Rd)	SEAL NORTH CAROLINA PROFESSIONAL ENGINEER SEAL 031464 NAYASHA R. SIMMONS
	Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	REVISIONS INIT. DATE _____ _____



## LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5, AND 6.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

```

LOGICAL I/O COMMAND #1 (+/-COMMAND#)
IF ACTIVE PHASE #1 IS ON
AND RED CLEAR ON PHASE #1 IS ON

          ↓
          SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #50 ON
SET OUTPUT ASSIGNMENT #51 OFF

          PRESS '+'
    
```

NOTE: LOGIC FOR Phase 2 RED CLEAR WHEN TRANSITIONING FROM Phase 2 TO PHASE 2 (HEAD 11).

```

LOGICAL I/O COMMAND #2 (+/-COMMAND#)
IF ACTIVE PHASE #1 IS ON

          ↓
          SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #52 OFF

          PRESS '+'
    
```

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING Phase 2 (HEAD 11).

```

LOGICAL I/O COMMAND #3 (+/-COMMAND#)
IF YELLOW ON PHASE #1 IS ON

          ↓
          SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #51 ON

          PRESS '+'
    
```

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM Phase 2 (HEAD 11).

```

LOGICAL I/O COMMAND #4 (+/-COMMAND#)
IF ACTIVE PHASE #5 IS ON
AND RED CLEAR ON PHASE #5 IS ON

          ↓
          SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #42 ON
SET OUTPUT ASSIGNMENT #43 OFF

          PRESS '+'
    
```

NOTE: LOGIC FOR PHASE 5 RED CLEAR WHEN TRANSITIONING FROM PHASE 5 TO PHASE 6 (HEAD 51).

```

LOGICAL I/O COMMAND #5 (+/-COMMAND#)
IF ACTIVE PHASE #5 IS ON

          ↓
          SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #44 OFF

          PRESS '+'
    
```

NOTE: LOGIC FOR SWITCHING FLASHING YELLOW ARROW "OFF" DURING PHASE 5 (HEAD 51).

```

LOGICAL I/O COMMAND #6 (+/-COMMAND#)
IF YELLOW ON PHASE #5 IS ON

          ↓
          SCROLL DOWN

THEN:
SET OUTPUT ASSIGNMENT #43 ON

          PRESS '+'
    
```

NOTE: LOGIC FOR YELLOW ARROW CLEARANCE FROM PHASE 5 (HEAD 51).

LOGICAL I/O PROCESSOR PROGRAMMING COMPLETE

<b>OUTPUT REFERENCE SCHEDULE</b>
USE TO INTERPRET LOGIC PROCESSOR
OUTPUT 42 = Overlap C Red
OUTPUT 43 = Overlap C Yellow
OUTPUT 44 = Overlap C Green
OUTPUT 50 = Overlap A Red
OUTPUT 51 = Overlap A Yellow
OUTPUT 52 = Overlap A Green

## OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS).

```

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS
PHASE: :12345678910111213141516
VEH OVL PARENTS: :XX
VEH OVL NOT VEH: :
VEH OVL NOT PED: :
VEH OVL GRN EXT: :
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0.0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

NOTICE GREEN FLASH

PRESS '+' TWICE

```

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS
PHASE: :12345678910111213141516
VEH OVL PARENTS: : XX
VEH OVL NOT VEH: :
VEH OVL NOT PED: :
VEH OVL GRN EXT: :
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW X GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0.0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

NOTICE GREEN FLASH

OVERLAP PROGRAMMING COMPLETE

## OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS), THEN '1' (VEHICLE OVERLAP SETTINGS). PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE PAGE 2

```

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS
PHASE: :12345678910111213141516
VEH OVL PARENTS: :X
VEH OVL NOT VEH: :
VEH OVL NOT PED: :
VEH OVL GRN EXT: :
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW - GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0.0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

PRESS '+' TWICE

NOTICE PAGE 2

```

PAGE 2: VEHICLE OVERLAP 'C' SETTINGS
PHASE: :12345678910111213141516
VEH OVL PARENTS: : X
VEH OVL NOT VEH: :
VEH OVL NOT PED: :
VEH OVL GRN EXT: :
STARTUP COLOR: - RED - YELLOW - GREEN
FLASH COLORS: - RED - YELLOW - GREEN
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)
FLASH YELLOW IN CONTROLLER FLASH?...Y
GREEN EXTENSION (0-255 SEC)...0.0
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0
OUTPUT AS PHASE # (0=NONE, 1-16)...0
    
```

OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T2  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade-  
Electrical Detail - Sheet 2 of 5  
(Construction Phase 2A)

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

ELECTRICAL AND PROGRAMMING DETAILS FOR:	SR 2048 (Gordon Rd) at SR 1328 (White Rd)	SEAL NORTH CAROLINA PROFESSIONAL ENGINEER NATASHA R. SIMMONS
	Division 3 New Hanover County Wilmington	SEAL 031464
Prepared in the Office of: 	PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons	DATE: 5/17/2024
1750 N. Greenfield Pkwy, Garner, NC 27529	REVISIONS:	DATE:

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION. 2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 3 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS). THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

PAGE: 2 C1 PIN:48 VEHICLE DETECTOR INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....26 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED

DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 1A - PHASE 6)

PAGE: 2 C1 PIN:48 NOT ENABLED INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....- PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 18

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....1 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '51' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 1A - Phase 2)

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....51 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '1' FOR PHASES ASSIGNED

ENSURE DELAY IS '3'

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED :X SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.3 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T2 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade- Electrical Detail - Sheet 3 of 5 (Construction Phase 2A)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with columns for ELECTIONAL AND PROGRAMMING DETAILS FOR, SR 2048 (Gordon Rd) at SR 1328 (White Rd), Division 3 New Hanover County Wilmington, PLAN DATE: August 2023, REVIEWED BY: N.K. Vianich, PREPARED BY: E.E. Tiller, REVIEWED BY: N.R. Simmons, and a signature block for N. K. Vianich dated 5/17/2024.



### INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 5A

(program controller as shown below)

NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION.

2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #9 (DETECTOR 22) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 2 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 55 TO INPUT #17 SO THAT THE DELAY ON LOOP 5A CAN BE REDUCED FROM 15 SECONDS TO 3 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS), THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 9 IS REACHED.

```

PAGE: 2 C1 PIN:47 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....22
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER A 'Y' FOR NOT ENABLED

DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 5A - PHASE 2)

```

PAGE: 2 C1 PIN:47 NOT ENABLED
INPUT ASSIGNMENT #.....9
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....Y
VEHICLE DETECTOR (1-64).....
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PRESS '+' TO ADVANCE TO INPUT 17

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....5
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

ENTER '55' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 5A - PHASE 5)

```

PAGE: 2 C1 PIN:55 VEHICLE DETECTOR
INPUT ASSIGNMENT #.....17
DEBOUNCE TIME (0-25.5 SEC).....0.5
DELAY TIME (0-25.5 SEC).....0.0
HOLD-OVER TIME (0-25.5 SEC).....0.0
ASSIGNMENT SELECTION:
NOT ENABLED (Y/N).....
VEHICLE DETECTOR (1-64).....55
PEDESTRIAN DETECTOR (1-16).....
ALTERNATE PED DETECTOR (1-16).....
PREEMPT (1-10).....
INVERTED PREEMPT (1-10).....
STOP TIME (Y/N).....
FLASH SENSE (Y/N).....
DOOR OPEN (Y/N).....
MANUAL CONTROL ENABLE (Y/N).....
MANUAL CONTROL ADVANCE (Y/N).....
SPECIAL FUNCTION ALARM (1-8).....
TOD HOUR SYNCHRONIZATION (0-23).....
FORCE OFF RING (1-4).....
HOLD PHASES (1-16).....
PLAN (65=FLSH,66=FREE).. OFFSET#..
CHANGE PHASE SEQUENCE PAGE (1-12)....
CHANGE PHASE TIMING PAGE (1-4).....
CHANGE PHASE CONTROL PAGE (1-4).....
CHANGE OVERLAP CONTROL PAGE (1-4)....
CHANGE INPUT PAGE (1-4).....
CHANGE OUTPUT PAGE (1-4).....
OVERRIDE PHASE CONTROL FUNCTION (Y)..

```

PROGRAMMING COMPLETE

### SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 5A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS), THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #55.

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....N
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED :
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....0
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '5' FOR PHASES ASSIGNED

ENSURE DELAY IS '3'

```

VEHICLE DETECTOR #55 SETTINGS (+,-,1-64)
SETTING: (Y/N)
ENABLE DETECTOR.....Y
ENABLE LOGGING.....N
ENABLE DIAGNOSTICS.....N
SPEED TRAP.....N
CALL DETECTOR.....Y
EXTENSION DETECTOR.....Y
MODE 2 STOP BAR.....N
SWITCHING DETECTOR.....N
DUPLICATING DETECTOR.....N
ENABLE FULL TIME DELAY.....N
IF FAILED, SET MIN RECALL?.....N
IF FAILED, SET MAX1 RECALL?.....N
IF FAILED, SET MAX2 RECALL?.....N
PHASE# :12345678910111213141516
PHASES ASSIGNED : X
SWITCH/DUPLICATE:
LOOP SIZE (0-255 FT).....6
SPEED TRAP DISTANCE (0-255 FT).....0
STOP BAR TIME (0-255 SEC).....0
STRETCH (0-25.5 SEC).....0.0
DELAY (0-255 SEC).....3
MAX CALLS/MIN (0-255).....255
MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0
MAX OCCUPANCY (0-100%).....100
EXTENSION DISABLE TIME (0-255 SEC).....0
QUEUE MAX OCCUPANCY TIME (0-255).....0
QUEUE GAP RESET TIME (0-25.5).....0.0
PREEMPTION INDEX FOR QUEUE (0-10).....0

```





DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T2  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade-  
Electrical Detail - Sheet 4 of 5  
(Construction Phase 2A)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

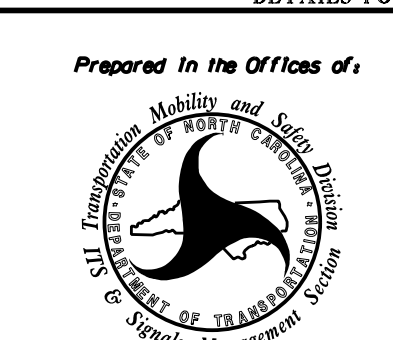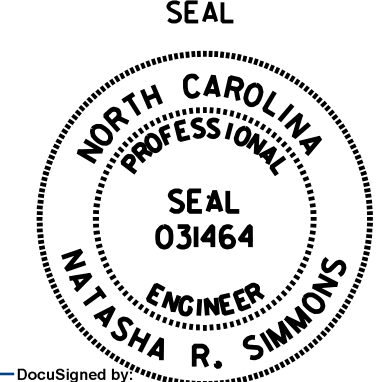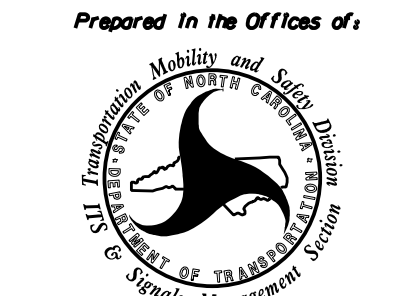	SR 2048 (Gordon Rd) at SR 1328 (White Rd)		
	Division 3 New Hanover County Wilmington PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons		
Prepared in the Office of: 		REVISIONS INIT. DATE	DocuSigned by:  5/17/2024 DATE SIG. INVENTORY NO. 03-0893T2

## ALTERNATE PHASING ACTIVATION DETAIL

TO RUN ALT. PHASING DURING COORDINATION - SELECT ALL PAGE CHANGES (AS SHOWN BELOW) WITHIN COORDINATION PLAN PROGRAMMING.

TO RUN ALT. PHASING DURING FREE RUN - PROGRAM PAGE CHANGES (SHOWN BELOW) IN SEPARATE TIME OF DAY EVENTS. IF PAGE 1 IS USED, NO EVENT PROGRAMMING IS NECESSARY FOR THAT PARTICULAR PAGE.

<u>PHASING</u>	<u>INPUTS PAGE</u>	<u>OVERLAPS PAGE</u>
ACTIVE PAGES REQUIRED TO RUN <u>DEFAULT PHASING</u>	1	1
ACTIVE PAGES REQUIRED TO RUN <u>ALTERNATE PHASING</u>	2	2

NOTE: PAGES NOT SHOWN (i.e. sequence, phase control, etc.) SHOULD REMAIN AS '1', OR AS DEFINED BY TIMING ENGINEER.

IMPORTANT: IF ALT. PHASING IS USED DURING FREE RUN AND COORDINATION, DO NOT OPERATE TIME OF DAY PAGE CHANGE EVENTS CONCURRENTLY WITH COORDINATION PLAN EVENTS IN THE EVENT SCHEDULER. (EX. FREE RUN PAGE CHANGE EVENT SHOULD END BEFORE COORDINATION PLAN EVENT STARTS AND VICE-VERSA).

### ALTERNATE PHASING PAGE CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN THESE OVERLAP/INPUT PAGE CHANGES ACTIVATE TO CALL THE "ALTERNATE PHASING":

OVERLAPS PAGE 2: Modifies overlap parent phases for heads 11 and 51 to run protected turns only.

INPUTS PAGE 2: Disables phase 6 call on loop 1A and reduces delay time for Phase 2 call on loop 1A to 3 seconds.


Disables phase 2 call on loop 5A and reduces delay time for phase 5 call on loop 5A to 3 seconds.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T2  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:


Signal Upgrade-  
Electrical Detail - Sheet 5 of 5  
(Construction Phase 2A)

**DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED**

**HNTB** HNTB NORTH CAROLINA, P.C.  
343 E. Six Forks Road, Suite 200  
Raleigh, North Carolina 27609  
NC License No: C-1554  
(919) 546-8997

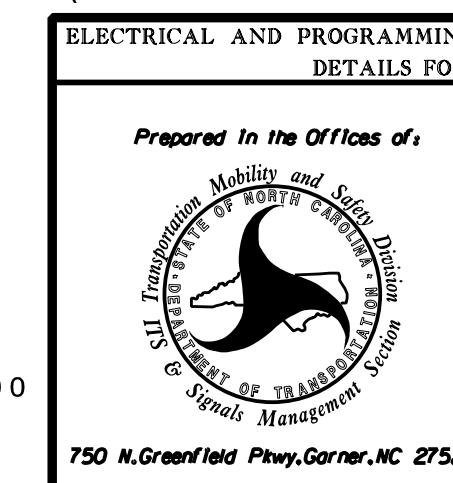


ELECTRICAL AND PROGRAMMING DETAILS FOR:	
Prepared in the Office of:	
SR 2048 (Gordon Rd) at SR 1328 (White Rd)	
Division 3 New Hanover County Wilmington	
PLAN DATE: August 2023	REVIEWED BY: N.K. Vlanich
PREPARED BY: E.E. Tiller	REVIEWED BY: N.R. Simmons
REVISIONS	INIT. DATE

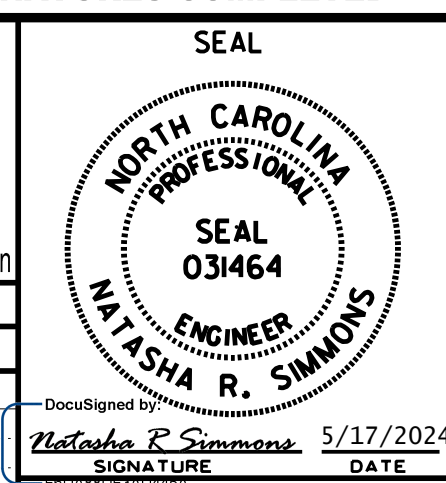


DocuSigned by:  
*Natasha R. Simmons* 5/17/2024  
SIGNATURE DATE  
SIG. INVENTORY NO. 03-0893T2




**DEFAULT PHASING DIAGRAM**

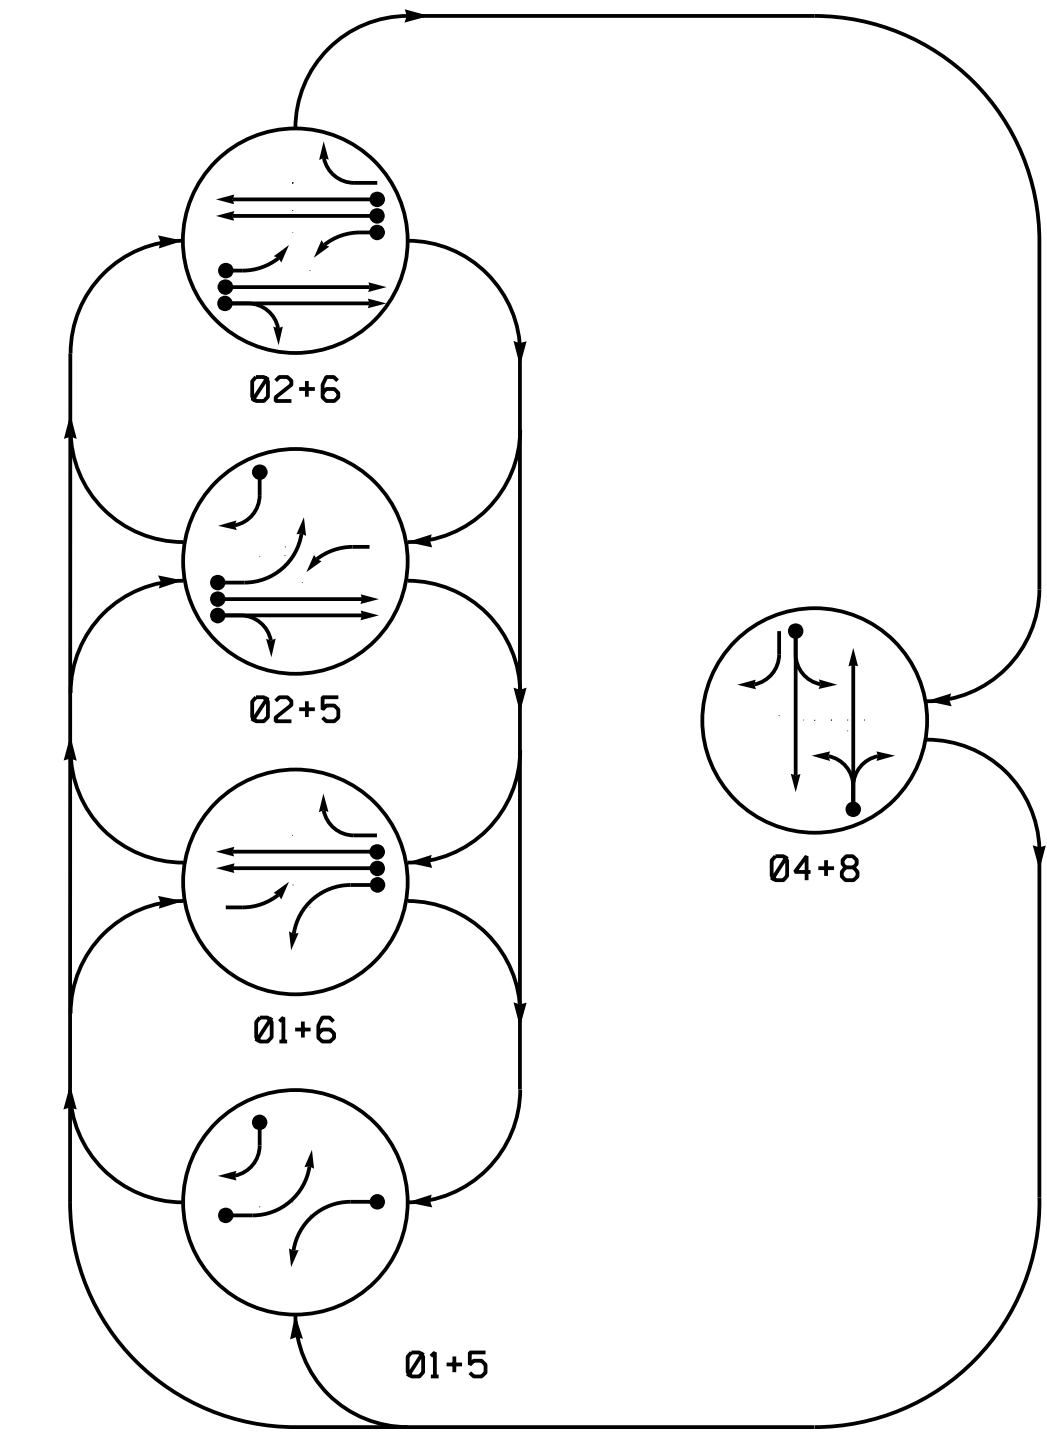

**ALTERNATE PHASING DIAGRAM**

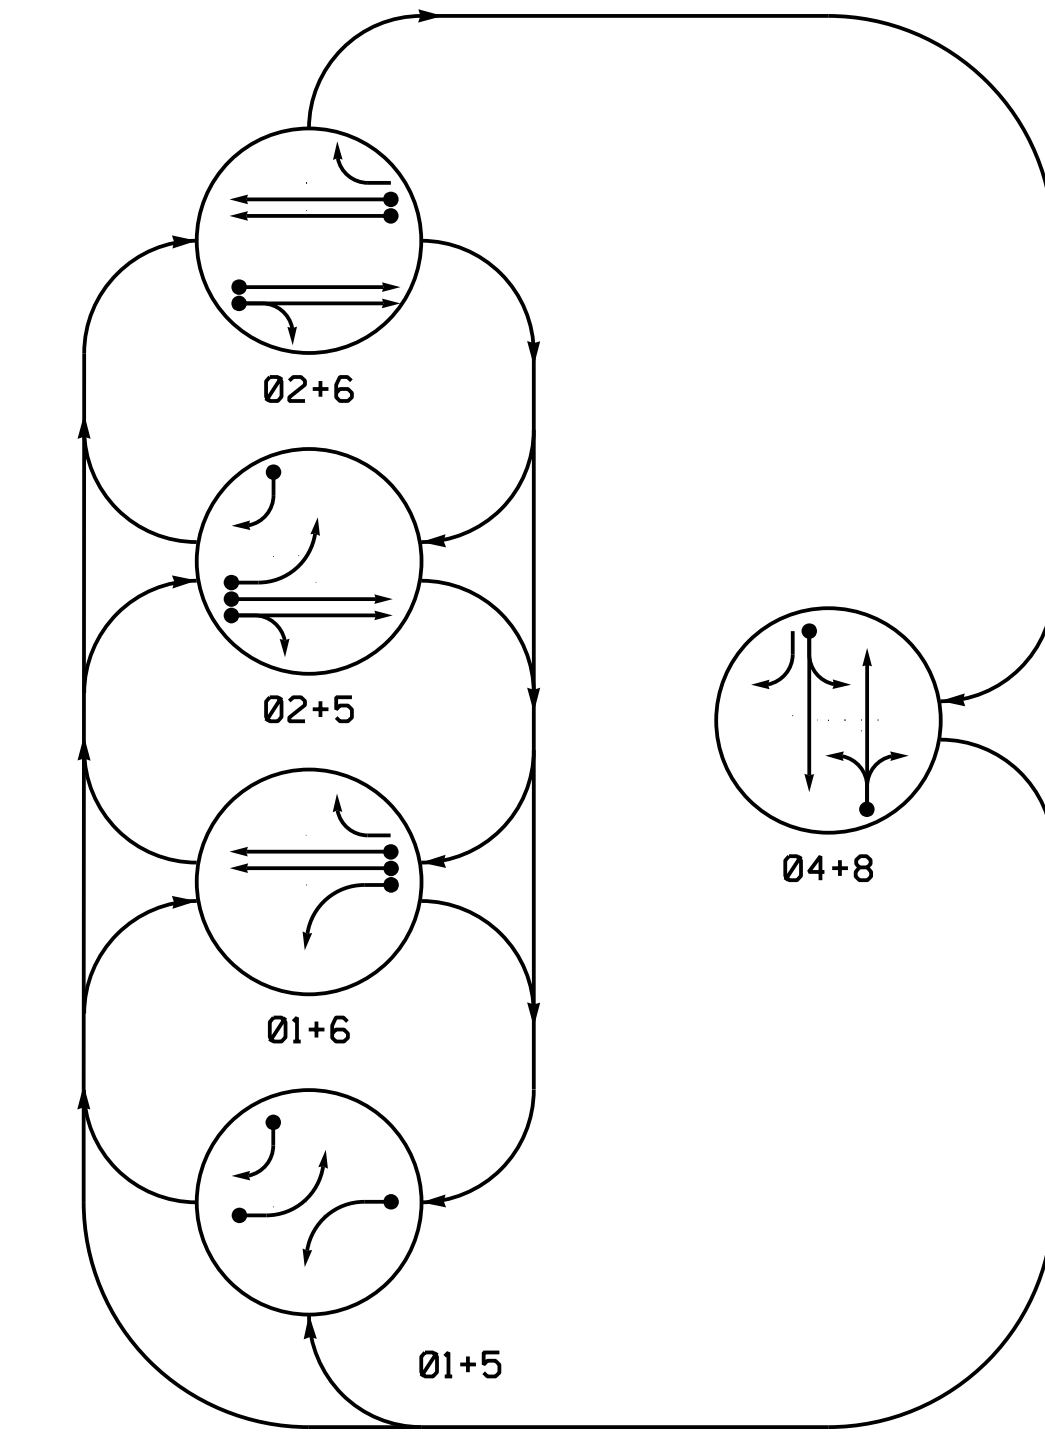

**SIGNAL FACE I.D.**

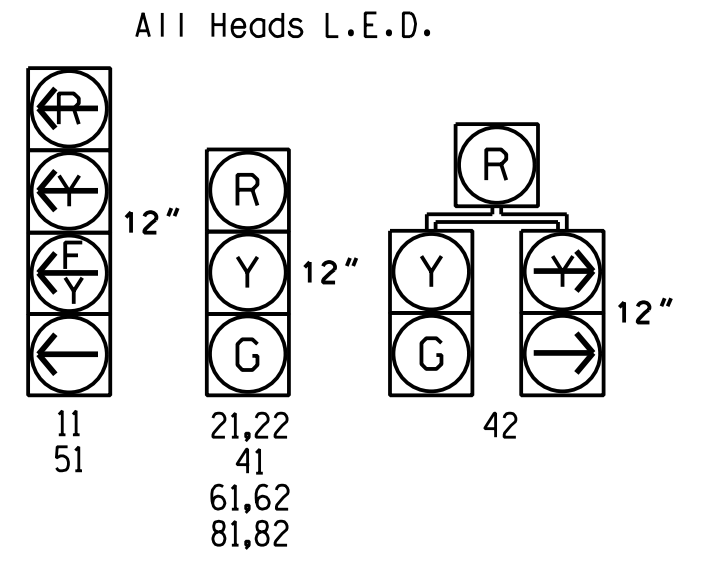



ZONE	SIZE (FT)	DISTANCE FROM STOPBAR (FT)	TURNS	NEW LOOP	DETECTOR PROGRAMMING				SYSTEM LOOP	NEW CARD
					PHASE	CALLING	EXTENSION	FULL TIME DELAY		
1A	6x40	0	*	*	1	Y	Y	-	15**	-
4A	6x40	0	*	*	6#	Y	Y	-	-	-
5A	6x40	0	*	*	4	Y	Y	-	-	-
5B	6x40	0	*	*	5	Y	Y	-	15**	-
8A	6x40	0	*	*	2#	Y	Y	-	-	-
					5	Y	Y	-	15	-
					8	Y	Y	-	3	-

\* Multizone Microwave Detection  
 \*\* Disable Delay During Alternate Phasing Operation.  
 # Disable phase call for loop(s) during alternate phasing.

**5 Phase Fully Actuated Wilmington Signal System**

**NOTES**

- Refer to "Roadway Standard Drawings NCDOT" dated January 2024 and "Standard Specifications for Roads and Structures" dated January 2024.
- Do not program signal for late night flashing operation unless otherwise directed by the Engineer.
- Phase 1 and/or phase 5 may be lagged.
- Reposition existing signal heads numbered 21, 22, 41, 42, 61, and 62 and existing signs (A) and (B).
- Set all detector units to presence mode.
- The Division (City) Traffic Engineer will determine the hours of use for each phasing plan.
- This intersection uses multi-zone microwave detection. Install detectors according to the manufacturer's instructions to achieve the desired detection.
- Maximum times shown in timing chart are for free-run operation only. Coordinated signal system timing values supersede these values.
- Signal system data: Controller Asset #0893.

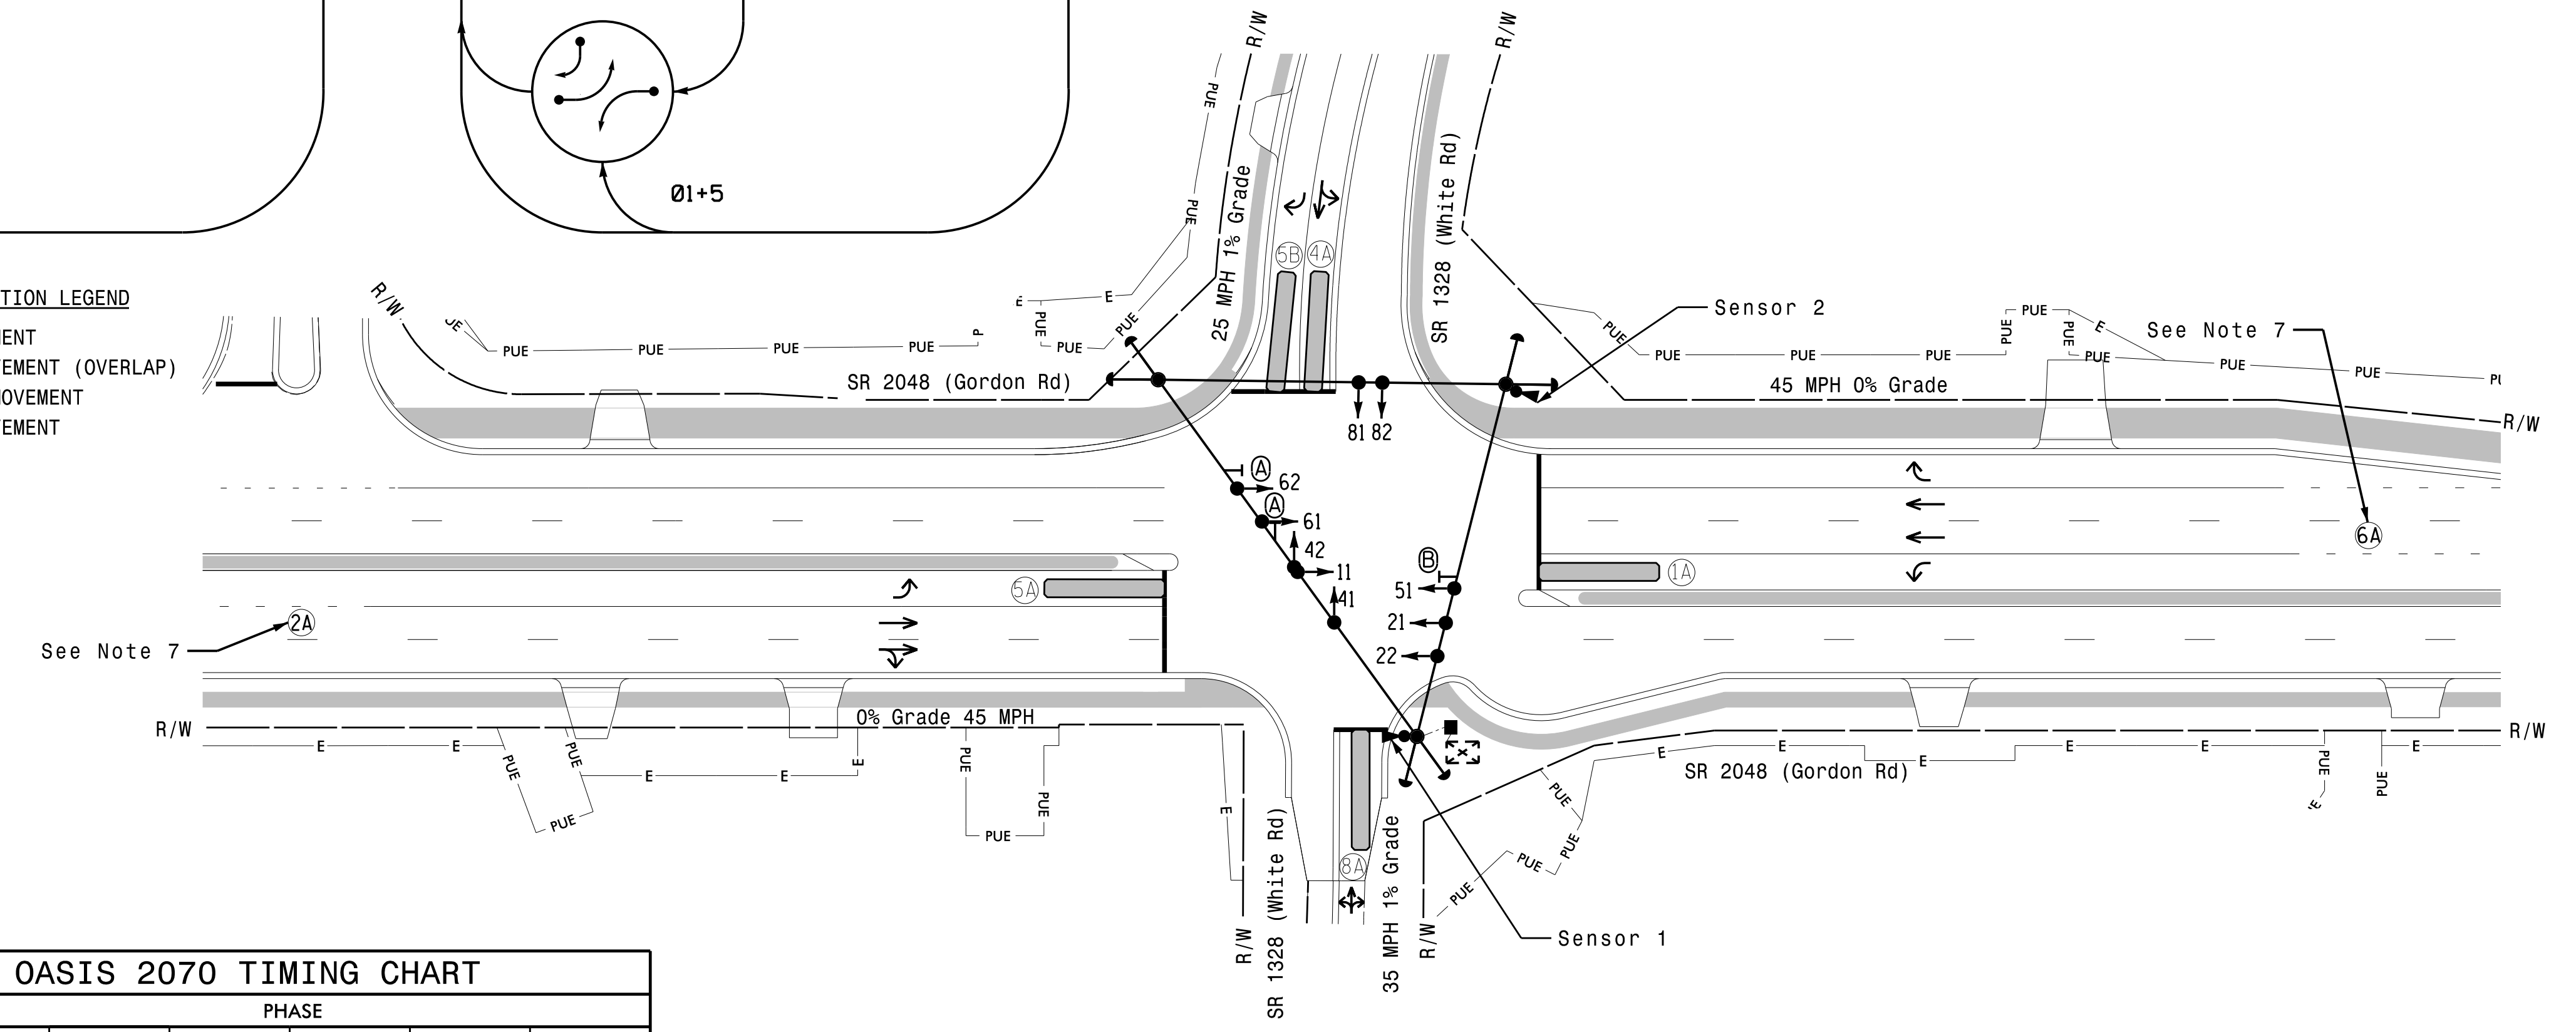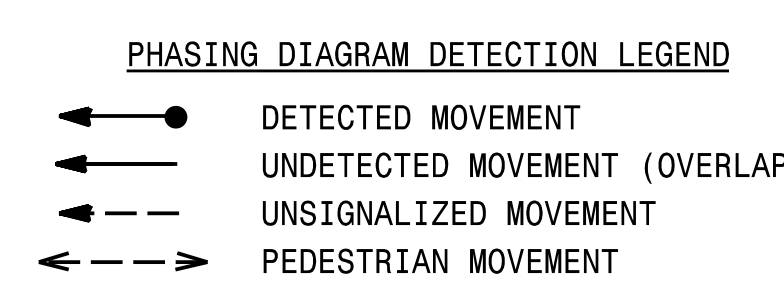


FEATURE	PHASE					
	1	2	4	5	6	8
Min Green 1*	5	12	5	5	12	5
Extension 1*	2.0	2.0	2.0	2.0	2.0	2.0
Max Green 1*	20	90	20	20	90	20
Yellow Clearance	3.0	4.5	3.1	3.0	4.5	3.8
Red Clearance	2.8	1.6	2.8	2.8	1.6	1.9
Red Revert	2.0	2.0	2.0	2.0	2.0	2.0
Walk 1*	-	-	-	-	-	-
Don't Walk 1	-	-	-	-	-	-
Seconds Per Actuation*	-	-	-	-	-	-
Max Variable Initial*	-	-	-	-	-	-
Time Before Reduction*	-	-	-	-	-	-
Time To Reduce*	-	-	-	-	-	-
Minimum Gap	-	-	-	-	-	-
Recall Mode	-	MIN RECALL	-	-	MIN RECALL	-
Vehicle Call Memory	-	YELLOW	-	-	YELLOW	-
Dual Entry	-	-	ON	-	-	ON
Simultaneous Gap	ON	ON	ON	ON	ON	ON

\* These values may be field adjusted. Do not adjust Min Green and Extension times for phases 2 and 6 lower than what is shown. Min Green for all other phases should not be lower than 4 seconds.

FUNCTION	Sensor 1	Sensor 2
Channel	1	1
Phase	2	6
Direction of Travel	EB	WB
Detection Zone (ft)	100-600	100-600
Enable Speed	Y	Y
Speed Range (mph)	35-100	35-100
Enable Estimated Time of Arrival	Y	Y
Estimated Time of Arrival (sec)	1.0-6.5	1.0-6.5

SIGNAL FACE	PHASE						FLASH
	0	1	2	3	4	5	
11	-	-	-	-	-	-	-
21,22	R	R	G	G	R	Y	-
41	R	R	R	R	G	R	-
42	R	R	R	R	G	R	-
51	-	-	-	-	-	-	-
61,62	R	G	R	G	R	Y	-
81,82	R	R	R	R	G	R	-

SIGNAL FACE	PHASE						FLASH
	0	1	2	3	4	5	
11	-	-	-	-	-	-	-
21,22	R	R	G	G	R	Y	-
41	R	R	R	R	G	R	-
42	R	R	R	R	G	R	-
51	-	-	-	-	-	-	-
61,62	R	G	R	G	R	Y	-
81,82	R	R	R	R	G	R	-

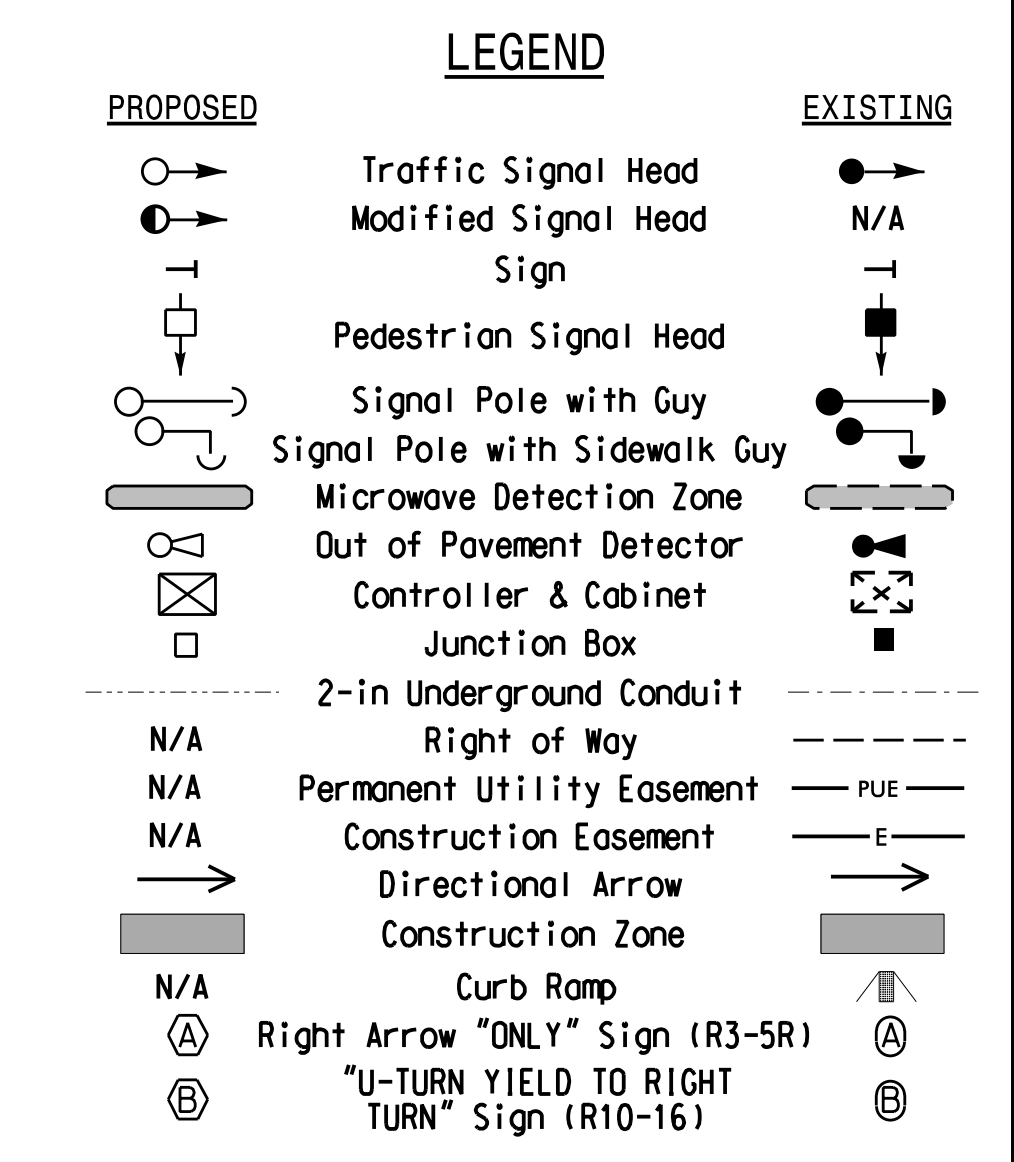

Signal Upgrade-  
 Temporary Design 3  
 (Construction Phase 3)


**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

	SR 2048 (Gordon Rd) at SR 1328 (White Rd)		
	Division 3 New Hanover County Wilmington PLAN DATE: May 2022 PREPARED BY: E.E. Tiller SCALE: 1"=40'	REVIEWED BY: N.K. Vlanich REVIEWED BY: N.R. Simmons DATE: 5/17/2024	



### 18 CHANNEL CONFLICT MONITOR PROGRAMMING DETAIL

(remove jumpers and set switches as shown)

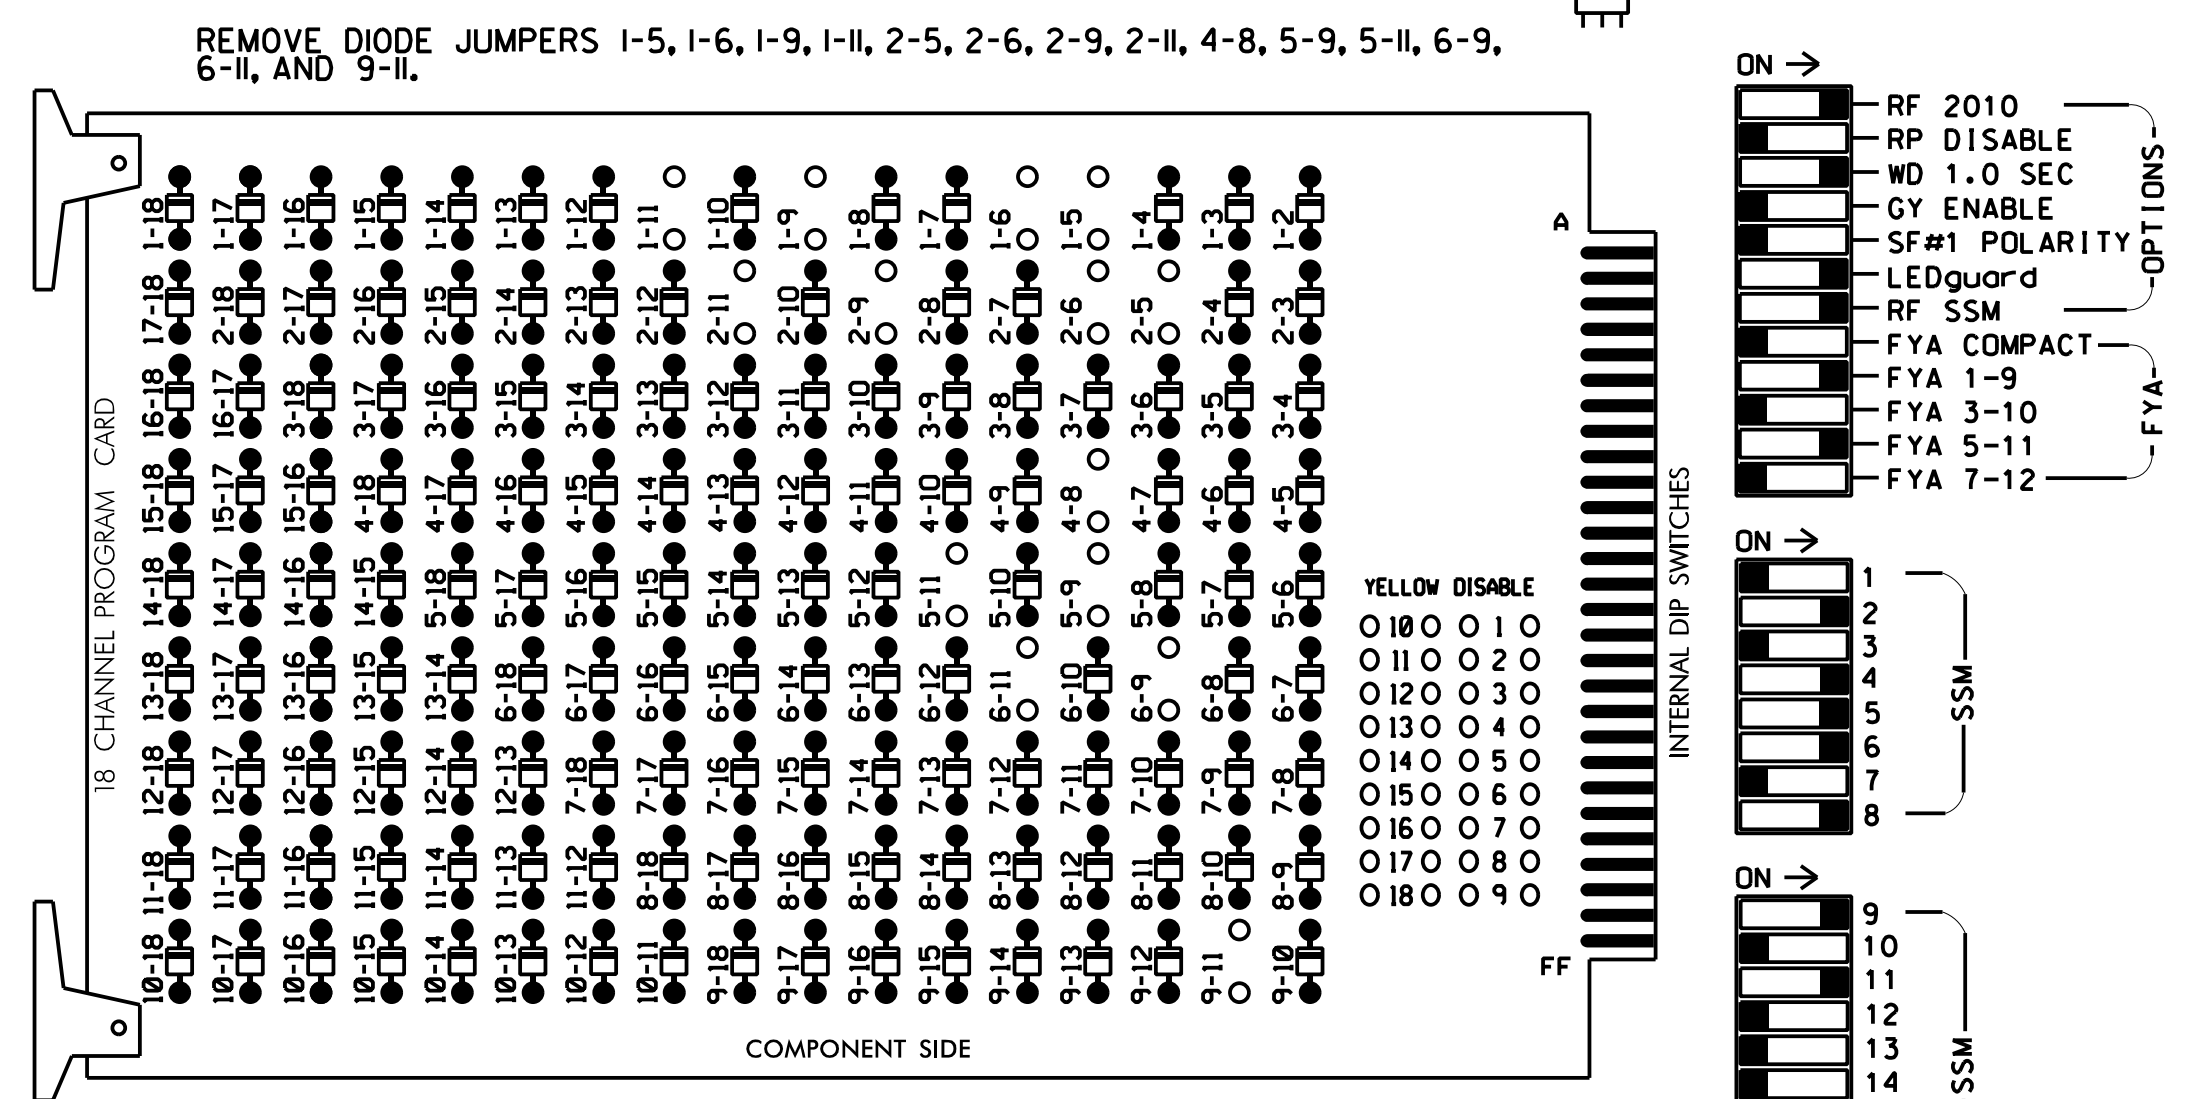

REMOVE JUMPERS AS SHOWN

**NOTES:**

- Card is provided with all diode jumpers in place. Removal of any jumper allows its channels to run concurrently.
- Ensure jumpers SEL2-SEL5 are present on the monitor board.
- Ensure that Red Enable is active all times during normal operation.
- Connect serial cable from conflict monitor to comm. port 1 of 2070 controller. Ensure conflict monitor communicates with 2070.

■ = DENOTES POSITION OF SWITCH

### NOTES

- To prevent "flash-conflict" problems, insert red flash program blocks for all unused vehicle load switches in the output file. The installer shall verify that signal heads flash in accordance with the Signal Plans.
- Program phases 4 and 8 for Dual Entry.
- Enable Simultaneous Gap-Out for all Phases.
- Program phases 2 and 6 for Startup In Green.
- Program phases 2 and 6 for Yellow Flash, and overlap 1 as Wag Overlap.
- The cabinet and controller are part of the Wilmington Signal System.

### EQUIPMENT INFORMATION

CONTROLLER.....2070  
 CABINET.....332 W/ AUX  
 SOFTWARE.....ECONOLITE OASIS  
 CABINET MOUNT.....BASE  
 OUTPUT FILE POSITIONS...18 WITH AUX. OUTPUT FILE  
 LOAD SWITCHES USED.....S1,S2,S5,S7,S8,S11,AUX S1,  
 AUX S4  
 PHASES USED.....1,2,4,5,6,8  
 OVERLAP "A".....1+2  
 OVERLAP "B".....NOT USED  
 OVERLAP "C".....5+6  
 OVERLAP "D".....NOT USED

### SIGNAL HEAD HOOK-UP CHART

LOAD SWITCH NO.	S1	S2	S3	S4	S5	S6	S7	S8	S9	S10	S11	S12	AUX S1	AUX S2	AUX S3	AUX S4	AUX S5	AUX S6
CMU CHANNEL NO.	1	2	13	3	4	14	5	6	15	7	8	16	9	10	17	11	12	18
PHASE	1	2	2 PED	3	4	4 PED	5	6	6 PED	7	8	8 PED	OLA	OLB	SPARE	OLC	OLD	SPARE
SIGNAL HEAD NO.	11	21,22	NU	NU	41,42	NU	42	51	61,62	NU	NU	81,82	NU	11	NU	NU	51	NU
RED		128			101		*		134		107							
YELLOW	*	129			102				135		108							
GREEN		130			103				136		109							
RED ARROW													A121				A114	
YELLOW ARROW							132						A122				A115	
FLASHING YELLOW ARROW													A123				A116	
GREEN ARROW	127							133	133									
Hand icon																		
Person icon																		


NU = Not Used

\* Denotes install load resistor. See load resistor installation detail this sheet.

★ See pictorial of head wiring in detail this sheet.

### INPUT FILE POSITION LAYOUT

(front view)

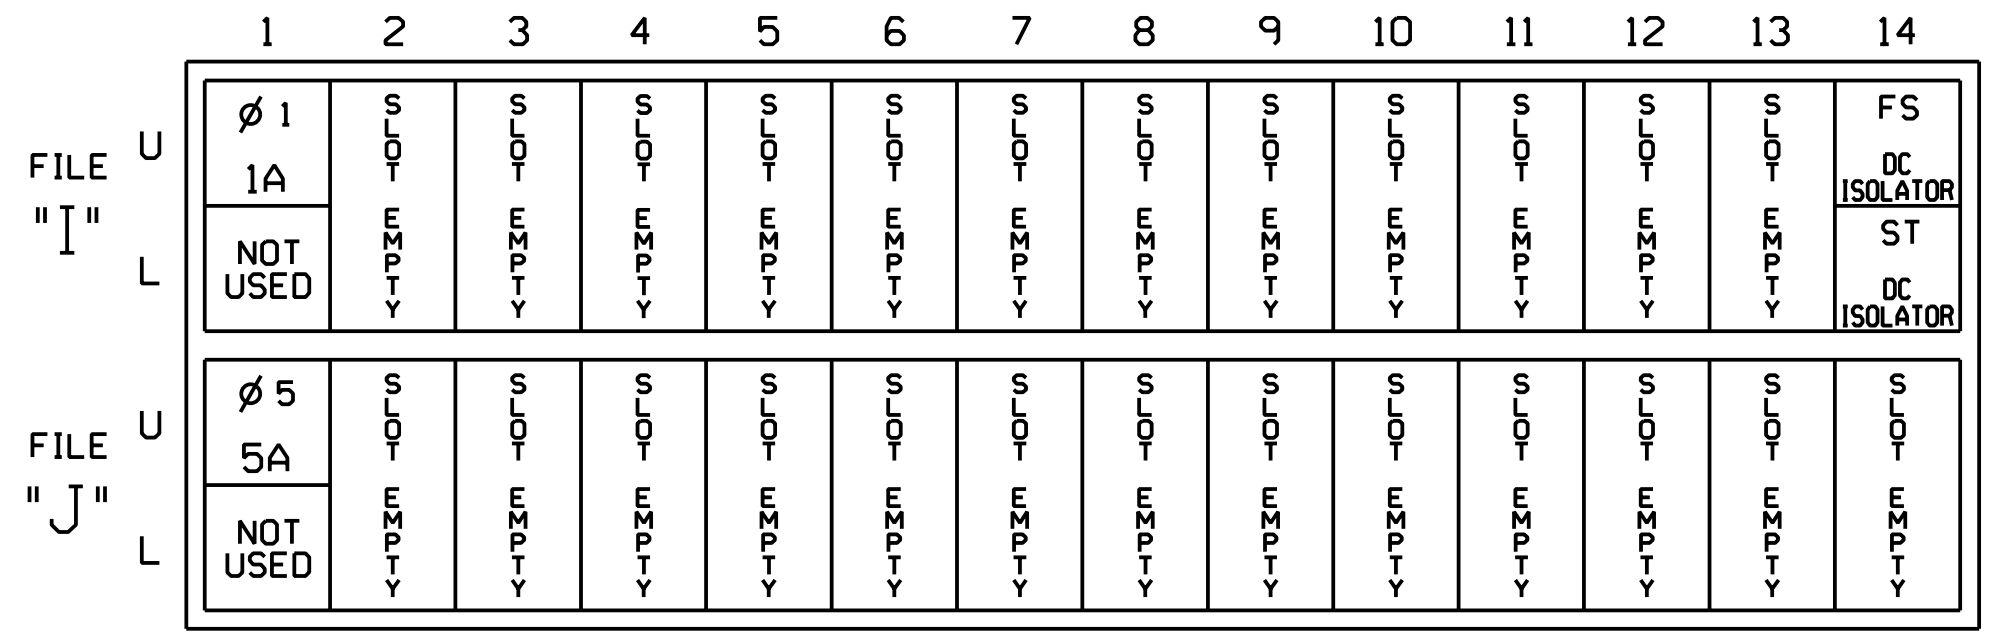

EX.: 1A, 2A, ETC. = LOOP NO.'S


FS = FLASH SENSE  
 ST = STOP TIME

### INPUT FILE CONNECTION & PROGRAMMING CHART

LOOP NO.	LOOP TERMINAL	INPUT FILE POS.	PIN NO.	INPUT ASSIGNMENT NO.	DETECTOR NO.	NEMA PHASE	CALL	EXTEND	FULL TIME DELAY	STRETCH TIME	DELAY TIME
1A	TB2-1,2	I1U	56	18	1	1	Y	Y			15
	-	J4U	48	10 ★	26	6	Y	Y			
	-	I1U	56	18 ★	51	1	Y	Y			
5A	TB3-1,2	J1U	55	17	5	5	Y	Y			15
	-	14U	47	9 ★	22	2	Y	Y			
	-	J1U	55	17 ★	55	5	Y	Y			


\* See Input Page Assignment programming details on sheets 3 and 4.

#### INPUT FILE POSITION LEGEND: J2L

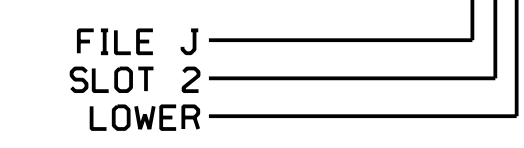

### FYA SIGNAL WIRING DETAIL

(wire signal heads as shown)

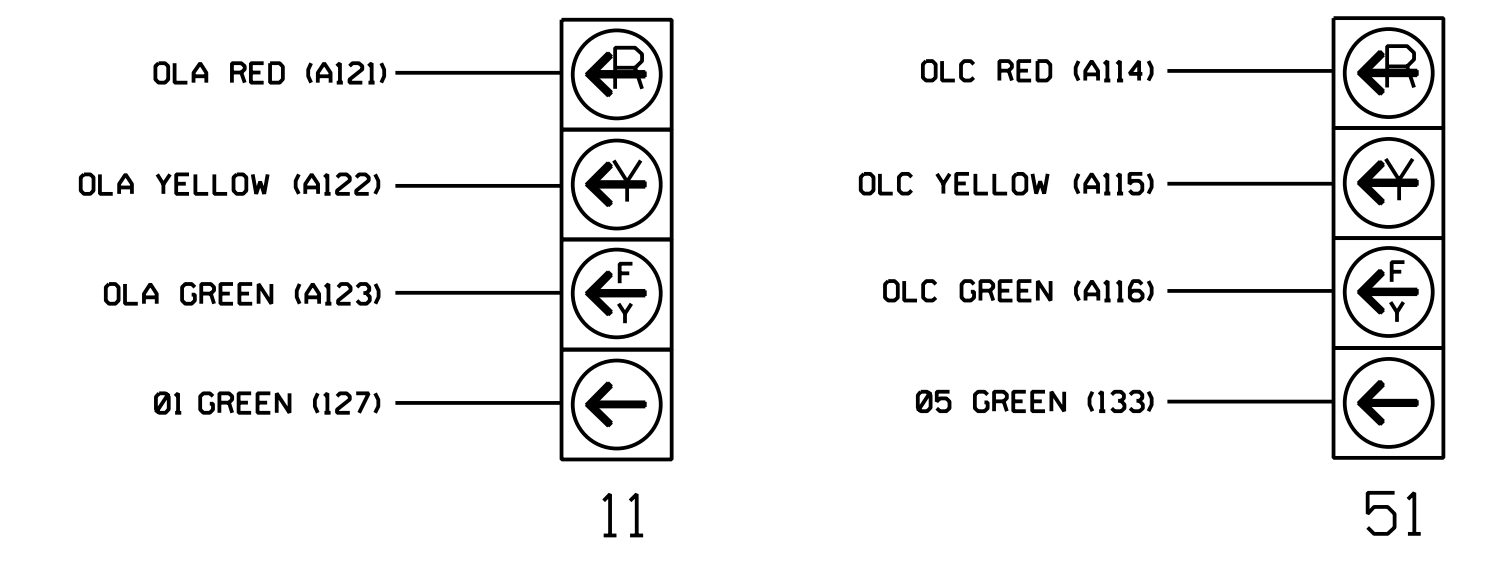


**NOTE**

The sequence display for signal heads 11 and 51 require special logic programming. See sheet 2 for programming instructions.

### LOAD RESISTOR INSTALLATION DETAIL

(install resistors as shown below)

VALUE (ohms)	WATTAGE
1.5K - 1.9K	25W (min)
2.0K - 3.0K	10W (min)

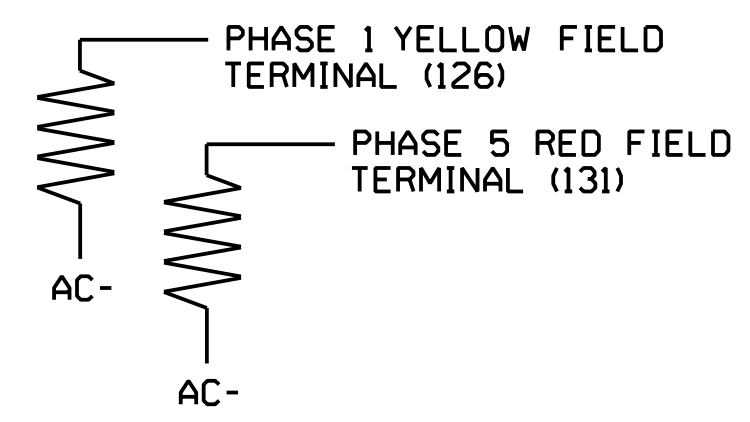

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T3  
 DESIGNED: May 2022  
 SEALED: 5/17/2024  
 REVISED:

**HNTB**  
 HNTB NORTH CAROLINA, P.C.  
 343 E. Six Forks Road, Suite 200  
 Raleigh, North Carolina 27609  
 NC License No: C-1554  
 (919) 546-8997

Signal Upgrade-  
 Electrical Detail - Sheet 1 of 5  
 (Construction Phase 3)

**DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED**

Prepared in the Office of:

SR 2048 (Gordon Rd)  
 at  
 SR 1328 (White Rd)

Division 3 New Hanover County Wilmington

PLAN DATE: August 2023 REVIEWED BY: N.K. Vlanich  
 PREPARED BY: E.E. Tiller REVIEWED BY: N.R. Simmons

REVISIONS	INIT.	DATE

DocuSigned by:  
  
 5/17/2024

SEAL  
 NORTH CAROLINA PROFESSIONAL ENGINEER  
 SEAL 031464  
 MELISSA R. SIMMONS

SIG. INVENTORY NO. 03-0893T3



### LOGICAL I/O PROCESSOR PROGRAMMING DETAIL TO PRODUCE SPECIAL FYA-PPLT SIGNAL SEQUENCE

(program controller as shown below)

- FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, 3, 4, 5, AND 6.
- FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

LOGICAL I/O COMMAND #1 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON  
AND RED CLEAR ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #50 ON  
SET OUTPUT ASSIGNMENT #51 OFF

PRESS '+'

NOTE: LOGIC FOR  
Phase 2 RED  
CLEAR WHEN  
TRANSITIONING  
FROM Phase 2  
TO PHASE 2  
(HEAD 11).

LOGICAL I/O COMMAND #2 (+/-COMMAND#)  
IF ACTIVE PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #52 OFF

PRESS '+'

NOTE: LOGIC FOR  
SWITCHING  
FLASHING YELLOW  
ARROW "OFF"  
DURING Phase 2  
(HEAD 11).

LOGICAL I/O COMMAND #3 (+/-COMMAND#)  
IF YELLOW ON PHASE #1 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #51 ON

PRESS '+'

NOTE: LOGIC FOR  
YELLOW  
ARROW  
CLEARANCE  
FROM Phase 2  
(HEAD 11).

LOGICAL I/O COMMAND #4 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON  
AND RED CLEAR ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #42 ON  
SET OUTPUT ASSIGNMENT #43 OFF

PRESS '+'

NOTE: LOGIC FOR  
PHASE 5 RED  
CLEAR WHEN  
TRANSITIONING  
FROM PHASE 5  
TO PHASE 6  
(HEAD 51).

LOGICAL I/O COMMAND #5 (+/-COMMAND#)  
IF ACTIVE PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #44 OFF

PRESS '+'

NOTE: LOGIC FOR  
SWITCHING  
FLASHING YELLOW  
ARROW "OFF"  
DURING PHASE 5  
(HEAD 51).

LOGICAL I/O COMMAND #6 (+/-COMMAND#)  
IF YELLOW ON PHASE #5 IS ON

↓  
SCROLL DOWN

THEN:  
SET OUTPUT ASSIGNMENT #43 ON

LOGICAL I/O PROCESSOR PROGRAMMING COMPLETE

NOTE: LOGIC FOR  
YELLOW  
ARROW  
CLEARANCE  
FROM PHASE 5  
(HEAD 51).

OUTPUT REFERENCE SCHEDULE	
USE TO INTERPRET LOGIC PROCESSOR	
OUTPUT 42 =	Overlap C Red
OUTPUT 43 =	Overlap C Yellow
OUTPUT 44 =	Overlap C Green
OUTPUT 50 =	Overlap A Red
OUTPUT 51 =	Overlap A Yellow
OUTPUT 52 =	Overlap A Green

### OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS),  
THEN '1' (VEHICLE OVERLAP SETTINGS).

PAGE 1: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

NOTICE  
GREEN  
FLASH

PRESS '+' TWICE

PAGE 1: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: : XX  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW X GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

NOTICE  
GREEN  
FLASH

OVERLAP PROGRAMMING COMPLETE

### OVERLAP PROGRAMMING DETAIL FOR ALTERNATE PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS),  
THEN '1' (VEHICLE OVERLAP SETTINGS).  
PRESS 'NEXT' TO ADVANCE TO PAGE 2.

NOTICE  
PAGE 2

PAGE 2: VEHICLE OVERLAP 'A' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: :X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

PRESS '+' TWICE

NOTICE  
PAGE 2



PAGE 2: VEHICLE OVERLAP 'C' SETTINGS  
PHASE: :12345678910111213141516  
VEH OVL PARENTS: : X  
VEH OVL NOT VEH: :  
VEH OVL NOT PED: :  
VEH OVL GRN EXT: :  
STARTUP COLOR: - RED - YELLOW - GREEN  
FLASH COLORS: - RED - YELLOW - GREEN  
SELECT VEHICLE OVERLAP OPTIONS: (Y/N)  
FLASH YELLOW IN CONTROLLER FLASH?...Y  
GREEN EXTENSION (0-255 SEC)...0.0  
YELLOW CLEAR (0=PARENT,3-25.5 SEC)...0.0  
RED CLEAR (0=PARENT,0.1-25.5 SEC)...0.0  
OUTPUT AS PHASE # (0=NONE, 1-16)...0

OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR  
THE SIGNAL DESIGN: 03-0893T3  
DESIGNED: May 2022  
SEALED: 5/17/2024  
REVISED:

Signal Upgrade-  
Electrical Detail - Sheet 2 of 5  
(Construction Phase 3)

DOCUMENT NOT CONSIDERED FINAL  
UNLESS ALL SIGNATURES COMPLETED

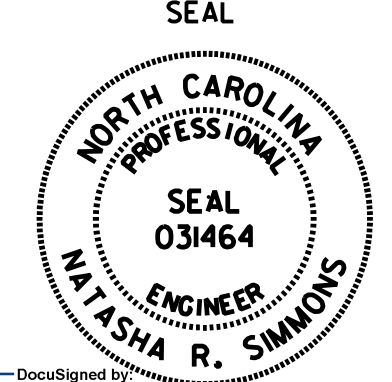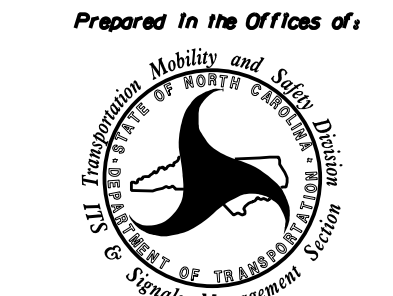	SR 2048 (Gordon Rd) at SR 1328 (White Rd)									
	Division 3 New Hanover County Wilmington									
Prepared In the Office of: 	PLAN DATE: August 2023 PREPARED BY: E.E. Tiller	REVIEWED BY: N.K. Vlanich REVIEWED BY: N.R. Simmons								
750 N. Greenfield Pkwy, Garner, NC 27529 HNTB NORTH CAROLINA, P.C. 343 E. Six Forks Road, Suite 200 Raleigh, North Carolina 27609 NC License No: C-1554 (919) 546-8997	REVISIONS <table border="1"> <thead> <tr> <th>NO.</th> <th>REVISIONS</th> <th>INIT.</th> <th>DATE</th> </tr> </thead> <tbody> <tr> <td> </td> <td> </td> <td> </td> <td> </td> </tr> </tbody> </table>		NO.	REVISIONS	INIT.	DATE				
NO.	REVISIONS	INIT.	DATE							

INPUT PAGE 2 ASSIGNMENT PROGRAMMING DETAIL FOR ALTERNATE PHASING - LOOP 1A

(program controller as shown below)

- NOTES: 1. THIS PROGRAMMING APPLIES FOR INPUT PAGE 2 ONLY. INPUT PAGE 1 WILL USE STANDARD DEFAULT SETTINGS. THIS PROGRAMMING IS NECESSARY FOR PROPER DETECTOR OPERATION DURING ALTERNATE PHASING OPERATION. 2. THE FIRST TASK THIS PROGRAMMING ACCOMPLISHES IS THE DISABLING OF INPUT #10 (DETECTOR 26) SO THAT A VEHICLE CALL WILL NOT BE PLACED TO PHASE 6 DURING ALTERNATE PHASING OPERATION. THE SECOND TASK THIS PROGRAMMING ACCOMPLISHES IS THAT IT REASSIGNS DETECTOR 51 TO INPUT #18 SO THAT THE DELAY ON LOOP 1A CAN BE REDUCED FROM 15 SECONDS TO 0 SECONDS.

FROM MAIN MENU PRESS '5' (INPUTS). THEN PRESS 'NEXT' TO GET TO INPUT PAGE '2'. PRESS THE '+' KEY UNTIL INPUT 10 IS REACHED.

PAGE: 2 C1 PIN:48 VEHICLE DETECTOR INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....26 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER A 'Y' FOR NOT ENABLED  
DEFAULT DETECTOR NUMBER WILL REMAIN UNTIL 'NOT ENABLED' IS ENTERED.

(LOOP 1A - PHASE 6)

PAGE: 2 C1 PIN:48 NOT ENABLED INPUT ASSIGNMENT #.....10 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....Y VEHICLE DETECTOR (1-64).....- PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PRESS '+' TO ADVANCE TO INPUT 18

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....1 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

ENTER '51' TO REASSIGN THE VEHICLE DETECTOR FOR THIS INPUT

(LOOP 1A - Phase 2)

PAGE: 2 C1 PIN:56 VEHICLE DETECTOR INPUT ASSIGNMENT #.....18 DEBOUNCE TIME (0-25.5 SEC).....0.5 DELAY TIME (0-25.5 SEC).....0.0 HOLD-OVER TIME (0-25.5 SEC).....0.0 ASSIGNMENT SELECTION: NOT ENABLED (Y/N).....- VEHICLE DETECTOR (1-64).....51 PEDESTRIAN DETECTOR (1-16).....- ALTERNATE PED DETECTOR (1-16).....- PREEMPT (1-10).....- INVERTED PREEMPT (1-10).....- STOP TIME (Y/N).....- FLASH SENSE (Y/N).....- DOOR OPEN (Y/N).....- MANUAL CONTROL ENABLE (Y/N).....- MANUAL CONTROL ADVANCE (Y/N).....- SPECIAL FUNCTION ALARM (1-8).....- TOD HOUR SYNCHRONIZATION (0-23).....- FORCE OFF RING (1-4).....- HOLD PHASES (1-16).....- PLAN (65=FLSH,66=FREE)..... OFFSET#... CHANGE PHASE SEQUENCE PAGE (1-12).... CHANGE PHASE TIMING PAGE (1-4)..... CHANGE PHASE CONTROL PAGE (1-4).... CHANGE OVERLAP CONTROL PAGE (1-4).... CHANGE INPUT PAGE (1-4)..... CHANGE OUTPUT PAGE (1-4)..... OVERRIDE PHASE CONTROL FUNCTION (Y)...

PROGRAMMING COMPLETE

SPECIAL DETECTOR PROGRAMMING DETAIL - LOOP 1A (ALT.)

(program controller as shown below)

FROM MAIN MENU PRESS '7' (DETECTORS). THEN PRESS '1' FOR VEHICLE DETECTORS. PRESS THE '-' KEY TO GET TO VEHICLE DETECTOR #51.

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....N ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED : SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

ENTER 'Y' FOR ENABLE DETECTOR

ENTER '1' FOR PHASES ASSIGNED

ENSURE DELAY IS '0'

VEHICLE DETECTOR #51 SETTINGS (+,-,1-64) SETTING: (Y/N) ENABLE DETECTOR.....Y ENABLE LOGGING.....N ENABLE DIAGNOSTICS.....N SPEED TRAP.....N CALL DETECTOR.....Y EXTENSION DETECTOR.....Y MODE 2 STOP BAR.....N SWITCHING DETECTOR.....N DUPLICATING DETECTOR.....N ENABLE FULL TIME DELAY.....N IF FAILED, SET MIN RECALL?.....N IF FAILED, SET MAX1 RECALL?.....N IF FAILED, SET MAX2 RECALL?.....N PHASE# :12345678910111213141516 PHASES ASSIGNED :X SWITCH/DUPLICATE : LOOP SIZE (0-255 FT).....6 SPEED TRAP DISTANCE (0-255 FT).....0 STOP BAR TIME (0-255 SEC).....0 STRETCH (0-25.5 SEC).....0.0 DELAY (0-255 SEC).....0.0 MAX CALLS/MIN (0-255).....255 MIN CALLS/DIAGNOSTIC PERIOD (0-255).....0 MAX OCCUPANCY (0-100%).....100 EXTENSION DISABLE TIME (0-255 SEC).....0 QUEUE MAX OCCUPANCY TIME (0-255).....0 QUEUE GAP RESET TIME (0-25.5).....0.0 PREEMPTION INDEX FOR QUEUE (0-10).....0

DETECTOR PROGRAMMING COMPLETE

NOTE: DETECTOR IS PROGRAMMED PER THE INPUT FILE CONNECTION AND PROGRAMMING CHART SHOWN ON SHEET 1.

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-0893T3 DESIGNED: May 2022 SEALED: 5/17/2024 REVISED:

Signal Upgrade- Electrical Detail - Sheet 3 of 5 (Construction Phase 3)

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

Table with columns for ELECTIONAL AND PROGRAMMING DETAILS FOR, SR 2048 (Gordon Rd) at SR 1328 (White Rd), Division 3 New Hanover County Wilmington, PLAN DATE: August 2023, REVIEWED BY: N.K. Vlanich, PREPARED BY: E.E. Tiller, REVIEWED BY: N.R. Simmons, and a signature block for N. K. Vlanich dated 5/17/2024.