MAXTIME ALTERNATE PHASING ACTIVATION DETAIL

To run alternate phasing, select a Pattern that is programmed to run Sequence 2. A Pattern can be selected through the scheduler or manually by changing the Operational Mode.

ACTIVE PLAN REQUIRED TO RUN DEFAULT PHASING 1 ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING 2	PHASING	SEQUENCE
ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING 2	ACTIVE PLAN REQUIRED TO RUN DEFAULT PHASING	1
	ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING	2

ALTERNATE PHASING CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN

SEQUENCE 2 PLAN 2 ACTIVATE TO CALL THE "ALTERNATE PHASING":

SEQUENCE 2: Add phase 9 to sequence.

OUTPUT CHANNEL CONFIGURATION

Front Panel

Main Menu >Controller >More>Channels>Channels Config

Web Interface

Home >Controller >Advanced IO>Channels>Channel Configuration

Channel Configuration

NOTICE OVERLAP 7	Channel	Control Type	Control Source	Flash Yellow	Flash Red	Flash Alt	MMU Channel
ASSIGNED TO CHANNEL 1	1	Overlap	7		Х	Х	1
	2	Phase Vehicle	2		Х		2
	3	Phase Vehicle	3		Χ	Х	3
	4	Phase Vehicle	4		Χ		4
NOTICE OVERLAP 8	5	Phase Vehicle	5		Χ		5
ASSIGNED TO CHANNEL 5	6	Overlap	8		Χ	Х	6
	7	Phase Vehicle	7		Χ		7
	8	Phase Vehicle	8		Χ	Χ	8
	9	Overlap	1		Χ	Χ	9
	10	Overlap	2		Χ	Χ	10
	11	Overlap	3		Χ		11
	12	Overlap	4		Χ		12
	13	Phase Ped	2				13
	14	Phase Ped	4				14
	15	Phase Ped	6				15
	16	Phase Ped	8				16
	17	Overlap	5		Х	Х	17
	18	Overlap	6		Х		18

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 05-0184T1 DESIGNED: July 2024 SEALED: 8-12-24 REVISED: N/A



Prepared in the Offices of:

US 401 (Fayetteville Rd.)

SR 1010 (Ten-Ten Rd.) August 2024 REVIEWED BY:

PREPARED BY: James Peterson REVIEWED BY:

SIG. INVENTORY NO. 05-0184T1

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED