# MAXTIME ALTERNATE PHASING ACTIVATION DETAIL

To run alternate phasing, select a Pattern that is programmed to run Sequence 2. A Pattern can be selected through the scheduler or manually by changing the Operational Mode.

PHASING	SEQUENCE
ACTIVE PLAN REQUIRED TO RUN DEFAULT PHASING	1
ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING	2

ALTERNATE PHASING CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN

SEQUENCE 2 PLAN 2 ACTIVATE TO CALL THE "ALTERNATE PHASING":

SEQUENCE 2: Add phase 9 to sequence.

## **OUTPUT CHANNEL CONFIGURATION**


### Front Panel

Main Menu >Controller >More>Channels>Channels Config

#### Web Interface

Home >Controller >Advanced IO>Channels>Channel Configuration

### **Channel Configuration**

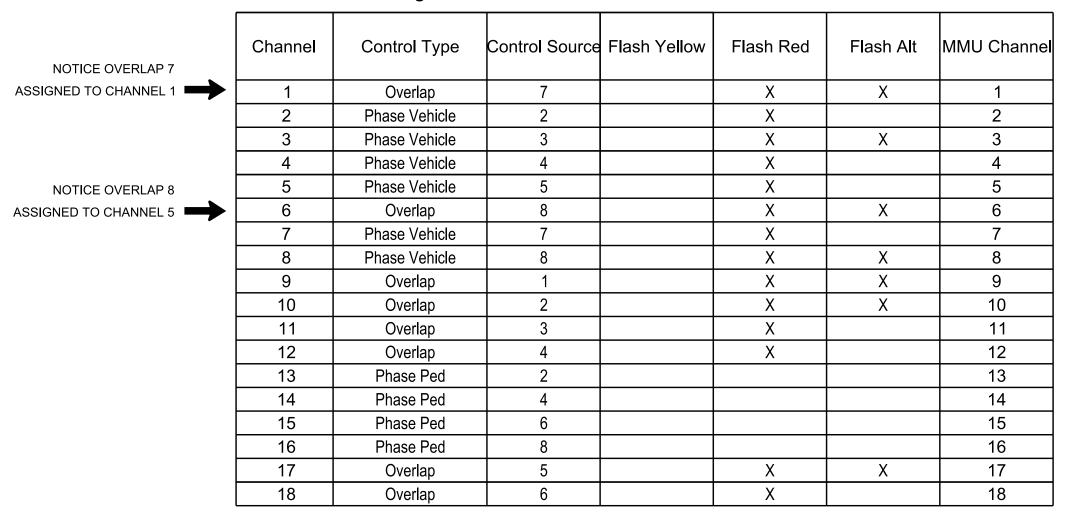

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 05-0184T2 DESIGNED: July 2024

SEALED: 8-12-24
REVISED: N/A

Electrical Detail - Sheet 3 of 3

Prepared in the Offices of:

US 401 (Fayetteville Rd.)

SR 1010 (Ten-Ten Rd.)

ion 5 Wake County Fuquay-V

DATE: August 2024 REVIEWED BY: -

PREPARED BY: James Peterson REVIEWED BY:

REVISIONS INIT. DATE

SEAL 036833

SEAL 036833

SEAL 036833

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

13-AUG-2024 13:45 S:\*ITS&SU\*ITS Signals\*Workgroups

J. Waliahele J. Maliahele J. Teterson

DATE

Signed by:

Ryan W. Hough

08/13/202

A30220EAA265AC2

DATE

SIG. INVENTORY NO. 05-0184T2