MAXTIME ALTERNATE PHASING ACTIVATION DETAIL

To run alternate phasing, select a Pattern that is programmed to run Sequence 2. A Pattern can be selected through the scheduler or manually by changing the Operational Mode.

ACTIVE PLAN REQUIRED TO RUN DEFAULT PHASING 1
ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING 2

ALTERNATE PHASING CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN

SEQUENCE 2 PLAN 2 ACTIVATE TO CALL THE "ALTERNATE PHASING":

SEQUENCE 2: Add phase 9 to sequence.

OUTPUT CHANNEL CONFIGURATION


Front Panel

Main Menu >Controller >More>Channels>Channels Config

Web Interface

Home >Controller >Advanced IO>Channels>Channel Configuration

Channel Configuration

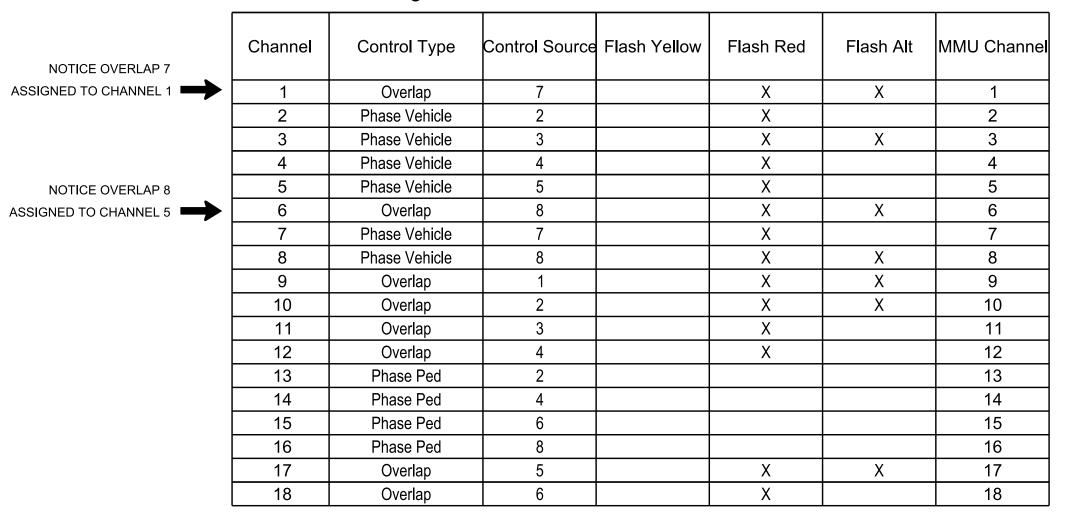

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 05-0184 DESIGNED: July 2024 SEALED: 8-12-24 REVISED: N/A

Electrical Detail - Sheet 3 of 3

Prepared in the Offices of:

US 401 (Fayetteville Rd.)

SR 1010 (Ten-Ten Rd.) August 2024 REVIEWED BY:

PREPARED BY: James Peterson REVIEWED BY:

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

SIG. INVENTORY NO.