

(program controller as shown below)

- PREEMPT 3 -

O-OVERRIDES D-DEFAULT DATA

1-MISCELLANEOUS	6-PEDEST. STATUS
2-INTERVAL TIMES	7-OVERLAP STATUS
3-VEHICLE STATUS	

```
select F - return to Preempt 3 menu
select 2 - Interval Times
```

```
select F - return to Preempt 3 menu
select 3 - Vehicle Status
```

select F - return to Preempt Data menu

O-OVERRIDES	D-DEFAULT DATA
-------------	----------------

1-MISCELLANEOUS	6-PEDEST. STATUS
2-INTERVAL TIMES	7-OVERLAP STATUS
3-VEHICLE STATUS	

```
select F - return to Preempt 4 menu
select 2 - Interval Times
```

```
select F - return to Preempt 4 menu
select 3 - Vehicle Status
```

select F - return to Preempt Data menu

- PREEMPT 5 -

O-OVERRIDES	D-DEFAULT DATA
-------------	----------------

1-MISCELLANEOUS	6-PEDEST. STATUS
2-INTERVAL TIMES	7-OVERLAP STATUS
3-VEHICLE STATUS	

```
select F - return to Preempt 5 menu
select 2 - Interval Times
```

```
select F - return to Preempt 5 menu
select 3 - Vehicle Status
```

NOTE: Options 4 & 5 are not used.
Be sure values are set at default=0.

end of programming

Signal Upgrade-
Electrical Detail - Sheet 3 of 3

**DOCUMENT NOT CONSIDERED FINAL
UNLESS ALL SIGNATURES COMPLETED**

HNTB

HNTB NORTH CAROLINA, P.C.
4000 Center at North Hills St
Suite 500
Raleigh, North Carolina 27609
NC License No: C-1554
(919) 546-8997

750 N. Greenfield Pkwy, Garner, NC 27529