ECONOLITE ASC/3-2070 LOGIC PROCESSOR PROGRAMMING DETAIL FOR LEADING PED INTERVAL (DELAYED GREEN)

(program controller as shown)

The following logic processor configuration holds the FYA's on signal heads 11, 41 and 51 red for the duration of the delayed green time (leading ped interval) when serving a ped call on the opposing through phase.

2. Fro	om Main Menu select 1. CONFIGURATION om CONFIGURATION Submenu select 8. LO rom the LOGIC PROCESSOR Submenu select		1. From 2. From 3. Fro
	"1" IN THE LP# FIELD, PRESS 'ENTER', AND AS SHOWN.		ENABLE THE CUR TOGGLE LOGIC S
LP#: IF AND THEN	1 COPY FROM: 1 ACTIVE: M (T/F) PED ON PH WALK 2 IS ON VEH GREEN ON PH 2 IS OFF SIG SET OLP RED 1 ON SIG SET OLP YELLOW 1 OFF SIG SET OVLP GREEN 1 OFF	HOLD SIGNAL HEAD 11 FYA RED DURING THE PHASE 2 DELAYED GREEN TIME (LEADING PED INTERVAL)	LP 1-15 LP 16-3 LP 31-4 LP 46-6 LP 61-7 LP 76-9
	"2" IN THE LP# FIELD, PRESS 'ENTER', AND AS SHOWN.		
LP#: IF AND THEN	2COPY FROM:2ACTIVE:M(T/F)PEDONPHWALK8ISONVEHGREENONPH8ISOFFSIGSETOLPRED4ONOFFSIGSETOLPYELLOW4OFFSIGSETOVLPGREEN4OFF	HOLD SIGNAL HEAD 41 FYA RED DURING THE PHASE 8 DELAYED GREEN TIME (LEADING PED INTERVAL)	
ELSE			
	"3" IN THE LP# FIELD, PRESS 'ENTER', AND AS SHOWN. 3 COPY FROM: 3 ACTIVE: M (T/F)		

LP#:	3	COPY FROM:	3	ACTIVE:	м	(T/F)
I F AND		ON PH WALK GREEN ON PH		6 6	S S	ON OF F
THEN	SIG	SET OLP RED SET OLP YELL SET OVLP GRE		3 3 3		ON OF F OF F
ELSE						

HOLD SIGNAL HEAD 51 FYA RED DURING THE PHASE 6 DELAYED GREEN TIME (LEADING PED INTERVAL)

om Main Menu select 1. CONFIGURATION

om CONFIGURATION Submenu select 8. LOGIC PROCESSOR

rom the LOGIC PROCESSOR Submenu select 1. LOGIC STATEMENT CONTROL

LOGIC PROCESSOR STATEMENTS 1-4 BY POSITIONING RSOR OVER THE FIELDS SHOWN BELOW AND USING THE KEY TO ENABLE THEM .

STATEMENT CONTROL 1 2 3 4 5 6 7 8 9 0 1 2 3 4 5 6 E E E 30

1-45	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
6-60	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
1-75	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
6-90	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•

END PROGRAMMING

All channels must be programmed to flash red in controller for red-red flash operation as shown below. Notice "AUT" for all channels is programmed for RED.

2. From CONFIGURATION Submenu select 3. LOAD SW ASSIGN




PROJECT REFERENCE NO.	SHEET NO.
U-6018	Sig-12.4

ECONOLITE ASC/3-2070 LOAD SWITCH ASSIGNMENT DETAIL

(program controller as shown)

1. From Main Menu select 1. CONFIGURATION

LD	SWITCH PHASE /OVLP	ASSI (TYPE		[MN Y	۸۱۱ G	۱G D	F PWR	LASH AUT	1 TGR
1	1	V	•	•	•	+	Α	R	х
2	2	V	•	•	•	+	А	R	•
3	3	V	•	•	•	+	А	R	Х
4	4	V	•	•	•	+	А	R	•
5	5	V	•	•	•	_	А	R	•
6	6	V	•	•	•	_	А	R	Х
7	7	V	•	•	•	-	А	R	•
8	8	V	•	•	•	_	А	R	Х
9	1	0	•	•	•	+	А	R	Х
10	2	0	•	•	•	+	А	R	Х
11	3	0	•	•	•	—	А	R	•
12	4	0	•	•	•	-	А	R	•
13	2	Р	•	•	•	+	А	•	•
14	4	Р	•	•	•	—	А	•	•
15	6	Р	•	•	•	+	А	•	•
16	8	Ρ	•	•	•	-	А	•	•

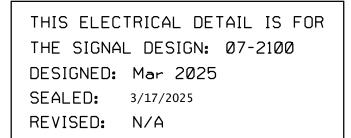

Electrical Deta Final Design	ſ	DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED			
ELECTRICAL AND PROGRAMMING DETAILS FOR:		SEAL			
total of NOBILITY ON SALES	SR 1162 (W SR 4066 (Mod] Division 7 Guilfor	d) rchdale	SEAL 054 155		
1 Lons	PLAN DATE: March 2025 PREPARED BY: AW Poole	REVIEWED BY: ZM Espo		ARY M FSPONIE	
750 N.Greenfield Pkwy.Garner.NC 27529	REVISIONS	INIT.	DATE	Signed by: Jachary M. Esposito 5647DD7684884587.URE DATE SIG. INVENTORY NO. 07-2100	