
#### ADVANCE BEACON WIRING DETAIL

(wire flashers as shown below)

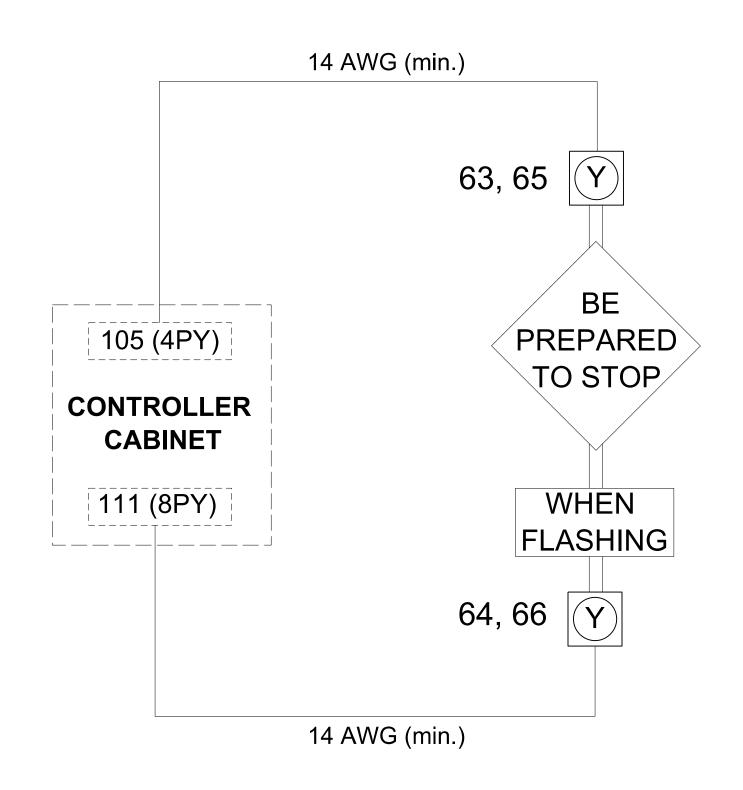

### **IMPORTANT**

- 1. IF CONNECTED REMOVE, TAPE, AND LABEL CONFLICT MONITOR WIRE ATTACHED TO THE REAR OF TERMINAL 105 (4PY) AND TERMINAL 111 (8PY).
- 2. INSET LOADSWITCHES FOR S6 AND S12.
- 3. MAKE SURE LOAD RESISTORS ARE IN PLACE AS SHOWN IN LOAD RESISTOR INSTALLATION DETAIL ON SHEET 1.
- 4. TO ACTIVATE SIGN OPERATION AS INDICATED ON THE SIGNAL PLANS, REASSIGN OUTPUTS 35 AND 36 AS SHOWN ON THIS SHEET.

## **OUTPUT REMAPPING ASSIGNMENT** FOR SIGNAL HEADS 63, 64, 65, & 66

Front Panel

Main Menu >Controller >More >Advanced IO >Output Points

Web Interface

Home >Controller >Advanced IO >Cabinet Configuration >Output Points

Modify IO Module 1 as shown below and save changes.

IO Module 1

| Output Point | Descripton | Output Control Type            | Index |
|--------------|------------|--------------------------------|-------|
| 35           | C1-37      | Channel Green Walk Driver      | 20    |
| 36           | C1-38      | Channel Red Do Not Walk Driver | 20    |

PROJECT REFERENCE NO. R-5857 Sig. 9.2

### **OUTPUT CHANNEL CONFIGURATION**

Front Panel

Main Menu >Controller >More>Channels>Channels Config

Web Interface

Home >Controller >Advanced IO>Channels>Channels Configuration

**Channel Configuration** 

|                               | Channel | Control Type         | Control Source | Flash Yellow | Flash Red | Flash Alt | MMU Channel |
|-------------------------------|---------|----------------------|----------------|--------------|-----------|-----------|-------------|
|                               | 1       | Phase Vehicle        | 1              |              | Х         | X         | 1           |
| NOTICE CHANNEL 2 FLASHES RED  | 2       | Phase Vehicle        | 2              |              | Х         |           | 2           |
|                               | 3       | Phase Vehicle        | 3              |              | Х         | X         | 3           |
|                               | 4       | Phase Vehicle        | 4              | ·            | Х         |           | 4           |
|                               | 5       | Phase Vehicle        | 5              |              | Х         |           | 5           |
| NOTICE CHANNEL 6 FLASHES RED  | 6       | Phase Vehicle        | 6              | ·            | X         | Х         | 6           |
|                               | 7       | Phase Vehicle        | 7              | ·            | Х         |           | 7           |
|                               | 8       | Phase Vehicle        | 8              |              | Х         | Х         | 8           |
| NOTICE CHANNEL 9 FLASHES RED  | 9       | Overlap              | 1              |              | Х         | Х         | 9           |
|                               | 10      | Overlap              | 2              |              | Х         | Х         | 10          |
| NOTICE CHANNEL 11 FLASHES RED | 11      | Overlap              | 3              | ·            | X         |           | 11          |
|                               | 12      | Overlap              | 4              |              | Χ         |           | 12          |
|                               | 13      | Phase Ped            | 2              |              |           |           | 13          |
|                               | 14      | Phase Ped            | 4              |              |           |           | 14          |
|                               | 15      | Phase Ped            | 6              |              |           |           | 15          |
|                               | 16      | Phase Ped            | 8              |              |           |           | 16          |
|                               | 17      | Overlap              | 5              |              | Χ         | Х         | 17          |
|                               | 18      | Overlap              | 6              |              | Χ         |           | 18          |
| PROGRAM CHANNEL 20 AS         | 19      | None                 | 0              |              |           |           | 19          |
| ADV. WARNING FLASHER          | 20      | Adv. Warning Flasher | 6              |              |           |           | 20          |

# MAXTIME STARTUP AND SOFTWARE FLASH PROGRAMMING DETAIL

Front Panel

Main Menu >Controller >Unit

Web Interface

Home >Controller >Unit

Modify parameters as shown below and save changes.

Start Up Parameters

StartUp Clearance Hold

**Unit Flash Parameters** 

All Red Flash Exit Time

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 03-1247 DESIGNED: March 2025 SEALED: 3-31-2025 REVISED: N/A

Electrical Detail - Sheet 2 of 2

Electrical and Programming Details For: Prepared in the Offices of:

US 17 SB (Ocean Highway W) U-Turn North of US 17 Bus/ Old Shallotte Rd

March 2025 REVIEWED BY: GG Murr, Jr. PREPARED BY: JT Rowe REVIEWED BY:

008453 John T. Rowe. Jr 4-1-2025

INIT. DATE

1 Glenwood Avenue Raleigh, NC 27603

REVISIONS 50 N. Greenfield Pkwy, Garner, NC 27529

SIG. INVENTORY NO. 03-1247

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED