

MAXTIME OUTPUT ASSIGNMENT PROGRAMMING DETAIL

Front Panel Main Menu >Controller >More >Advanced IO> Output Points

Web Interface

Home >Controller >Advanced IO >Cabinet Configuration >Output Points

IO Module 1

CHANNEL 20

Output Point	Description	Input Control Type	Index
33	C1-35	Channel Green Walk Drive	19
34	C1-36	Channel Red Do Not Walk Drive	19
35	C1-37	Channel Green Walk Drive	20
36	C1-38	Channel Red Do Not Walk Drive	20

OUTPUT REFERENCE SCHEDULE OUTPUT 33 = 2 PED Y OUTPUT 34 = 6 PED Y OUTPUT 35 = 4 PED Y

OUTPUT 36 = 8 PED Y

MAXTIME PHASE OPTIONS PROGRAMMING DETAIL

Front Panel Main Menu >Controller >Phase >Phase Options Select Plan 1

Web Interface Home >Controller> Phase Configuration >Phase Option Plans Select Phase Option Plan 1

Phase Option Plan 1

Phase	1	2	3	4	5	6	7	8	
Enabled	X	X	X	X	<u> </u>	X	<u> </u>	-	
Advanced Warning		X	-	<u> </u>	<u> </u>	X	÷	÷	
									ACTIVATED FOR PHASE 2 AND PHASE 0

OVERLAP PROGRAMMING


Front Panel Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface

Home >Controller >Overlap Configuration >Overlaps

Overlap Plan 1

Overlap	1	3		
Туре	FYA 4 - Section	FYA 4 - Section		
Included Phases	2	6		
Modifier Phases	1	-		
Modifier Overlaps	-	-		
Trail Green	0	0		
Trail Yellow	0.0	0.0		
Trail Red	0.0	0.0		

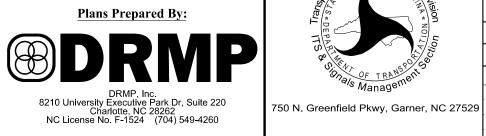

PREPARED BY: DJ White

REVISIONS

DRMP PROJ. NO.: 17359 (040)

INIT. DATE

— Signed by

Brittany N Groome 4/24/202

SIG. INVENTORY NO. 02-0629T1-T

DATE

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19

20

			PROJECT REFERENCE NO. R-4463A	SHEET NC Sig-2.2
MAXTIN	<u>IE STARTUP AI</u> PROGRAMM			
Ma Wa	ont Panel ain Menu>Controller>Ui eb Interface ome>Controller>Unit	nit	-	
	t Up Parameters up Clearance Hold 6	Unit Flash Pa All Red Flash 6]	
			24/2025	
Electrical Detail - Temporar Sheet 2 of 3	y Design 1-4 (TMP Phase 1, S	Step 1-4)	DOCUMENT NOT C FINAL UNLES	SS ALL
Electrical and Programming Details For: Prepared for the Offices of:	(M. L. King, a NC 43/Ben D. Qu	, Jr. Blvd.) t µinn Elementary	Bern	