

(program controller as shown below)

- 1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2 AND 3.
- 2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

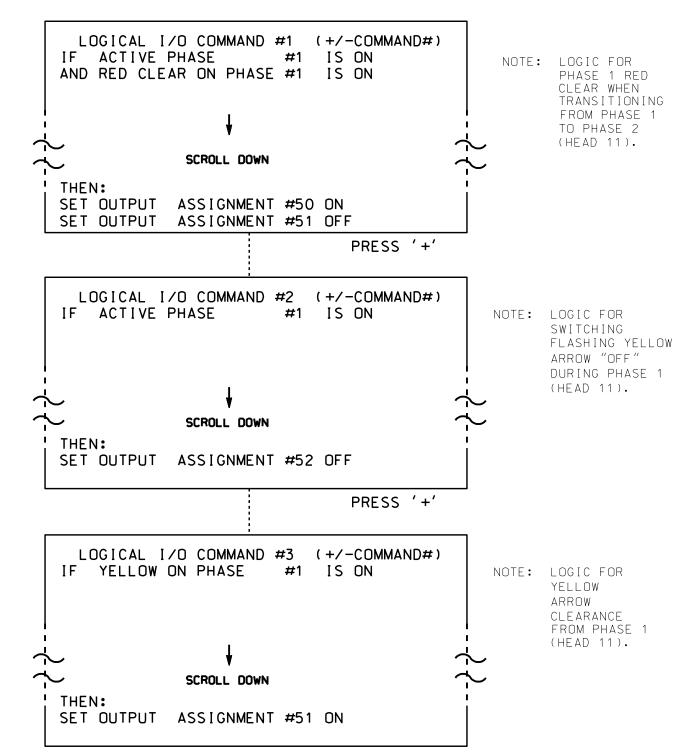

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

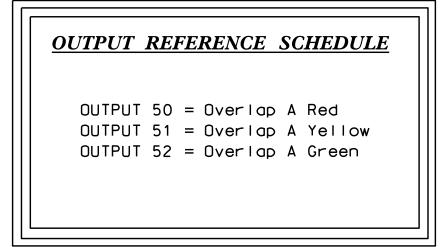


PROJECT REFERENCE NO. Sig. 14 2 I-5880

OVERLAP PROGRAMMING DETAIL FOR DEFAULT PHASING

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS). THEN '1' (VEHICLE OVERLAP SETTINGS).

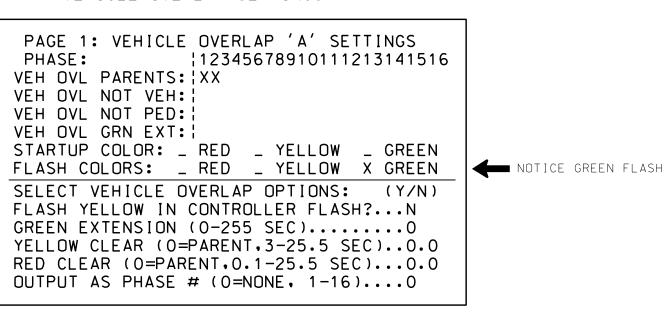

OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 09-0600T1 DESIGNED: September 2024 SEALED: 01-02-25 REVISED: N/A

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED Electrical Design - Sheet 2 of 2 - Temporary Design 1 ELECTRICAL AND PROGRAMMING NC 109/SR 4325 (Thomasville Road) Prepared in the Offices of: I-40 EB Ramp and SR 3826 (I-40 EB Frontage Road) Forsyth County PLAN DATE: December 2024 REVIEWED BY:

REVISIONS

PREPARED BY:

750 N.Greenfield Pkwy, Garner, NC 27529

INIT. DATE SIG. INVENTORY NO. 09-0600T1

036833