

ECONOLITE ASC/3-2070 STARTUP AND SOFTWARE FLASH PROGRAMMING DETAIL

2. From CONTROLLER Submenu select 5. START/FLASH

Scroll down on this screen and set "Exit FL" to Green "G"

Electrical Detail - Sheet 4 of 4