

MAXTIME STARTUP AND SOFTWARE FLASH PROGRAMMING DETAIL

Web Interface
Home>Controller>Unit

MAXTIME OVERLAP PROGRAMMING DETAIL

Web Interface
Home >Controller >Overlap Configuration >Overlaps

Overlap	1	2	3	4	6	7
Type	FYA 4 - Section	FYA 4 - Section	FYA 4 - Section	FYA 4 - Section	FYA 4 - Section	Normal
Included Phases	2	8	6	4,5	2	1
Modifier Phases	1	1	5	-	-	-
Modifier Overlap	-	-	-	-	-	-
Trail Green	0	0	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0	0.0	0.0

FLASHER CIRCUIT MODIFICATION DETAIL

1. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
2. ON REAR OF PDA - REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
3. REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

	Channel	Control Type	Control Source	Flash Yellow	Flash Red	Flash Alt	MMU Channel
➡	1	Phase Vehicle	1		X	X	1
	2	Phase Vehicle	2		X		2
	3	Overlap	7		X	X	3
	4	Phase Vehicle	4		X		4
	5	Phase Vehicle	5		X		5
	6	Phase Vehicle	6		X	X	6
	7	Phase Vehicle	7		X		7
	8	Phase Vehicle	8		X	X	8
	9	Overlap	1		X	X	9
	10	Overlap	2		X	X	10
	11	Overlap	3		X		11
	12	Overlap	4		X		12
	13	Phase Ped	2				13
	14	Phase Ped	4				14
	15	Phase Ped	6				15
	16	Phase Ped	8				16
	17	Overlap	5		X	X	17
	18	Overlap	6		X		18

Plans Prepared By:

 
 **DRMP**

DRMP INC.
8210 UNIVERSITY EXECUTIVE PARK DR.
SUITE 220
CHARLOTTE, NC 28262
NC LICENSE NO. F-1524 (704) 549-4260

**ELECTRICAL AND PROGRAMMING
DETAILS FOR:**



DOCUMENT NOT CONSIDERED
FINAL UNLESS ALL
SIGNATURES COMPLETED



SIG. INVENTORY NO. 14-0790T3