## MAXTIME STARTUP AND SOFTWARE FLASH PROGRAMMING DETAIL

Front Panel Main Menu>Controller>Unit

Web Interface Home>Controller>Unit

Start Up Parameters Startup Clearance Hold **Unit Flash Parameters** All Red Flash Exit Time

## COUNTDOWN PEDESTRIAN SIGNAL OPERATION

Countdown Ped Signals are required to display timing only during Ped Clearance Interval. Consult Ped Signal Module user's manual for instructions on selecting this feature.

## FLASHER CIRCUIT MODIFICATION DETAIL

IN ORDER TO INSURE THAT SIGNALS FLASH CONCURRENTLY ON THE SAME APPROACH, MAKE THE FOLLOWING FLASHER CIRCUIT CHANGES:

- 1. ON REAR OF PDA REMOVE WIRE FROM TERM. T2-4 AND TERMINATE ON T2-2.
- 2. ON REAR OF PDA REMOVE WIRE FROM TERM. T2-5 AND TERMINATE ON T2-3.
- 3. REMOVE FLASHER UNIT 2.

THE CHANGES LISTED ABOVE TIES ALL PHASES AND OVERLAPS TO FLASHER UNIT 1.

SEALED: 8/26/2025 REVISED: N/A

DESIGNED: Aug 2025

THIS ELECTRICAL DETAIL IS FOR

THE SIGNAL DESIGN: 14-0790

Electrical Detail - Sheet 2 of 2 Final Design

ELECTRICAL AND PROGRAMMING

NC 107 SR 1724 (Fairview Road) CVS Driveway

Division 14 Jackson County Sylva PLAN DATE: August 2025 REVIEWED BY: ZM Esposito PREPARED BY: DS Griffith REVIEWED BY: BN Groome REVISIONS INIT. DATE

052936

Brittary Groome 8/26/2025 14-0790 SIG. INVENTORY NO.

DOCUMENT NOT CONSIDERED

SIGNATURES COMPLETED

FINAL UNLESS ALL

SEAL

 $CAR\acute{n}$ 

MAXTIME OVERLAP PROGRAMMING DETAIL

Front Panel

Main Menu >Controller >Overlap >Overlap Parameters/Overlap Timings

Web Interface

Home >Controller >Overlap Configuration >Overlaps

Overlap Plan 1

Overlap	1	2	3	4	6	7
Type	FYA 4 - Section	Normal				
Included Phases	2	8	6	4,5	2	1
Modifier Phases	1	1	5	-	-	-
Modifier Overlap	-	ı	-	=		=
Trail Green	0	0	0	0	0	0
Trail Yellow	0.0	0.0	0.0	0.0	0.0	0.0
Trail Red	0.0	0.0	0.0	0.0	0.0	0.0
FYA Ped Delay	7.0	7.0	0.0	0.0	7.0	0.0

## OUTPUT CHANNEL CONFIGURATION

Front Panel

Main Menu >Controller >More>Channels>Channels Config

Web Interface

Home >Controller >Advanced IO>Channels>Channel Configuration

Channel Configuration

Flash Alt MMU Channel Control Source Flash Yellow Flash Red Control Type Channel Phase Vehicle Χ Χ NOTICE OVERLAP 7 Phase Vehicle ASSIGNED TO CHANNEL 3 Χ 3 Overlap Phase Vehicle 4 Χ 4 Phase Vehicle Phase Vehicle Phase Vehicle Phase Vehicle Overlap 10 10 2 Overlap 11 11 Overlap 12 12 Overlap 13 13 Phase Ped 14 Phase Ped 15 Phase Ped 16 16 Phase Ped 17 Overlap 18 Overlap

NOTICE FLASHING RED

**Plans Prepared By:**