

MAXTIME STARTUP AND SOFTWARE FLASH PROGRAMMING DETAIL

Front Panel
Main Menu >Controller >Unit

Web Interface
Home >Controller >Unit

Modify parameters as shown below and save changes.

Start Up Parameters

Unit Flash Parameters

StartUp Clearance Hold
6

All Red Flash Exit Time
6

OUTPUT CHANNEL CONFIGURATION

Front Panel
Main Menu >Controller >More>Channels>Channels Config

Web Interface
Home >Controller >Advanced IO>Channels>Channel Configuration

Channel Configuration


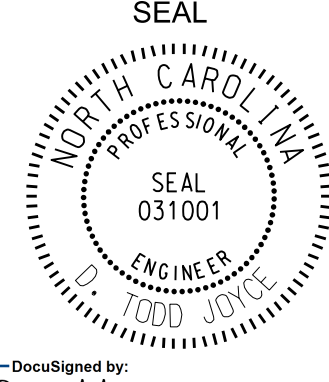
Channel	Control Type	Control Source	Flash Yellow	Flash Red	Flash Alt	MMU Channel
1	Phase Vehicle	1		X	X	1
2	Phase Vehicle	2		X		2
3	Phase Vehicle	3		X	X	3
4	Phase Vehicle	4		X		4
5	Phase Vehicle	5		X		5
6	Phase Vehicle	6		X	X	6
7	Phase Vehicle	7		X		7
8	Overlap	8		X	X	8
9	Overlap	1		X	X	9
10	Overlap	2		X	X	10
11	Overlap	3		X		11
12	Overlap	4		X		12
13	Phase Ped	2				13
14	Phase Ped	4				14
15	Phase Ped	6				15
16	Phase Ped	8				16
17	Overlap	5		X	X	17
18	Overlap	6		X		18

NOTE CONTROL TYPE AND CONTROL SOURCE →

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 05-1663T2
DESIGNED: May 2025
SEALED: 7/15/2025
REVISED: N/A

Electrical Detail - Sheet 3 of 3

DOCUMENT NOT CONSIDERED FINAL UNLESS ALL SIGNATURES COMPLETED

<p>Prepared in the Offices of:</p>  <p>750 N. Greenfield Pkwy, Garner, NC 27529</p>	<p>SR 1006 (Old Stage Road) at SR 2736 (Rock Service Station Road) and Back Field Road</p> <p>Division 5 Wake County Fuquay-Varina</p> <p>PLAN DATE: June 2025 REVIEWED BY:</p> <p>PREPARED BY: Zarrar Zafar REVIEWED BY:</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>REVISIONS</th> <th>INIT.</th> <th>DATE</th> </tr> </thead> <tbody> <tr><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td></tr> </tbody> </table>	REVISIONS	INIT.	DATE										<p>SEAL</p>  <p>DocuSigned by: <i>Todd Joyce</i> 07/24/2025</p> <p>SIG. INVENTORY NO. 05-1663T2</p>
REVISIONS	INIT.	DATE												