

MAXTIME ALTERNATE PHASING ACTIVATION DETAIL

To run alternate phasing, select a Pattern that is programmed to run Overlap Plan 2 and Detector Plan 2. A Pattern can be selected through the scheduler or manually by changing the Operational Mode.

Web Interface
Home >Controller >Detector Configuration >Vehicle Detectors

PHASING	OVERLAP PLAN	VEH DET PLAN
ACTIVE PLAN REQUIRED TO <u>RUN DEFAULT PHASING</u>	1	1
ACTIVE PLAN REQUIRED TO RUN ALTERNATE PHASING	2	2

ALTERNATE PHASING CHANGE SUMMARY

THE FOLLOWING IS A SUMMARY OF WHAT TAKES PLACE WHEN OVERLAPS 3 AND 4, AND VEHICLE DETECTOR PLAN 2 ACTIVATE TO CALL THE "ALTERNATE PHASING":

VEH DET PLAN 2: Reduces delay time for phase 7 call on loop 7A to 0 seconds.

Front Panel
Main Menu >Controller >Coordination >Patterns

Web Interface
Home >Controller >Coordination >Patterns


Pattern	Veh Det Plan	Overlap Plan
*	2	2

THIS ELECTRICAL DETAIL IS FOR
THE SIGNAL DESIGN: 11-1451
DESIGNED: May 2026
SEALED: 5/29/2026
REVISED: N/A

ELECTRICAL DETAIL SHEET 4 OF 4


**ELECTRICAL AND PROGRAMMING
DETAILS FOR:**

Prepared for the Offices of:

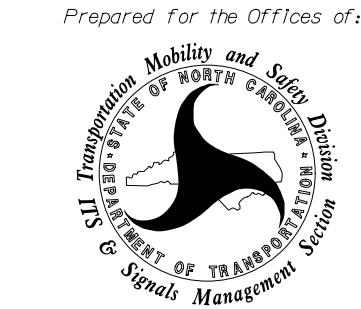

Division 11		Caldwell County		Hudson	
PLAN DATE: May 2026		REVIEWED BY: B. Roth-Roffy			
PREPARED BY: R.L. Aristondo		REVIEWED BY: T.M. Moody			
REVISIONS		INIT.		DATE	

DOCUMENT NOT CONSIDERED
FINAL UNLESS ALL
SIGNATURES COMPLETED

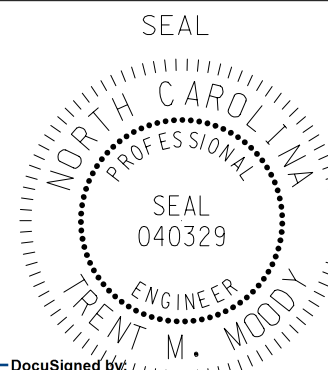

DocuSigned by:  5/29/2020
45EA10483670450
SIGNATURE DATE
SIG. INVENTORY NO. 11-1451