
(program controller as shown below)

- 1. FROM MAIN MENU PRESS '2' (PHASE CONTROL), THEN '1' (PHASE CONTROL FUNCTIONS). SCROLL TO THE BOTTOM OF THE MENU AND ENABLE ACT LOGIC COMMANDS 1, 2, AND 3.
- 2. FROM MAIN MENU PRESS '6' (OUTPUTS), THEN '3' (LOGICAL I/O PROCESSOR).

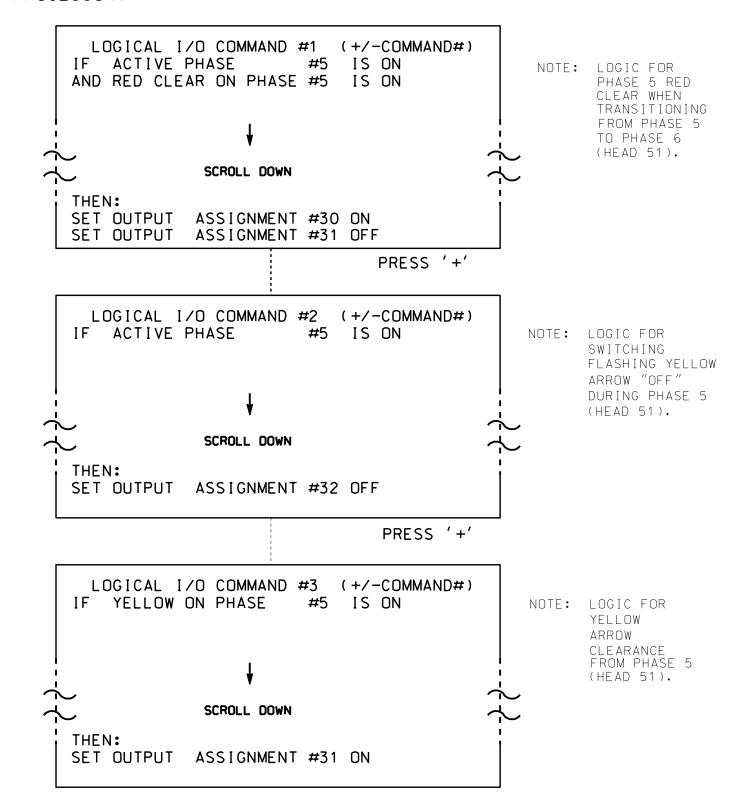

LOGIC I/O PROCESSOR PROGRAMMING COMPLETE

OUTPUT REFERENCE SCHEDULE OUTPUT 30 = Overlap C Red OUTPUT 31 = Overlap C Yellow OUTPUT 32 = Overlap C Green OUTPUT 34 = Phase 5 Green


Note: All outputs shown above have been remapped. See sheets 3 and 4 of this electrical detail.


PROJECT REFERENCE NO. Sig. 2.2 R-2915A


OVERLAP PROGRAMMING DETAIL

(program controller as shown below)

FROM MAIN MENU PRESS '8' (OVERLAPS). THEN '1' (VEHICLE OVERLAP SETTINGS).

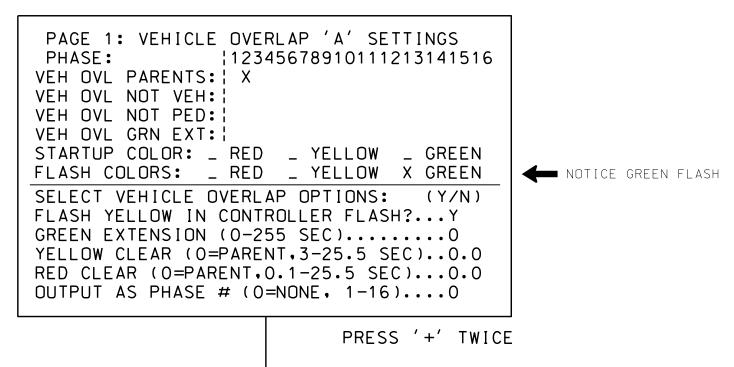

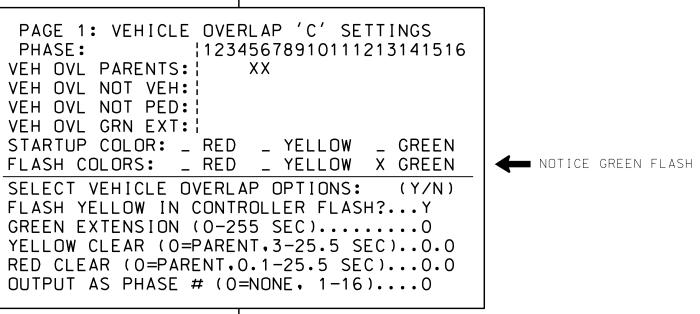

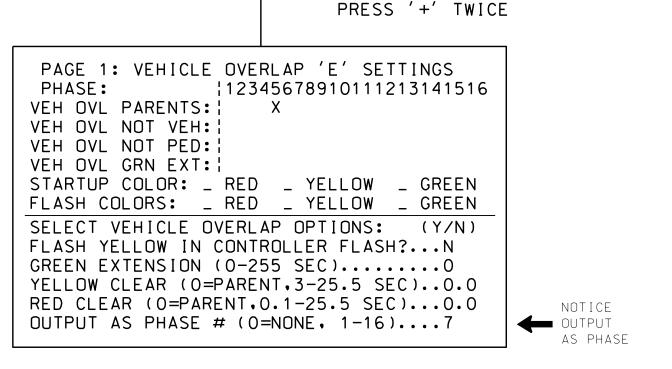

OVERLAP PROGRAMMING COMPLETE

THIS ELECTRICAL DETAIL IS FOR THE SIGNAL DESIGN: 11-1174 T1 DESIGNED: May 2015 SEALED: 5/22/2015 REVISED: N/A

